

IB Physics Investigations

Volume 2 (Higher Level)



COPY MASTERS

(For use with the IB Diploma programme)

(Fourth edition)



Author: Gregg Kerr

Series editor: David Greig

Copyright © S.T.A.R. Australia 2014
Produced by: 'Science Teaching And Resources' ('S.T.A.R.')

Published by: IBID Press, Box 9, Camberwell, 3124, Victoria. Australia

Library Catalogue: Billiet Paul

1. Biology Investigations
2. International Baccalaureate

Series Title: Investigations for IB Sciences

First published in 1999. Fourth edition published 2014

ISBN: 978 0 9925224-5-2



The contents of the volumes in this series are continually being improved and are subject to change without notice. They have been revised and reprinted to incorporate recent IBO syllabus changes (© IBO 2013). All possible endeavours have been made by the publishers to ensure that the contents of this resource are correct and appropriate. However, the Publishers accept no responsibility for any errors made by the authors. The contents and materials are solely the responsibility of the authors.

Although every care has been taken in preparing and trialling these investigations, absolutely no responsibility whatsoever can be accepted for any damage or accident which may occur for whatever reason during the conduct of any of these activities.

These Investigations have been developed independently of the International Baccalaureate (IB) Organisation. This publication is in no way connected with, or endorsed by, the IB.

Publishing Information

This volume of practical Investigations is part of a series of resources for IB Sciences produced by IBID Press.

More information about this series and other IB products may be obtained from:

IBID Press, PO Box 9, Camberwell, Victoria, Australia 3124

Phone: +61 3 9747 0840 Fax: +61 3 9747 0840

URL: <www.ibid.com.au>

Copyright Information

Copying for educational purposes

All rights are reserved except under the conditions described in the Copyright Act 1968 of Australia and subsequent amendments. A strict **condition of sale** is that this material may be copied for use **only** within the purchasing school. Apart from that, no part of this publication may be modified, reproduced, stored or transmitted in any form or by any means, without the prior written permission of the Publisher.

Foreword

This fourth edition of these Volumes has been revised and published as part of a series of IBID Science Investigations in order to meet the needs of staff and students doing Group 4 subjects (Physics, Chemistry and Biology) as part of the IB Diploma Programme. Feedback is welcome and can be directed through the Publisher's website <www.ibid.com.au>

Author Profile

Gregg Kerr obtained a Bachelor of Education from Charles Sturt University, Wagga Wagga in Australia, and a Master of Science in Education from the State University of New York. He has taught Physics and Chemistry at schools in Australia, Germany, Hong Kong, Brunei, Thailand and China.

He has been a member of the IB Physics Subject Committee, he is presently a Senior Moderator of IB Diploma Internal Assessment and a Senior Examiner in IB Diploma Physics (HL/SL Paper 2). Gregg is an IB Diploma Physics Workshop Leader in the Asia-Pacific region (IBAP). He is currently an educational consultant and writer of educational materials, particularly to support the International Baccalaureate Diploma, and edition 4 of his textbook was released in July 2014.

Acknowledgements

The ideas for these investigations have been gleaned from a lifetime of teaching Coordinated Sciences, Chemistry and Physics in the classroom. I wish to thank my colleagues and students in International and IB schools throughout the world for their creative suggestions over the years. In particular my colleagues and students at the International School of Düsseldorf (Germany), Li Po Chun United World College (Hong Kong), the Kilmore International School (Australia), Wesley College at Glen Waverley (Australia), the International School of Brunei (Brunei Darusaalam), Prem Tinsulanonda International School in Chiang Mai (Thailand), the Utahloy International School Guangzhou (China), Shanghai American School (China) and the Chinese International School, Hong Kong (SAR).

I am also grateful to the series Editor David Greig for his advice and assistance in the preparation of successive editions of these Volumes of Investigations.

Most of all I thank my wife Ofelia and my daughter Angelica for their compassion and understanding during this process that never seemed to end.

Cover image from <<http://www.nasa.gov>>

Health and Safety Warnings and Symbols

Laboratories can be hazardous places. Often scientists, Science teachers and students handle equipment and materials which can be dangerous to their health and safety. Throughout these Volumes of Investigations you will see a number of symbols and warnings which will represent particular hazards. For each of these we will briefly describe the hazard and indicate what precautions you should take to avoid damage and/or what responses are appropriate. In all cases, of course, you should seek advice and assistance from the teacher or laboratory technician.

A biohazard is any organism or body fluid which could possibly cause illness or disease in your body. This particularly includes micro-organisms.

A flammable substance is one which will readily burn in air. It may be a solid, liquid or gas. If you are using such a substance it is vital that there are no sparks or naked flames which could ignite it. It is vital that you know what to do in the event of fire. This may include the use of fire extinguishers and evacuation procedures.

A radioactive substance is one which emits particles or 'radiation'. This radiation is known to cause damage to cells and may also be cancer causing. If you are using radioactive substances it is vital that you wear protective clothing, use metal tongs and listen carefully to instructions given by your teacher or laboratory technician.

Sharp instruments are often used in Science and particularly in Biology, to cut sections through plant or animal tissue. These instruments, which include scalpels and razor blades are very sharp and obviously will also cut through your tissues. When using these instruments it is essential that you always cut away from your body and preferably onto a cutting board. It is also important to be very careful when carrying these instruments and also ensure they are placed on the workbench in a safe place.

When certain chemicals are mixed together they can become explosive. An explosion is caused by rapid expansion of gas in a confined space and can be very dangerous. Sometimes it is important to ensure that the space is not confined and sometimes it is important to conduct these reactions behind a protective screen.

It is often necessary to protect your hands from heat, chemicals or other hazards and gloves will be made available for these situations. The type of glove needed will depend on the particular hazard and your teacher will provide further advice. In some cases you will be advised to dispose of the gloves after use and in other cases to wash and dry them carefully.

Your eyes are the most vulnerable and easily damaged external part of your body. This is why they must be protected if you are using solids and liquids which could get into them. Whenever you are heating things or using corrosive liquids, and in other cases as instructed by a teacher, you should wear safety goggles. You should also do this if possible even if you wear spectacles to correct your vision. In the event that something gets in your eye you should immediately make use of the eyewash facility in the laboratory as instructed and then notify your teacher.

Some chemicals, which are used in a laboratory, are *corrosive*. This means that they can react with and 'eat away' materials like the bench, your books, clothing and skin. It is essential that you handle these materials, which are usually liquids, with care. Always tip from the container with the label uppermost, never add water to concentrated acid and never have your face anywhere near the container. It is usually advisable to wear both safety goggles and gloves. If protective aprons are available you should also wear one.



As a general rule, 12 or 24 volt *electrical* appliances are unlikely to cause serious injury. However, 'mains' voltage (110V or 240V or higher) can cause serious injury or death. The appliances you use should be regularly tested and certified safe. If you notice sparks or smell insulation burning, turn the power off immediately and notify staff. Be particularly careful not to allow water to get into any appliance as it may cause a short circuit.



Some chemicals are *poisonous* and should not be inhaled or ingested. It will be necessary to use a fume cupboard when using poisonous gases or volatile liquids. They could make you very ill and you may require medical assistance. It is vital that you listen to instructions, follow them carefully and notify your teacher immediately if there is accidental exposure to poisonous or toxic substances.



Lasers are very intense beams of light. They are capable of causing burns to the skin and permanent damage to the eyes. It is essential that these are only ever used under the supervision of a teacher and in a situation where people can not see the beam directly or when it is reflected from a shiny surface. Sunglasses or welding masks do not provide sufficient protection and special 'laser glasses' must be used where there is a risk.



UV light is harmful to skin and especially eyes. Do not expose these areas directly to a UV light source. If it is not avoidable, sunscreen can be applied to the skin and special goggles should be worn.



There are other *dangers* or hazards as well, for example carrying heavy or hot objects. This may also include chemicals which are not poisonous but which may smell unpleasant or irritate the skin. Whenever you see this icon more information will be provided in the adjacent text about the specific danger.



In Science and particularly in Biology, there are situations when ethics and ethical issues need to be considered in experimental work. This is particularly the case when human volunteers are being used, not just for experimental work but also when they are being surveyed to collect personal information. In these cases a consent form should be used to explain the nature of their involvement and to get their approval. Ethics will also be an issue whenever animals are used in experimentation or when they are collected in the field. They should not be exposed to conditions that are outside their natural range of tolerance and wild animals must be released back where they were sampled with the minimum of disturbance.



The environment and environmental issues become important when hazardous substances are used or produced during an experiment. Their disposal must result in minimal impact on the environment. In field work the protocol that is used must reflect practices that minimise the impact of the investigation on the site.



IMPORTANT NOTE

Although every care has been taken in preparing and trialling these investigations, absolutely no responsibility or liability whatsoever can be accepted for any damage or accident which may occur for whatever reason during the conduct of any of these activities. The Safety Warnings and Icons are advisory only and are not intended to be exhaustive or exclusive. It is a strict condition of sale that safety in the laboratory is the responsibility of the staff and students doing the laboratory work and not the author, editor or publisher of this work.

STANDARD LEVEL

Investigation 1A – ERROR IN MEASUREMENT	1
Investigation 2A – INVESTIGATING FALLING MOTION	7
Investigation 2B – MOTION OF A FALLING BODY	9
Investigation 2C – TERMINAL SPEED IN A FLUID	13
Investigation 2D – THE RANGE OF A PROJECTILE	15
Investigation 2E – NEWTON’S SECOND LAW	17
Investigation 2F – STATIC AND KINETIC FRICTION	22
Investigation 2G – STATIC EQUILIBRIUM	27
Investigation 2H – PROPULSION USING ELASTIC POTENTIAL ENERGY	29
Investigation 2I – ENERGY AND IMPULSE	30
Investigation 2J – INVESTIGATION CIRCUS	32
Investigation 3A – CONSERVATION OF THERMAL ENERGY	33
Investigation 3B – SPECIFIC HEAT CAPACITY OF A METAL	35
Investigation 3C – LATENT HEAT OF FUSION OF ICE	36
Investigation 3D – THE UNIVERSAL GAS CONSTANT DETERMINATION	38
Investigation 3E – BOYLE’S LAW INVESTIGATION (data-based)	39
Investigation 3F – CHARLES’ LAW AND PRESSURE LAW (data based)	41
Investigation 3G – ZARTMANN INVESTIGATION OF THE SPEED DISTRIBUTION IN GASES	43
Investigation 4A – THE SIMPLE PENDULUM AND AN OSCILLATING SPRING	46
Investigation 4B – WAVES IN SPRINGS	49
Investigation 4C – SPEED OF SOUND USING RESONANCE	51
Investigation 4D – SURFACE WATER WAVES IN A RIPPLE TANK	53
Investigation 4E – POLARISATION OF LIGHT	56
Investigation 4F – PROPERTIES OF REFRACTION	59
Investigation 4G – STANDING WAVES IN A STRING	61
Investigation 5A – ELECTRIC FIELD PATTERNS	62
Investigation 5B – VOLTAGE DIVIDER CIRCUITS	63
Investigation 5C – FACTORS THAT AFFECT ELECTRICAL RESISTANCE	64
Investigation 5D – OHM’S LAW	65
Investigation 5E – INTERNAL RESISTANCE OF A DRY CELL	68
Investigation 5F – THE FORCE ON A CURRENT-CARRYING CONDUCTOR	70
Investigation 6A – UNIFORM CIRCULAR MOTION	71
Investigation 7A – THE HALF-LIFE OF BEER FOAM	73
Investigation 7B – A VISIT TO A CYCLOTRON	74
Investigation 7C – A VISIT TO AN ATOMIC ENERGY FACILITY	76

Options

Investigation 14A (Option B) – MOMENT OF INERTIA	79
Investigation 14B (Option B) – TRANSLATIONAL EQUILIBRIUM	82
Investigation 14C (Option B) – BIOMECHANICS AND THE MUSCULO-SKELETAL SYSTEM	84
Investigation 15A (Option C) – FOCAL LENGTH OF A CONVERGING LENS	87
Investigation 15B (Option C) – THE REFRACTING TELESCOPE	89
Investigation 16A (Option D) – HERTZPRUNG-RUSSELL DIAGRAM	91
Investigation 16B (OptionD) – STELLAR EVOLUTION	93

HIGHER LEVEL

Investigation 9A – THE PENDULUM	95
Investigation 9B – WHITE LIGHT INTERFERENCE & DIFFRACTION	96
Investigation 9C – ANALYSIS OF EMISSION SPECTRA	98
Investigation 9D – DOUBLE SLIT INTERFERENCE AND DIFFRACTION GRATINGS	101
Investigation 9E – SPACING BETWEEN CD AND DVD TRACKS	103
Investigation 9F – THE BEHAVIOR OF MICROWAVES	104
Investigation 10A – ELECTRONS ON STICKY TAPE	106
Investigation 10B – DETERMINATION OF THE UNIVERSAL GRAVITATIONAL CONSTANT, G	107
Investigation 11A – LENZ'S LAW	110
Investigation 11B – CHARGING AND DISCHARGING CAPACITORS	111
Investigation 12A – THE PHOTOELECTRIC EFFECT (and measurement of Planck's Constant)	113
Investigation 12B – HALF-LIFE, RANGE AND ENERGY OF ALPHA PARTICLES (Data based)	114

Options

Investigation 14D (Option B) – PRESSURE AND PROPERTIES OF A FLUID	115
Investigation 15C (Option C) – A VISIT TO A LOCAL HOSPITAL	117

THE GROUP 4 PROJECT	123
---------------------	-----

TEACHING NOTES for all INVESTIGATIONS	TN1
---------------------------------------	-----

Name _____ Date _____ Class _____ Time: 90 mins


You may be assessed for school-based assessment on some of the following investigations.

This first investigation gives you a format so that you can examine units and uncertainties.

BACKGROUND


The following set of investigations will help you to understand the problems associated with errors. You will be required to use a set of vernier calipers and a micrometer screw gauge.

- The reading on the micrometer screw gauge below is 3.35mm. You can see that the thimble is to the right of the 3 mm mark but you cannot see the 3.5 mm mark on the main scale. The vernier thimble scale is close to the 35.

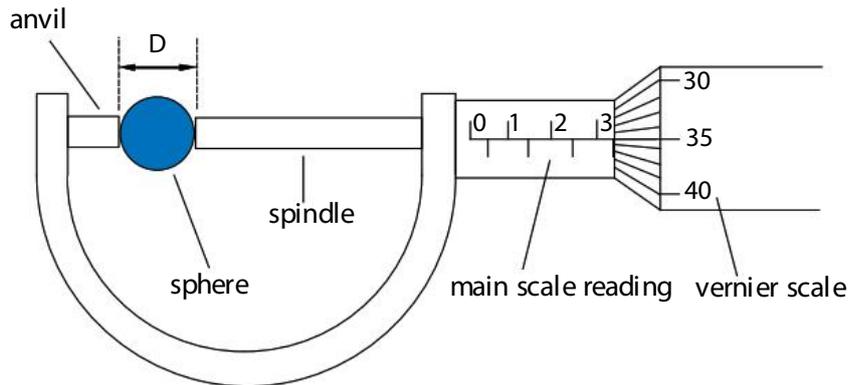

- The reading on the vernier calipers below is 1.95cm. The vertical line showing zero on the vernier scale lies between 1.9cm and 2.0cm. The vertical graduation on the vernier scale that matches the main scale best is the fifth graduation.

Thus, the reading is 1.95cm.

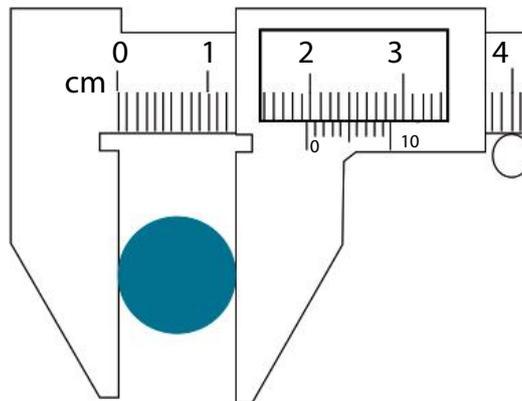

Part 1**AIM**

To determine the time for normal inhalation and exhalation of air in human respiration.

EQUIPMENT

A timing device.

DESIGN

1. Check your timing device for zero error.
2. Record the time taken for 10 complete breaths and complete the following:

DATA

Time for 10 breaths = _____ s

Zero error of the timing device = _____ s

Absolute time for 10 breaths = _____ s

Average time for one breath = _____ s

Part 2**AIM**

To measure the mass of a coin.

EQUIPMENT

Digital or a triple beam balance, one coin.

DESIGN

1. Set up the mass measuring device on a level surface.
2. Record the limit of reading of the scale on the balance.
3. Check the balance for zero error.
4. Record the mass of the coin and complete the following.

DATA

Limit of reading of the scale of the balance = _____ g

Mass of the coin = _____ g

Zero error = _____ g

Mass of the coin = _____ g

DATA PROCESSING

The absolute error = _____ g

Calculate the relative and percentage errors in your measurement:

Relative error = _____

Percentage error = _____

The mass of the coin was found to be _____ (value) \pm _____ (uncertainty) _____ (unit)

Part 4

AIM

To determine the diameter of a coin.

EQUIPMENT

Coin, vernier calipers

DESIGN

1. Record the limit of reading of the scale.
2. Close the jaws of the vernier calipers and check for zero error.
3. Adjust the jaw separation until the coin sits firmly in the jaws.

DATA

Limit of reading of the vernier calipers = _____

Vernier caliper reading = _____

Diameter of the coin = _____

Zero error = _____

DATA PRESENTATION AND PROCESSING

The absolute error of a single measurement = _____

The absolute diameter of the coin = _____

CONCLUSION

The diameter of the coin = _____ ± _____

Name _____ Date _____ Class _____ Time: 90 mins

In this investigation you may be assessed using school-based criteria.


AIM

To determine the acceleration, due to gravity, of a falling ball, using data from a photo taken with a stroboscope.

BACKGROUND

The following investigation allows you to calculate instantaneous velocities and the acceleration of a falling ball, using the strobe photo provided. The distance between each windowsill is 3.15 m. Three photographs were taken each second.

A schematic diagram of the displacement of a falling object over time is shown.

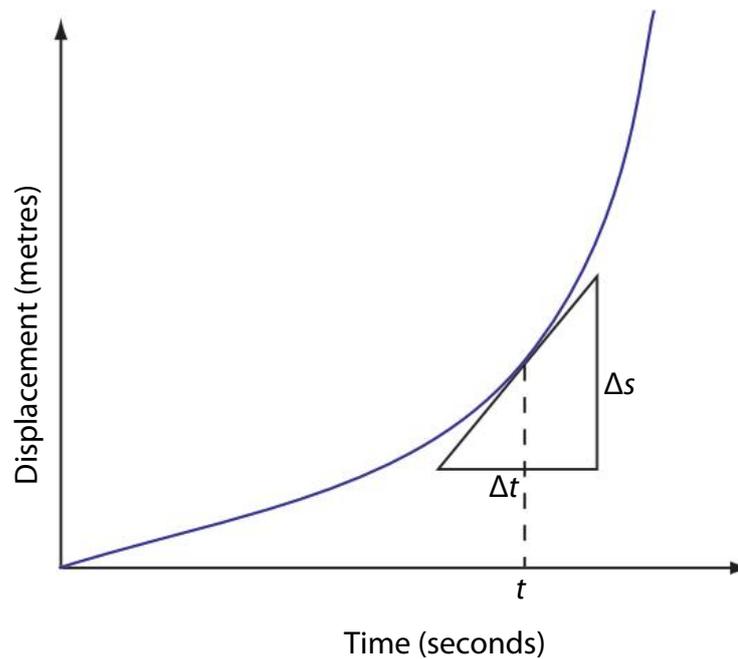

By constructing the tangent to a point, the instantaneous velocities for a certain time (t) can be calculated:

$$v_{\text{inst}} =$$

EQUIPMENT

Stroboscope photo (next page), graph paper, ruler

DESIGN

Examine the adjacent strobe photo.

Measure and record the distances of each falling ball position from the original starting position in the strobe photo (in centimetres and metres).

DATA PRESENTATION AND ANALYSIS


Calculate the real distances of the balls from the information given in the background section.

Process and present your data in a suitable way to find the acceleration due to gravity.

CONCLUSION

Comment on the value obtained compared to the theoretical value for the acceleration of a falling object.

(use extra paper as necessary)

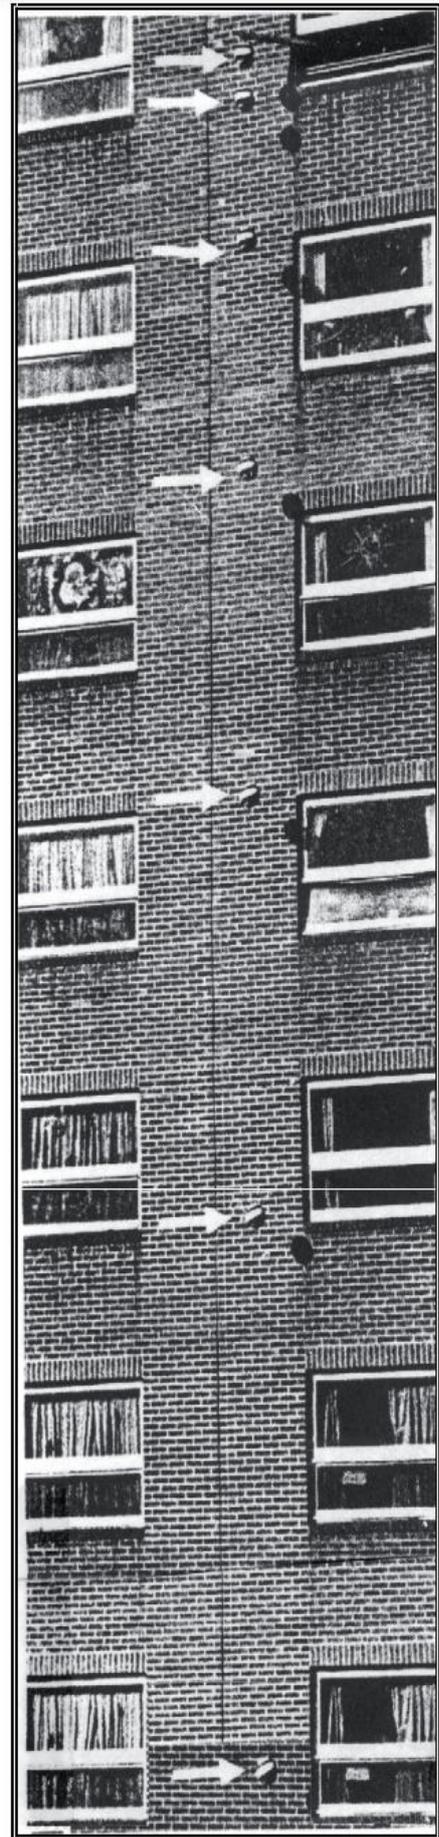

Name _____ Date _____ Class _____ Time: 40 mins

You may be assessed using school-based criteria.

BACKGROUND

In this investigation, you will use a graphical method to determine the relationship that exists between the displacement of a free fall object and the time of flight. You will also determine the acceleration due to gravity of the object, and the degree of uncertainty in your measurement.

Kinematics tells us that:

$$s = ut + \frac{1}{2}gt^2$$

If the initial velocity u is zero, then a graph of the displacement s plotted against the time squared (t^2) will be a straight line passing through the origin. The slope of the graph will equal half of the acceleration due to gravity ($\frac{1}{2}g$). If the initial velocity is not equal to zero, then the line of best fit will cut the y -intercept at some point.

There are a number of experimental designs with different timing devices that can be used. The simplest case is a metal-grooved inclined plane in which a marble rolls.

In this case; $s = ut + \frac{1}{2}g \sin\theta t^2$

You could use the strobe photo from the previous investigation or even a video camera as a timing device. Three more designs that have a high degree of precision and accuracy are illustrated.

Choose your design. Perhaps a number of designs can be analysed by different groups.

EQUIPMENT

Free fall apparatus, ball-bearing, impact switch, electric timer, metre rule, 12V a.c. supply. (Set-up 1)

OR

Ticker tape timer, switch, a small weight, adhesive tape, retort stand, metre rule, 12V a.c. supply. (Set-up 2)

OR

2 photo-gates, digital timer, small mass, retort stand, metre rule, 12V a.c. supply. (Set-up 3)

(as shown on next page)

OR


Grooved inclined plane, spherical ball, timing device, metre rule.

OR


some other equipment

AIM

To determine the acceleration due to gravity of an object using the _____ method.

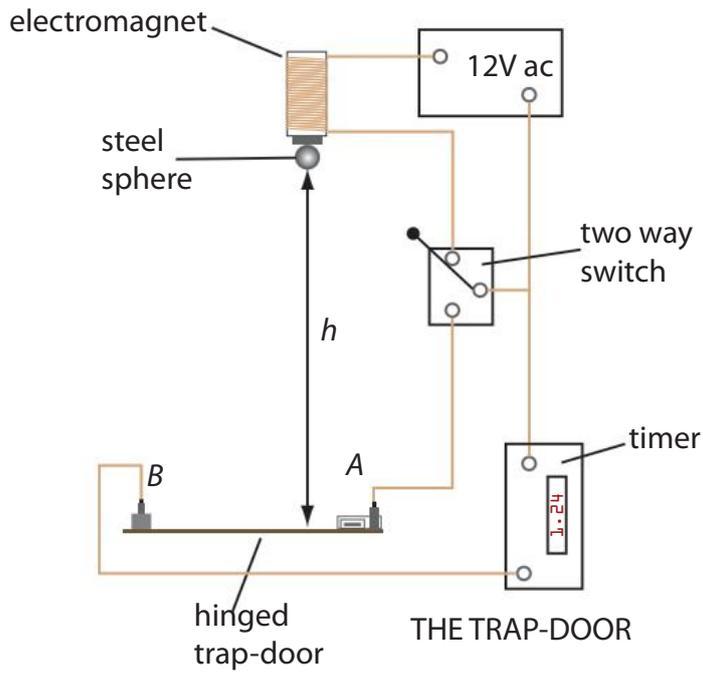

Set-up 1

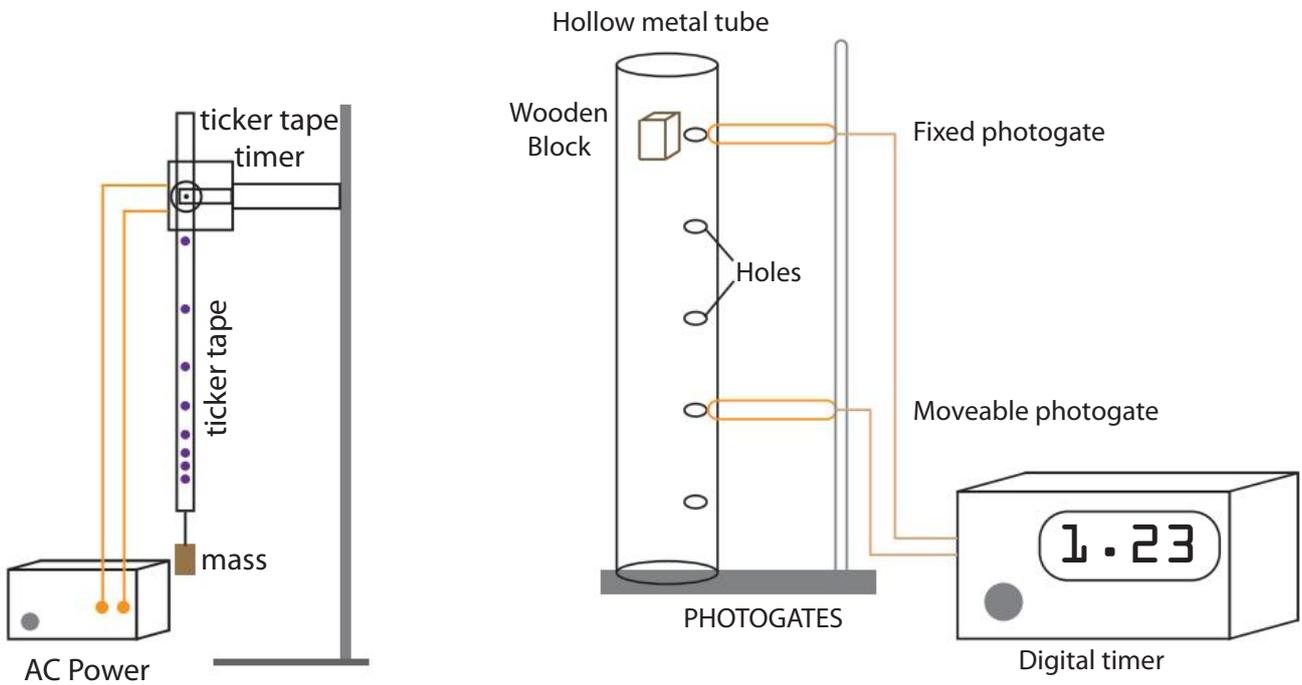

Set-up 2

Set-up 3

DATA COLLECTION (insert your data table here)

DATA PRESENTATION and ANALYSIS

CONCLUSION and EVALUATION

Evaluate your procedure and discuss any modifications you would use in a future design.


(Use and attach extra paper as required).

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school-based criteria:

BACKGROUND

This investigation allows you to predict where a sphere rolled down an incline plane will hit the “bull’s eye” of a target.

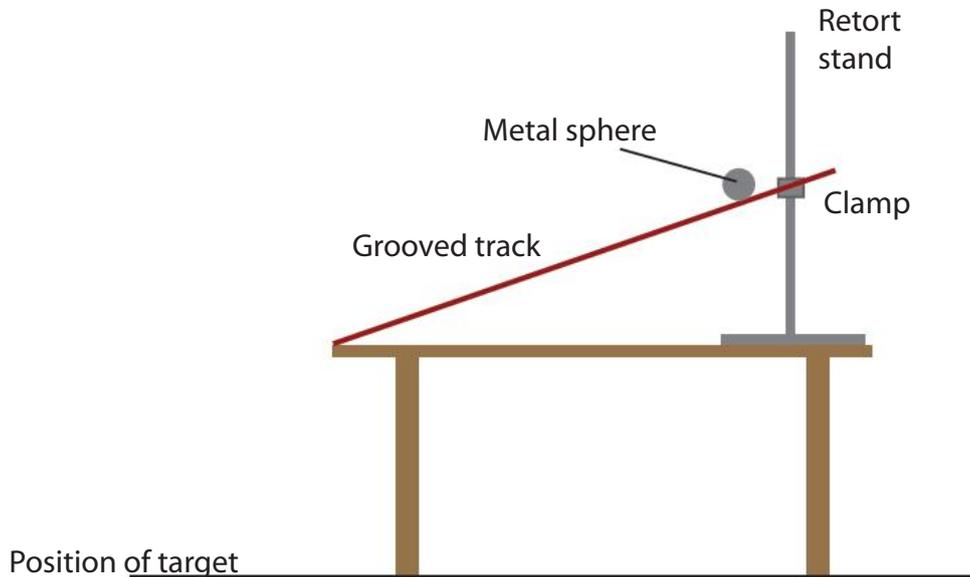

MATERIALS


Incline plane, timing device, metre rule, carbon paper, ‘bull’s eye’ target, other hardware.

PROCEDURE

1. Your first task before carrying out the investigation is to process data in order to determine the position where a sphere rolled down your incline plane will hit the ground.
2. You can roll the sphere down the incline plane but you must catch the sphere before it hits the ground!
3. Once you have calculated the relevant range and position where the sphere will hit the ground, take the piece of carbon paper and place it on the ground in the relevant location. Place the target, provided on the next page, on top of the carbon paper.
4. Ask your partner to help you to roll the ball down the incline plane three times and observe.

Give your calculations and the target to your teacher for assessment.

DATA COLLECTION

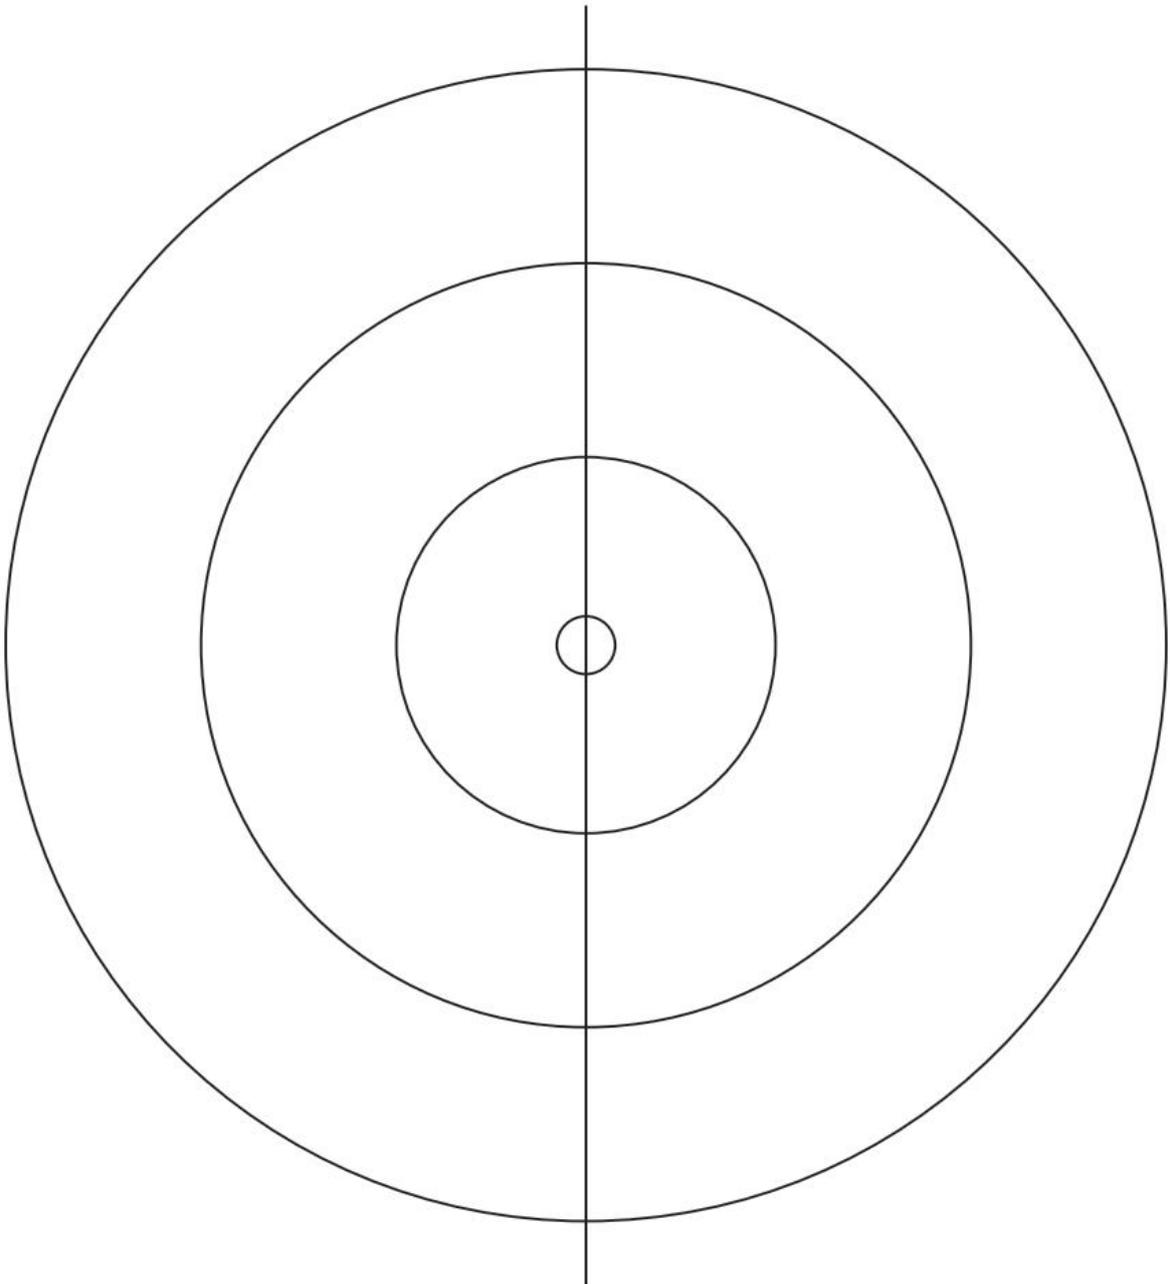

DATA ANALYSIS


Do your calculations in the space provided hereunder, use extra paper as necessary.

Name _____ Date _____ Class _____ Time: 2 hours

You may be assessed using the school-based criteria. IB assessment is not applicable at this stage of the course.

BACKGROUND

The glider moves freely without friction due to a cushion of air being blown through the air track.

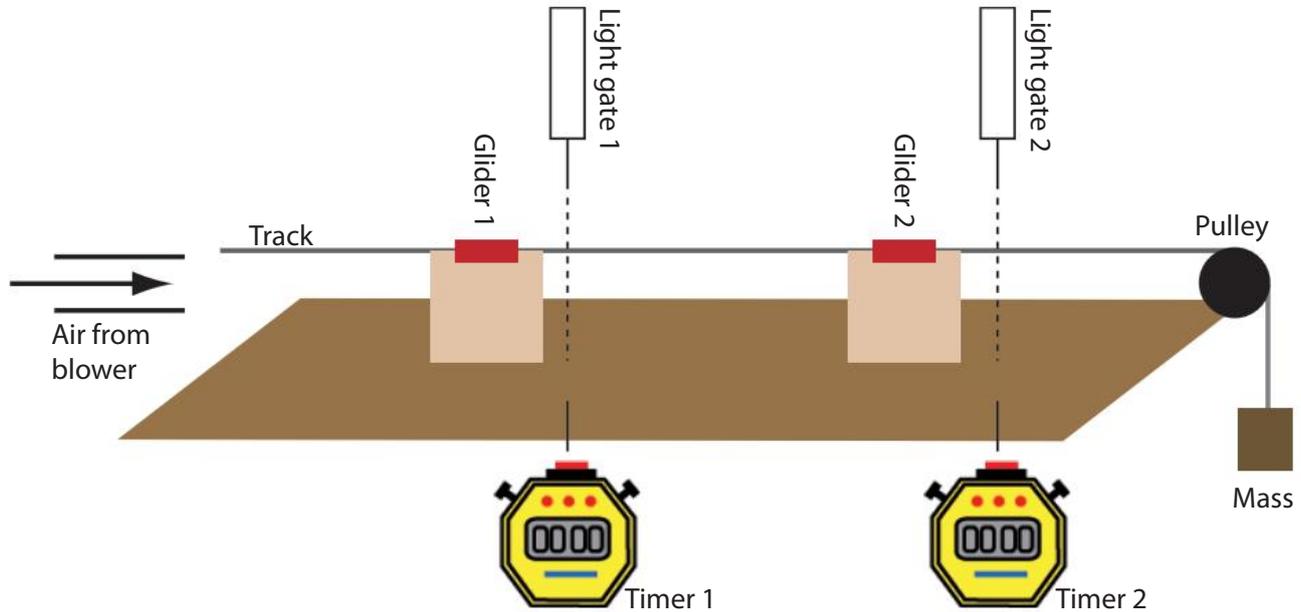


The *net accelerating force* is due to the weight of the total mass on the mass holder because the mass of the glider, and any masses on the glider, are cancelled out by the normal reaction force. While the total moving mass is constant, the total glider mass has a constant average acceleration.

By changing the net accelerating force by adding different masses to the mass holder, the average acceleration will be changed.

When the glider is released, it accelerates to the right, passing through the 2 light gates. A scalar timer connected to each light gate records the time taken for a card mounted on the glider to pass through the light gate. The time recorded at the two light gates is used to calculate 2 different speeds of the glider, and hence the acceleration of the glider may be found.

Another design for this investigation is shown below using a ticker tape timer (accelerometer).

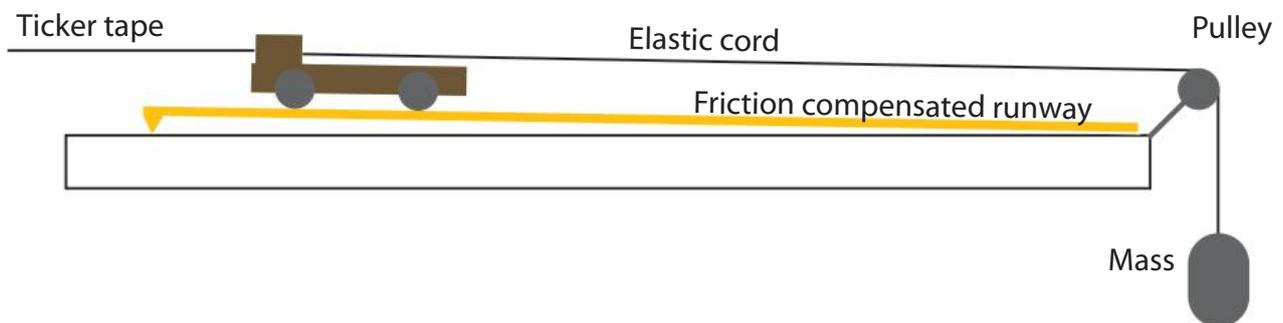

You could also use a motion sensor in a data-logging investigation.

AIM

To confirm the relationship between the net force applied to a body and the body's acceleration.

EQUIPMENT

Linear air track with glider, 2 light gates, 2 scalar timers, 9×0.01 kg masses.

OR

Trolley inclined to overcome friction, ticker tape timer, 9×0.01 kg masses.

OR

A computer multi-processor software program.

PRELIMINARY MEASUREMENTS

Record the mass of the glider/trolley, and the length of the card mounted on the trolley.

MASS OF GLIDER/TROLLEY = _____
= _____

TOTAL MASS OF THE SYSTEM (glider and masses) = _____

LENGTH OF THE CARD ON TROLLEY = _____
= _____

DESIGN

Part A

1. Switch on the pump for the air track. Place one 10 g mass on the hanger (giving a total of 20 g, since the hanger has a mass of 10 g), and the remaining 4 masses on the glider.
2. Gently slide the glider to the left past the light gates. Switch on the scalar timers and reset them to zero readings. Release the glider.
3. Record the times on the 2 scalar timers, t_1 and t_2 , and the accelerating mass in the data collection table provided.
4. Do three more trials with 30 g on the hanger, discard any inconsistent data and average the remaining accelerations. Record any other measurements needed to determine the two speeds and the acceleration of the glider.
5. Record the accelerating force and the average acceleration in another table, leaving space for several more sets of data.
6. Do another four runs with 40 g on the hanger.
7. Repeat for 70 g and 90 g on the hanger.
8. Determine the total accelerated mass and compare this with the measured values.

Part B

1. For the second part of the experiment, investigate the relationship between mass and acceleration by increasing the mass of the glider by 0.050 kg at a time. *The falling mass remains constant at 0.100 kg.* This increases the overall mass of the system, while the force is a constant 1.0 N.
2. Record three acceleration trials for the unloaded glider.
3. Repeat for the glider plus masses from 0.100 kg to 0.040 kg. Find the average acceleration for each trial.
4. Use the data to find a relationship between mass and acceleration.

PART B

DATA COLLECTION

Mass	Time 1	Initial velocity	Time 1	Final velocity

Acceleration

Plot the graph for Part B, Step 4.

DATA PRESENTATION AND ANALYSIS (use extra paper)

Lined writing area for the investigation.

CONCLUSION AND EVALUATION (use extra paper)

Lined writing area for the conclusion and evaluation.

Name _____ Date _____ Class _____ Time: 90 mins

In this investigation you may be assessed using school-based criteria.

AIM

To determine the coefficients of kinetic and static friction for a wooden box on a laboratory surface and to determine that the force of friction does not depend on the amount of surface area in contact with the laboratory surface.

BACKGROUND

Whenever two surfaces touch, they exert forces on each other. The ultimate source of these surface forces is the electromagnetic attraction or repulsion between the charged particles – electrons and protons – of which all matter is made. The vector sum of all the microscopic forces between the particles in the surfaces is a macroscopic force that we can measure in the laboratory.

Suppose you attached a newton balance to a block of wood in contact with a surface such as the bench top in a laboratory. You then pull on the newton balance but the object does not move because the component of the applied force parallel to the surface balances the static frictional force. As you continue to pull on the newton balance, there will be a certain applied force registered when the block just begins to move. At this point the applied force is slightly greater than the maximum static frictional force.

Experimental evidence shows that the frictional force is independent of the actual area of the two surfaces in contact, provided the surfaces in contact with each other are hard. The evidence suggests that the magnitude of the frictional force is directly proportional to the magnitude of the normal reaction force.

$$F_f \propto F_N \text{ or } F_f \propto R$$

$$F_f = \mu_s R$$


where μ_s is called the coefficient of static friction.

When a force is then applied that causes the block of wood to slide along the surface, the magnitude of the force registered on the newton balance rapidly decreases and then becomes a steady value provided the block is moved with a uniform speed. The frictional force is then given by:

$$F_f = \mu_k R \text{ where } \mu_k \text{ is called the coefficient of kinetic friction.}$$

The coefficient of static friction will always be a larger value. As an approximate guide, the coefficient of static friction between a polished wood block and polished wood surface is around 0.4 and the coefficient of kinetic friction for the same materials is 0.2. Both coefficients are dimensionless.

In this investigation, we will first determine the coefficients of static and kinetic friction between two surfaces (a wooden box and a laboratory bench), as shown in the diagram.

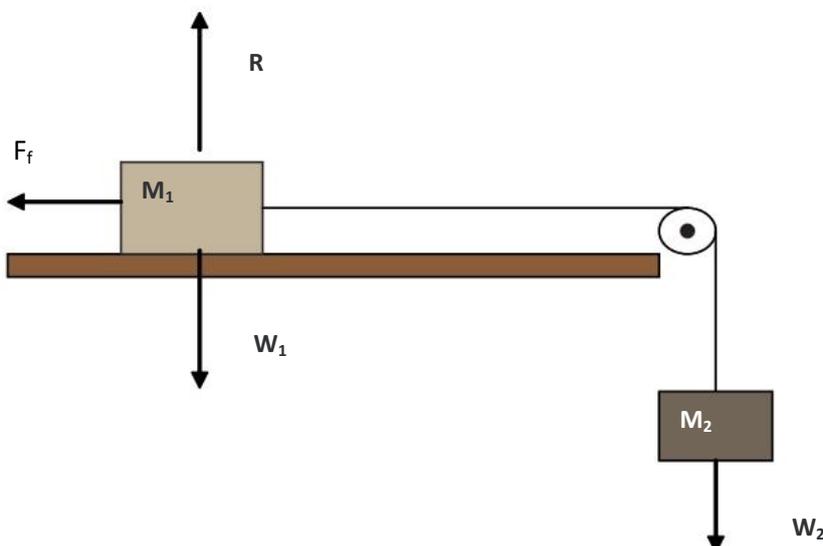


The wooden box (M_1) is placed on a laboratory bench and is connected by a string to a mass (M_2), which is hung vertically by means of a pulley. To find the magnitude of kinetic friction, we hang just enough mass on the string so that if the block is set in motion and it slides at constant speed.

$$F_f = W_2 \text{ and } R = W_1$$

We can determine the coefficient of kinetic friction by running several trials and calculating the ratio of the masses for each trial.

The coefficient of static friction can be determined in much the same way. In this case we leave the block at rest and look for that hanging mass which just starts the block sliding.

There is a second way of determining the coefficient of static friction. Refer to the diagram below. You can put the wooden box on a plank and raise one end of the plank so that it makes an angle θ with the horizontal. When the angle is large enough, the block will slide down the incline.

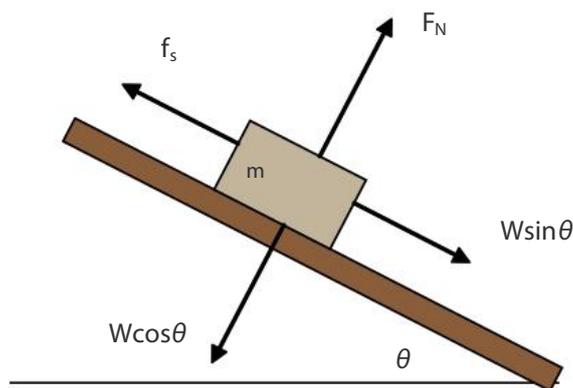

At an angle just before the block begins to slide, the forces are still balanced and we have

$$F_f = W \sin \theta \quad \text{and} \quad R = W \cos \theta$$

PROCEDURE

1. Set up the apparatus as shown in the first diagram.
2. Record the mass of a wooden box.
3. Wipe clean the surfaces of the wooden box and the laboratory bench.
4. Determine the mass that needs to be added so that the system moves at constant speed.
5. Give the block a slight push to start it moving. If the block accelerates (speeds up), take a little mass off and try again. If the block decelerates (slows down), add a little more mass and try again.
6. Record the total hanging mass and its weight.
7. Repeat the above process, adding 100 grams to the wooden box for each new trial, for a total of six trials.
8. To test the hypothesis that the force of friction is independent of the surface area in contact, repeat the above using the narrow face of the wooden box.
9. Use the same set-up as in the kinetic friction experiments, with the wide face of the wooden box down. This time, however, determine what hanging mass is necessary to just start the block moving without a push.
10. Design an investigation to find the coefficient of static friction using the wooden box on an incline plane.

DATA COLLECTION

Mass of wooden box (g): _____

Kinetic Friction – Flat Face

Trial	Mass in box	Total Mass (m_1)	Normal Force (R)	Hanging mass (m_2)	Friction Force (F_f)	μ_k
1						
2						
3						
4						
5						
6						

Average μ_k : _____

Uncertainty: _____

Kinetic Friction – Narrow Face

Trial	Mass in box	Total Mass (m_1)	Normal Force (R)	Hanging mass (m_2)	Friction Force (F_f)	μ_k
1						
2						
3						
4						
5						
6						

Average μ_k : _____

Uncertainty: _____

Static friction table

Mass of block (g): _____

Mass in box	Total Mass (m_1)	Normal Force (R)	Hanging mass (m_2)	Average hanging mass
			1.	
			2.	
			3.	
			4.	
			1.	
			2.	
			3.	
			4.	
			1.	
			2.	
			3.	
			4.	
			1.	
			2.	
			3.	
			4.	
			1.	
			2.	
			3.	
			4.	
			1.	
			2.	
			3.	
			4.	

DATA PRESENTATION AND ANALYSIS

Plot a relevant graph to determine the coefficient of static friction.

Name _____ Date _____ Class _____ Time: 1 hour

In this investigation you may be assessed using school-based criteria.

BACKGROUND

Three non-parallel (concurrent) forces acting in the same plane must intersect at a single point if they are in equilibrium. You will investigate the equilibrium of three such forces in the first part of this investigation.

When a body is in translational equilibrium, it must be either at rest or moving with constant velocity. It has a linear acceleration of zero. This means that the resultant external force must be zero. In addition, for the body to be in rotational equilibrium the sum of the torques of all the individual forces must be zero.

AIM

To gain an understanding of balanced forces in situations of static equilibrium when two or more forces act through a point in the system.

EQUIPMENT

2 pulleys mounted on a board or two pulleys attached to retort stands, thread, slotted masses, 3 sheets of white paper for each student.

METHOD

1. Set up the apparatus as shown in the diagram on the next page.
2. Hang suitable masses from the three threads and let the system come to equilibrium.
3. Displace it several times and notice the variation in the position of the point O.
4. When the system comes to rest in an approximately mean position, accurately mark the position of point O and the directions of the three forces on a piece of white paper fixed to the board.
5. The threads are several millimetres from the board—how can you improve the accuracy of marking the thread direction?

6. Test for equilibrium as follows (each student completes the analysis on her/his own sheet of white paper, which is submitted with the Lab Record).
7. Label the point of intersection of the three force vectors as O.
8. Using a suitable scale, construct a vector parallelogram with A and B. Label the vector sum of $A + B$ as C' . Draw a line to represent the original value of C, and compare with C' to determine the magnitude error and direction error.
9. Repeat the above for two more systems by changing the magnitude of coplanar forces acting on the body.

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using the following school-based criteria:

Planning

- Defining a problem or research question
- Relating the hypotheses or prediction to the research question
- Selecting relevant variables
- Designing a method with appropriate apparatus/materials
- Designing a method for the control of the variables
- Designing a method for the collection of sufficient data

Data Collection

- Collecting and recording appropriate raw data
- Presenting raw data, allowing easy interpretation
- Data processing
- Processing raw data correctly
- Presenting processed data appropriately

INTRODUCTION

This is a completely open-ended investigation.

You are given the following apparatus:

- An empty container
- Elastic bands
- Masses

Elastic potential energy can be used to propel a container along a surface, or through the air. The elastic potential energy does work on the container by applying a force to move the container through a certain distance.

In this investigation you should:

- **decide** the factors that you think will affect the distance travelled by the tub when it is projected horizontally along the runway by the elastic.
- **suggest** how quantitatively you think these factors will affect the distance travelled.
- **devise** appropriate methods to verify your quantitative predictions.
- **carry out** the investigation.
- **collect and analyse** data from your investigation.
- **evaluate** your data and the procedures you have used. **present** your report according to the guidelines given.
- **use** separate paper for your report.

Name _____ Date _____ Class _____ Time: 1 hour

BACKGROUND

You may be assessed for formative and summative criteria that are chosen by your teacher.

PLANNING

- Designing a method with appropriate apparatus/materials
- Designing a method for the control of the variables
- Designing a method for the collection of sufficient data

For the Planning skill, you are required to design a realistic procedures, include appropriate apparatus, list materials for both the control of variables and collection of data in the space provided for the method.

AIM

You are required to design an investigation to show the relationship that exists between rebound height and impulse during the interaction with the ground of three different types of bouncing balls. Results of the direct measurements of rebound height and the calculations of impulse are to be presented graphically and the behaviour of the three balls when bouncing is to be compared and discussed.

Include these headings in your report (use separate paper).

AIM

THEORY

EQUIPMENT REQUIRED (per group)

METHOD

DATA COLLECTION, PRESENTATION AND ANALYSIS

You should prepare the required data tables and show a detailed sample of each type of calculation performed for the completion of certain columns or rows of your tables

For each type of graph, use one set of axes for all three balls.

Present your results clearly and concisely, copy and use extra pages if necessary.

Name _____ Date _____ Class _____ Time: 1 hour

In this investigation you may be assessed using school-based criteria.


BACKGROUND

This investigation consists of three problem-solving exercises. You are provided with a schematic diagram for each investigation, and a problem to solve, based on the data that you collect.

For each investigation you should record any raw data and in the discussion section show the relevant analysis to solve the problem. You should also note any modifications that you make to the apparatus.

Problem 1

Set up the apparatus and determine the time taken for an object to fall from the bottom of the incline to the floor. No timing device can be used. The only measuring device allowed is a metre rule.

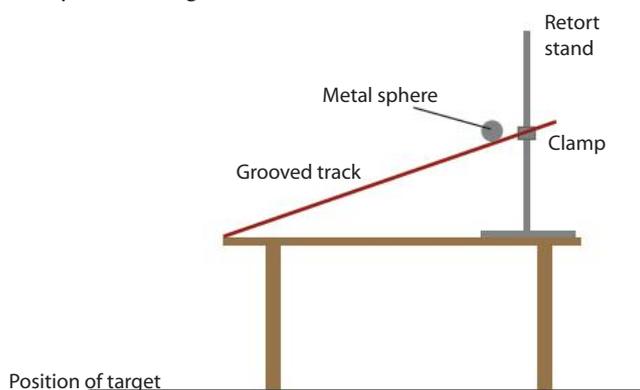


Problem 2

This investigation can be done in the laboratory. However, it may be better to use a garden hose outdoors. Determine the maximum range for a constant stream of water by varying the angle of the water outlet. Calculate the theoretical value for the angle and compare this value with the practical value.



Problem 3

You are to calculate the initial speed of an object catapulted at a stationary target. A block of clay may be handy in this investigation. You are provided with a sling shot, a clay projectile, a block of clay (possibly from the Art Department in your school), string, a straw and a cylinder in which the straw can move.

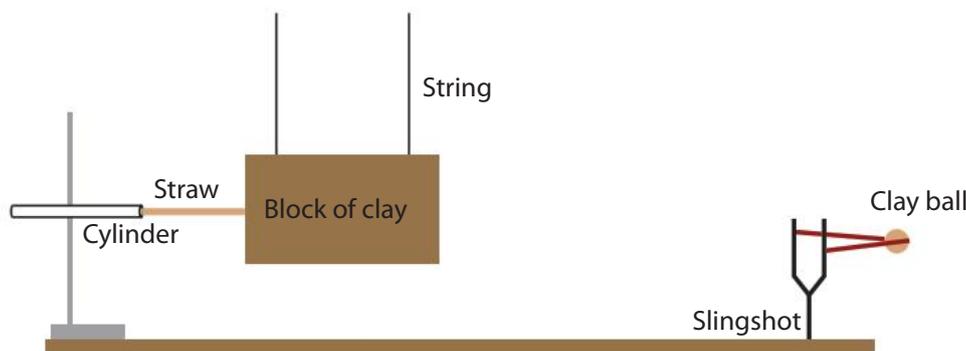

Name _____ Date _____ Class _____ Time: 1 hour

In this investigation you may be assessed using school-based criteria.

BACKGROUND

Thermal energy is transferred from a warmer body to a colder body. This transfer of thermal energy continues until the temperature of the mixture reaches a point of equilibrium at a temperature intermediate between the original temperatures. The warm water loses internal energy by transferring its thermal energy to the colder water. The colder water absorbs this thermal energy and gains internal energy.

A calorimeter is a useful piece of equipment for investigations in Thermal Physics because it allows masses at different temperatures to be mixed with minimum energy loss to the surroundings. The name of the instrument is derived from the Imperial unit, the calorie. A typical calorimeter is shown in the equipment list. Your teacher will ask you to find the specific heat capacity of the metal cup from published data.

The heating coil in the calorimeter will be used in a later investigation concerning the heating effect of an electrical current.

In this investigation, the thermal energy lost by the hot water will be determined from its drop in temperature, and the thermal energy gained by the calorimeter and the colder water will be determined from their rise in temperature.

The thermal energy lost and the thermal energy gained will be compared.

$$[\text{mass} \times \text{sp ht} \times \text{fall in temp}]_{\text{hot water}} = [\text{mass} \times \text{sp ht} \times \text{rise in temp}]_{\text{calorimeter}} + [\text{mass} \times \text{sp ht} \times \text{fall in temp}]_{\text{cold water}}$$

(Where 'sp ht' stands for the specific heat of the substances mentioned in the equation.)


Temperature measurements introduce a large systematic uncertainty relative to the other recorded measurements in this investigation. By repeating the number of trials, a greater accuracy is expected.

AIM

To determine the relationship between the thermal energy lost by a mass of water and the thermal energy gained by another mass of water when the different temperature masses of water are mixed.

EQUIPMENT

Calorimeter (see diagram over), electric jug or water bath, digital or beam balance with a sensitivity to 1 kilogram, thermometers, flasks.

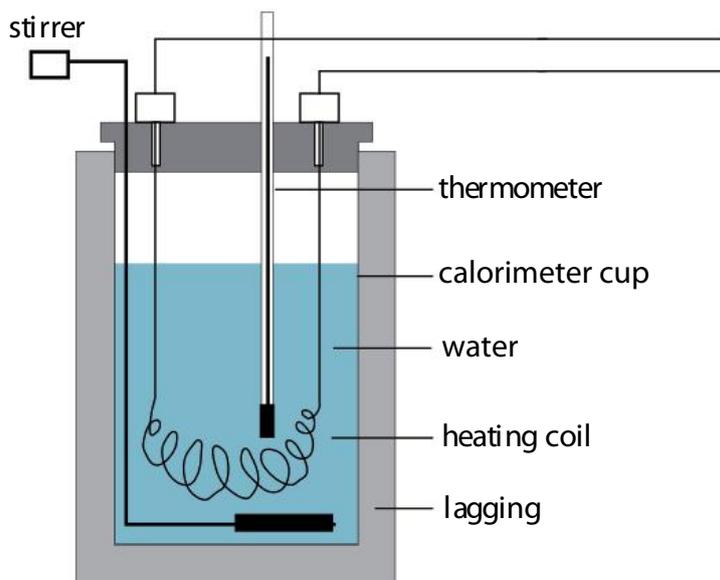

METHOD

1. Measure and record the mass of the inner cup of the calorimeter.
2. Add cold water to the cup until it is about one third full and determine the mass and temperature of the cold water.
3. Heat some water to about 80°C . Measure the temperature of the hot water and transfer it to the calorimeter until it is almost full.
4. Stir the mixture gently and record the equilibrium temperature.
5. Measure the mass of the calorimeter and its contents.
6. Repeat the above steps.

DATA COLLECTION (use extra paper)

Design and use suitable tables to record the data.

DATA PREPARATION AND ANALYSIS

Compare the difference between the thermal energy lost and the thermal energy gained.

CONCLUSION and EVALUATION

Compare the thermal energy lost and the thermal energy gained. Discuss the main errors.

Explain the Thermal Energy gain and loss using a microscopic model.

Name _____ Date _____ Class _____ Time: 40 mins

You may be assessed using the following criteria:

DATA COLLECTION

- Collecting and recording appropriate raw data
- Presenting raw data allowing easy interpretation

DATA PRESENTATION AND ANALYSIS

- Processing raw data correctly
- Presenting processed data appropriately

CONCLUSION AND EVALUATION

- Stating a valid conclusion based on interpretation of results
- Evaluating the procedure including limitations and errors
- Suggesting a modified procedure to improve the investigation

ASSIGNMENT

You are required to develop this investigation from first principles by constructing a laboratory report using the normal communication procedures.

Using the normal equipment for Thermal Physics investigations, you are required to design and carry out an investigation to determine the specific heat capacity of a metal cube or metal cylinder provided by your teacher.

Furthermore, you will need to compare your obtained value with published values, and confirm your identification of the metal by choosing a second physical property of the metal and designing and carrying out an investigation to justify your findings.

You will need to provide your own paper and submit it as instructed by your teacher.

Name _____ Date _____ Class _____ Time: 50 mins

You may be assessed using the following criteria:

DATA COLLECTION

- Observing (collecting) and recording raw data
- Presenting raw data

DATA PRESENTATION AND ANALYSIS

- Processing raw data correctly
- Presenting processed data appropriately

BACKGROUND

Ice molecules are bound within a crystalline structure by intermolecular forces. The internal energy is due to the kinetic energy of the vibrating molecules and the molecular potential energy of the ice lattice. When the ice changes state, energy is absorbed and work is done to increase the separation between the molecules. The thermal energy absorbed increases the internal potential energy because there is no temperature increase in the melting process. The quantity of increased internal potential energy is known as the Latent Heat of Fusion of the substance.

When ice is added to warm water, it melts. In a closed system, the thermal energy lost by the warm water is equal to the thermal energy gained by the ice. The ice may be at a temperature below 0°C if it has been in the freezer.

If this be the case:

$$[\text{mass} \times \text{sp ht} \times \text{fall in temp}]_{\text{warm water}} + [\text{mass} \times \text{sp ht} \times \text{fall in temp}]_{\text{calorimeter}} =$$

$$[\text{mass} \times \text{sp ht} \times \text{rise in temp}]_{\text{ice}} + [\text{mass} \times \text{latent heat}]_{\text{ice}} + [\text{mass} \times \text{sp ht} \times \text{rise in temp}]_{\text{ice water}}$$

(Where 'sp ht' stands for the specific heat of the substances mentioned in the equation.)

Usually, when the ice is removed from the freezer it begins to melt within a short time. If this is the case, then the specific heat capacity of the ice does not need to be considered in the above equation. Be careful that all the melting water is removed from the ice.

This investigation can also be carried out using a polystyrene cup in place of the calorimeter.

$$L_{\text{fICE}} = 3.34 \times 10^5 \text{ Jkg}^{-1}$$

$$c_{\text{ICE}} = 2.1 \times 10^3 \text{ Jkg}^{-1}\text{K}^{-1}$$

$$c_{\text{WATER}} = 4.18 \times 10^3 \text{ Jkg}^{-1}\text{K}^{-1}$$

AIM

To determine the latent heat of fusion of ice and compare the value obtained with the published value.

EQUIPMENT

Calorimeter or polystyrene cup, ice cubes, paper towel, digital or beam balance, thermometers, warm water.

METHOD

1. Determine and record the mass of the calorimeter cup.
2. Warm some water to about 40°C and half fill the calorimeter with the water. Determine and record the mass of the water.
3. Return the calorimeter cup to the calorimeter and cover it. Measure the equilibrium temperature of the water.
4. Dry the water from three normal sized ice cubes and carefully and quickly place them in the calorimeter.
5. Record the new equilibrium temperature.
6. Calculate and record the mass of the ice.

Write a report of your investigations on separate paper using the following headings:

DATA COLLECTION

OTHER OBSERVATIONS

DATA PRESENTATION AND ANALYSIS

CONCLUSION and EVALUATION

Name _____ Date _____ Class _____ Time: *i* hour

In this investigation you may be assessed using school-based criteria.

BACKGROUND

An **ideal gas** is a theoretical gas that obeys the **equation of state of an ideal gas exactly**.

They obey the equation $pV = nRT$ when there are no forces between molecules at all pressures, volumes and temperatures.

From the combined gas laws, we determined that:

$$PV / T = k \quad \text{or} \quad PV = kT$$

If the value of the universal gas constant is compared for different masses of different gases, it can be demonstrated that the constant depends not on the size of the atoms but rather on the number of particles present (the number of moles). Thus for n moles of any ideal gas:

$$PV / nT = R \quad PV = nRT$$

This is called the **equation of state of an ideal gas**, where R is the universal gas constant and is equal to $8.31 \text{ J mol}^{-1} \text{ K}^{-1}$. The equation of state of an ideal gas is determined from the gas laws and Avogadro's law.

Pressure can be defined as the **force exerted over an area**.

$$P = F / A$$

The SI unit of pressure is the pascal Pa. $1 \text{ atm} = 1.01 \times 10^5 \text{ Nm}^{-2} = 101.3 \text{ kPa} = 760 \text{ mmHg}$.

Suppose we take a syringe, place on a set of digital scales, and push on the top of the plunger, the total pressure will equal:

$$P_0 + mg / A$$

Where P_0 equals the atmospheric pressure and A is the cross-sectional area of the plunger.

Combining equations it can be shown that:

$$PV = (P_0 + mg / A) V = nRT$$

AIM

To determine the Universal gas constant using a calibrated syringe filled with a fixed mass of air placed on a set of scales (see diagram).


DATA COLLECTION AND ANALYSIS (use extra paper)

Rearrange the equation given above to arrange the dependant and independent variables, and the constant values.

Collect sufficient data that will allow you to draw a graph of the variables and using the graph, determine the value of R .

CONCLUSION AND EVALUATION

State a valid conclusion based on interpretation of results. Evaluate the procedure including limitations and errors. Suggest a modified procedure to improve the investigation.

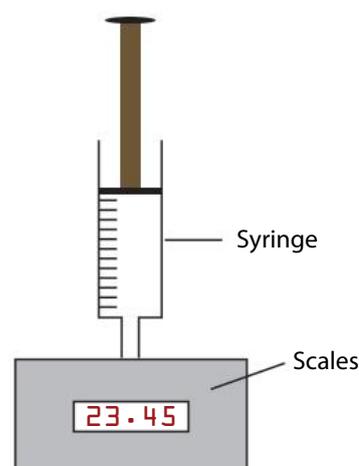

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school-based criteria:

BACKGROUND

Boyle's Law relates pressure and volume for a gas at fixed temperature for ideal gases. For a real gas, it is obeyed at low pressures as is the case in school laboratory conditions. The pressure of a fixed mass of gas is inversely proportional to its volume at constant temperature.

$$P \propto 1/V$$




therefore $PV = \text{constant}$.

When the conditions are changed;

$$P_1 V_1 = P_2 V_2$$

There are three common experimental designs, and a schematic diagram for each design is shown below (see Set-ups 1, 2, 3). The readings obtained must be taken slowly to maintain constant temperature because when air is compressed, it warms up slightly.

Mercury needs to be used with particular care. If using the oil apparatus be sure to watch the amount of pressure being used to avoid explosions of the glass tube.

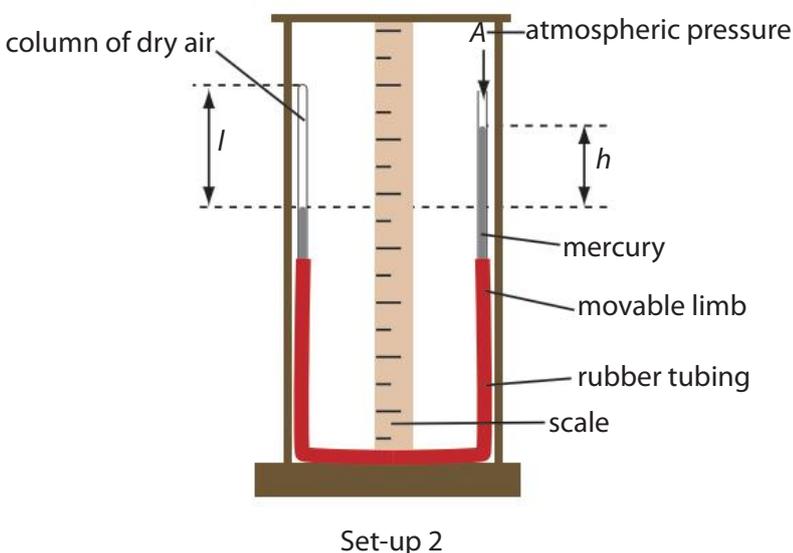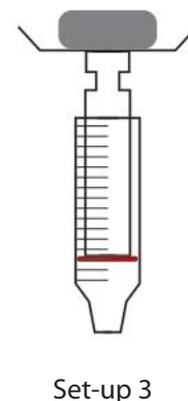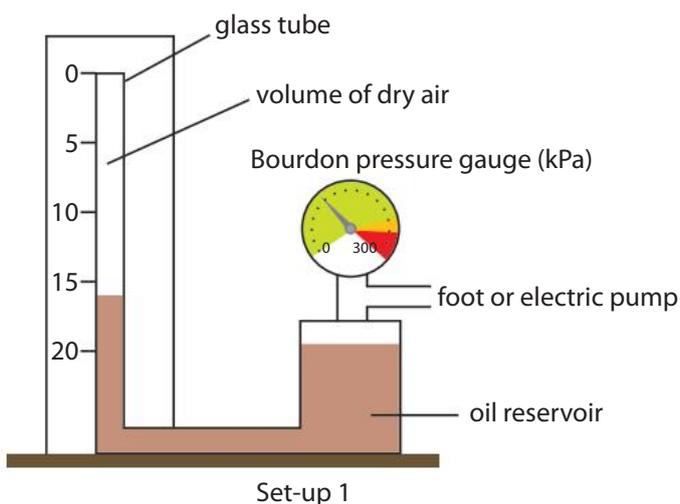

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school-based criteria:

BACKGROUND

The Charles (Gay-Lussac) Law of gases states that the volume of a fixed mass of gas at constant pressure is directly proportional to its absolute (Kelvin) temperature. This can also be stated as; 'the volume of a fixed mass of gas increases by 1/273 of its volume at 0°C for every degree Celsius rise in temperature, provided the pressure is constant'.

$$V \propto T$$

$$V_1/T_1 = k_1$$

$$V_1/T_1 = V_2/T_2$$

The Pressure (Adminton) Law of gases states that the pressure of a fixed mass of gas at constant volume is directly proportional to its absolute (Kelvin) temperature. This can also be stated as; 'the pressure of a fixed mass of gas increases by 1/273 of its pressure at 0°C for every degree Celsius rise in temperature, provided the volume is constant'.

$$P \propto T$$

$$P_1/T_1 = k_2$$

$$P_1/T_1 = P_2/T_2$$


Therefore; 'for a fixed mass of gas, its pressure times its volume divided by its Kelvin temperature is a constant'.

$$PV/T = k_3$$


$$P_1V_1/T_1 = P_2V_2/T_2$$

This is known as the *combined gas equation*.


Some typical apparatus to demonstrate these relationships are shown below in Set-ups 1, 2 and 3.

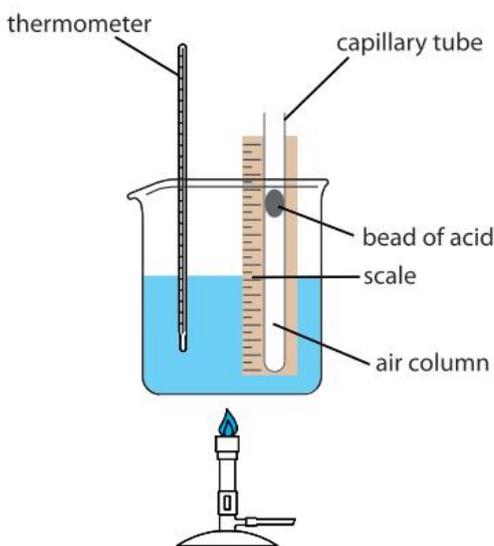

Set-up 1

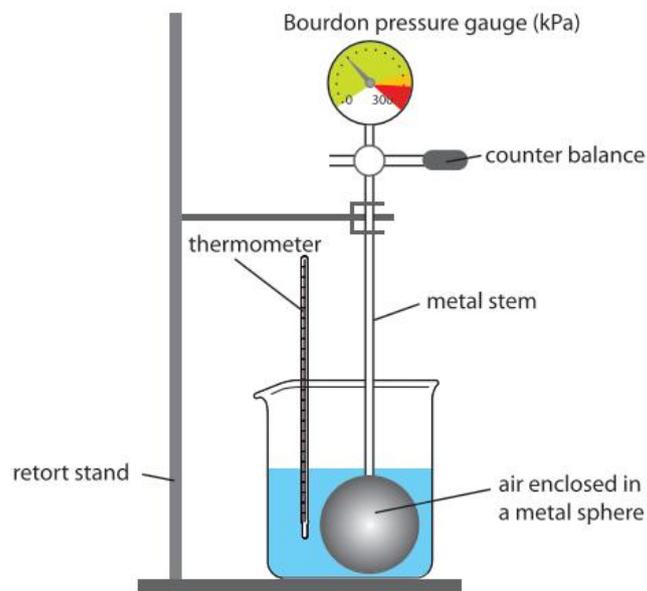

Set-up 2

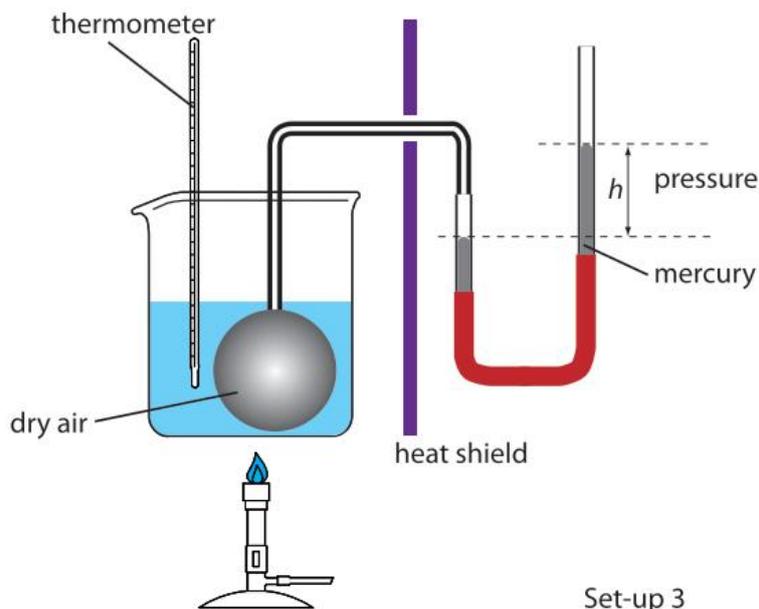

AIM

To determine how the volume of a fixed mass of gas at constant pressure, and the pressure of a fixed mass of gas at constant volume, change with the temperature of the gas.

In **Set-up 1**, a sample of dry air is trapped in a capillary tube by a bead of concentrated sulfuric acid. The capillary tube is heated in a water bath and the water is constantly stirred to ensure that the temperature of the whole air column is at the same temperature. The investigation should be carried out slowly to allow thermal energy to pass into or out of the thick glass walls of the capillary tube.

In **Set-up 2**, the essential parts of the apparatus are a metal sphere or round bottomed flask and a bourdon pressure gauge. These are connected by a short column of metal tubing or capillary tube to ensure that as little air as possible is at a different temperature to the main body of enclosed gas.

In **Set-up 3**, mercury manometer heights are obtained, as explained in the previous investigation.

This is a data-based exercise that will allow you to obtain a value for the absolute zero of temperature.

CHARLES' LAW		PRESSURE LAW	
LENGTH OF AIR COLUMN (cm ³)	TEMPERATURE (°C)	PRESSURE (Nm ⁻² × 10 ⁵)	TEMPERATURE (°C)
20.4	16.1	1.00	12.0
21.1	28.2	1.02	20.3
21.7	32.0	1.05	30.1
22.1	40.3	1.07	40.4
23.3	56.0	1.15	52.0
24.0	66.1	1.17	61.8
24.9	79.8	1.25	92.1
26.4	99.5	1.30	99.7

DISCUSSION (use extra paper)

Use the data provided to obtain absolute zero, and comment on the relationships being investigated.

Name _____ Date _____ Class _____ Time: _____

You may be assessed using school-based assessment criteria:


BACKGROUND

In 1931, Zartmann in the United States of America carried out a series of experiments to verify the statistical proposals of the Maxwell-Boltzmann distribution of molecular speeds.

Bismuth was heated in an oven enclosed in an evacuated chamber as shown in the schematic diagram below. The gaseous bismuth emerges from the oven, and pass through two screens to collimate the particles (to produce a beam). They then enter an evacuated drum rotating at high speed in a clockwise direction.

If the gaseous particles arrived at the hole in the drum at the right time, they pass through the hole, and they adhere to a curved piece of glass attached to the drum. Two plates are shown for samples of bismuth at different temperatures.

It can be shown that the distance along the film is proportional to the speed of the particles, and that the density of dots in each segment is proportional to the number of particles of the segment.

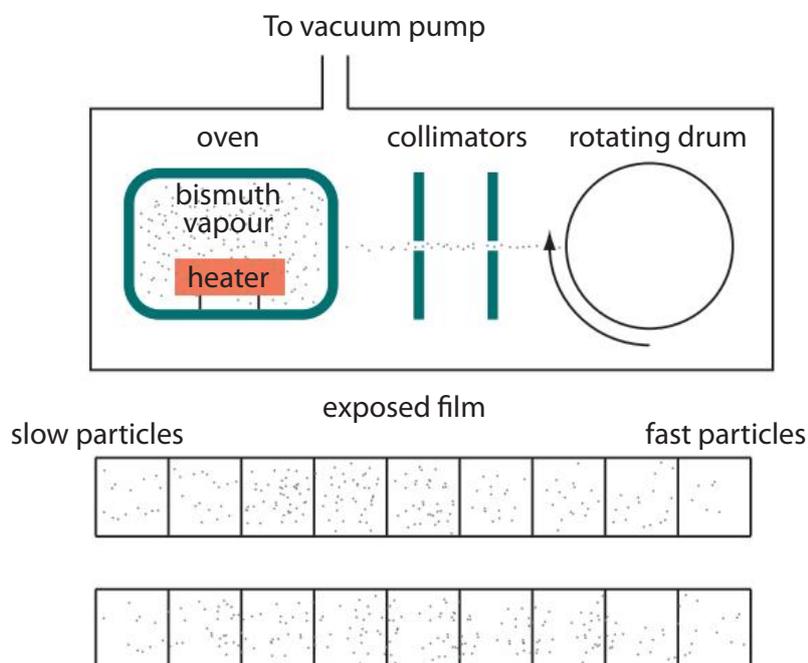

AIM

To confirm the Maxwell-Boltzmann distribution of speeds of bismuth gas at different temperatures.

EQUIPMENT

Graph paper, magnifying glass

METHOD

1. Using a magnifying glass, count the number of dots in each segment for the top glass plate.
2. Record these numbers in the relevant place of the data collection table.
3. Repeat steps 1 and 2 for the second glass plate.
4. On the same set of axes, plot a graph of the number of dots in each region versus the region distance along the film.

DATA COLLECTION

Construct a suitable table and record your data.

DATA PRESENTATION AND ANALYSIS

What did Zartmann conclude from the graph about the velocity of bismuth gaseous particles at the lower temperature?

What did Zartmann conclude from the graph about the velocity of bismuth gaseous particles at different temperatures?

Name _____ Date _____ Class _____ Time: 1 hour


You may be assessed using school-based assessment criteria:

The Simple Pendulum

The simple pendulum essentially consists of a mass (the bob) suspended from a support by a string. The pendulum can be set into oscillation by pulling the bob back to A and releasing it.

The 'time period' of oscillation is the time it takes for the bob to swing from A to B and back to A.

In this investigation, you are asked to identify the factors that you think might affect the period of oscillation, and then investigate one of these factors in detail. Furthermore test, by a graphical method, that the simple pendulum swings with simple harmonic motion, and use your graph to deduce a value for the acceleration due to gravity.

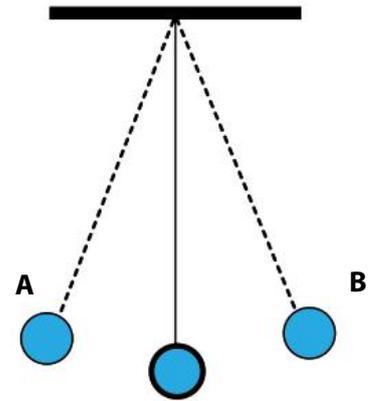

Consider carefully the following statements and questions:

1. There are several ways in which your pendulum is not an ideal simple pendulum. What are they?
2. The SHM theory of the simple pendulum is only valid subject to a certain restriction. What is this, and how will it affect your experimental procedure?
3. Why is it important that the oscillations of the pendulum do not become elliptical?
4. What theoretical and practical limitations determine the range of values of the length of your pendulum?
5. With sufficient care, this experiment can yield a value for the acceleration due to gravity correct to 1%. Is your value as accurate as this? If not, why not?

An Oscillating Spring

A mass attached to the end of a light helical spring and set in motion to perform vertical oscillations will undergo simple harmonic motion. A light spring has negligible mass. The period of the simple harmonic oscillations is determined by the mass attached and the elasticity of the spring.

For any real spring, the mass of the spring itself is not negligible but rather affects the motion in a rather complicated way. However, we may take the spring's mass into account by attributing an "effective mass" m_0 to the spring and replacing m by $(m + m_0)$ in the theory which leads to the expression for the periodic time.

Write down the formulas for the period T when:

m_0 is negligible

m_0 is not negligible

In the **dynamic** experiment, investigate the variation of the period of oscillation of the spring with changing masses attached to it, and plot a graph to test your theory equation.

From the graph, deduce the values of m_0 and the spring constant k

In a second **static** experiment, investigate the variation of the extension of the spring from its equilibrium position for different forces attached to the spring (Hooke's Law).

Measure the slope of a graph plotted for this purpose, and use the value of k from the dynamic graph to help you deduce a value for the acceleration due to gravity.

Alternatively, you may wish to investigate one factor that may influence the period of the vertical oscillation of a mass on a helical spring.

AIM

EQUIPMENT

A good quality helical spring, metre rule, timing device, masses.

PROCEDURE

DATA COLLECTION

In this space below you should prepare data tables as required.

Other observations:

DATA ANALYSIS

In the discussion that follows you should explain inferences you have reached from your observations made during this investigation.

1. What exactly is meant by the word “extension”? Explain clearly how you attempted to measure this accurately.

2. Is there any limit on the amplitude of oscillation that may be used? For example, is it necessary/desirable to use small oscillations?

3. What problems did you encounter in obtaining an accurate value for the periodic time and how did you overcome them?

4. What physical properties of the spring do you think determine the value of the spring constant?

CONCLUSION AND EVALUATION (add extra paper if required)

Name _____ Date _____ Class _____ Time: 40 mins

BACKGROUND

In this investigation, you will be using a slinky spring to observe longitudinal and transverse pulses and continuous waves and the properties associated with these.

A change in the nature of the medium propagating a wave is termed a discontinuity. You will observe the effects that occur in fixed end and free end reflection, and the effects that occur when two different mass/length springs are joined together.

There is a series of questions that you must answer using the spring as a wave model. You will be expected to draw sketches of your observations and use these sketches to aid you in the explanation of wave characteristics and properties.

AIM

To observe some wave properties and characteristics using springs.

EQUIPMENT

Slinky spring, long dense spring, light thread, 100 g mass.

METHOD

1. Stretch a slinky spring on the ground with your partner holding one end fixed. Produce a longitudinal pulse and a transverse pulse, and record the shape of the coils in the spring during propagation.
2. Use pulses and/or continuous waves fixed at one end to enable you to observe and record:
 - the size and shape of the pulse as it moves down the spring.
 - any speed changes as the pulse travels along the spring.
 - any speed changes when the pulse is given a bigger or smaller amplitude.
 - any speed changes when the tension in the spring is changed.
 - the properties of the medium that determine the speed of the pulse.
 - any change in the shape of the pulse when it strikes a fixed boundary.
 - the effect that occurs when two different shaped pulses are sent along the spring in different directions by you and your partner.
 - any changes that occur in the wavelength when the frequency changes for a continuous wave.
 - any wave patterns that are formed when continuous waves are reflected at a boundary.
3. Tie a piece of three metre light thread to one end of the spring and produce a transverse pulse with the end with the thread acting as a free boundary. Observe and record the reflection characteristic at the free end.
4. Attach a 100 g mass to one of the slinky coils to produce a discontinuity. Observe and record how the wave energy is reflected and transmitted at the discontinuity.
5. Connect the slinky spring to the dense spring by tying the two securely together.

6. Observe and record:

- the wave speed characteristics in each medium.
- how the wave pulse is transmitted and reflected from the boundary in each case.
- any changes in amplitude.
- any phase changes.

Write a report of your investigations on separate paper using the following headings:


DATA COLLECTION

Collect the required data to answer the questions.

DATA PRESENTATION AND ANALYSIS

Use your data to answer all the questions above.

CONCLUSIONS AND EVALUATION




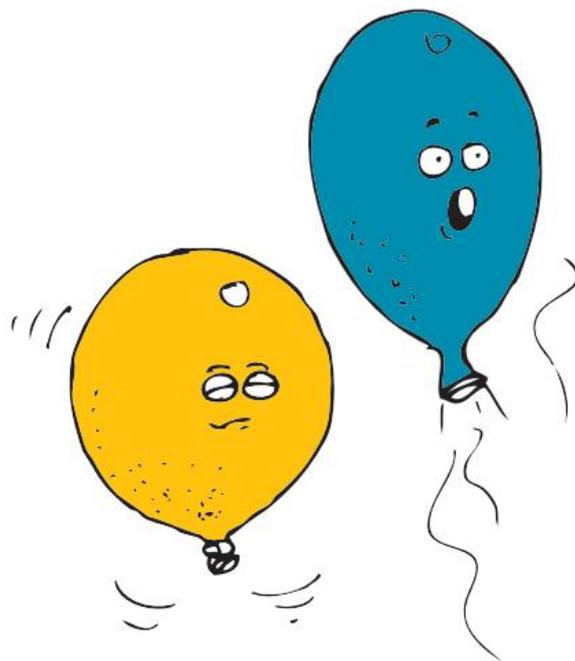


Name _____ Date _____ Class _____ Time: 1 hour

In this investigation you may be assessed using school-based criteria.

BACKGROUND

The diagrams hereunder show examples of apparatus used for determining the speed of sound in air, using the phenomenon of resonance.

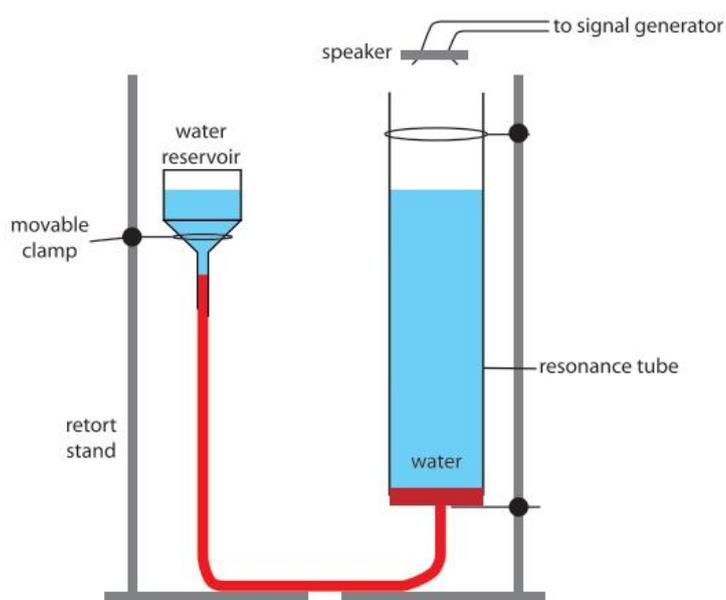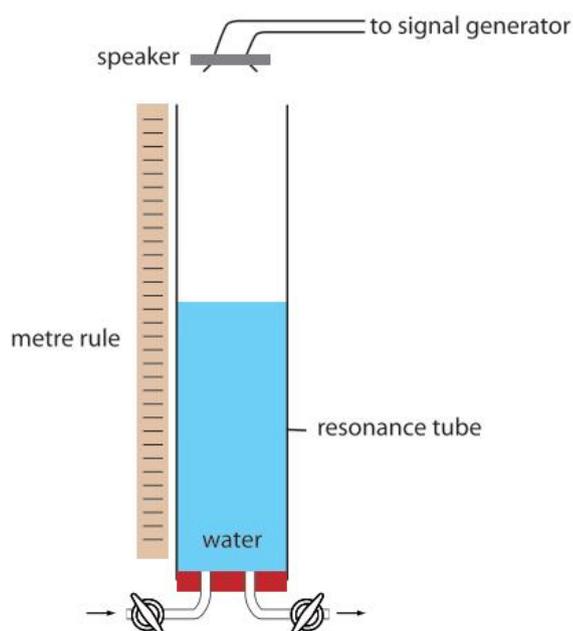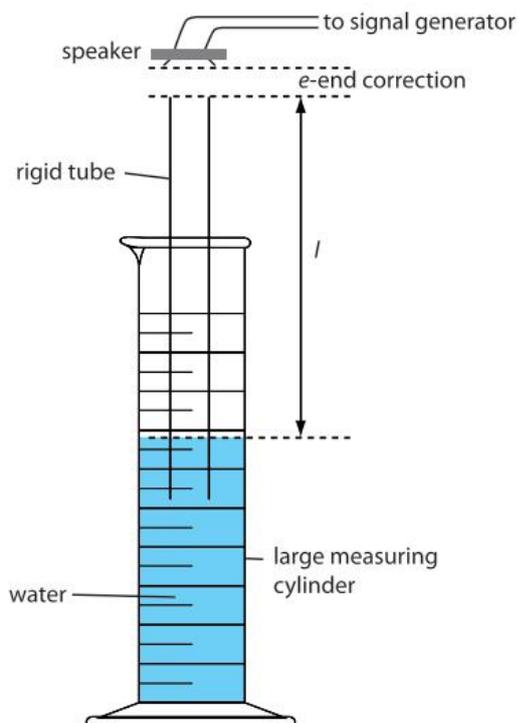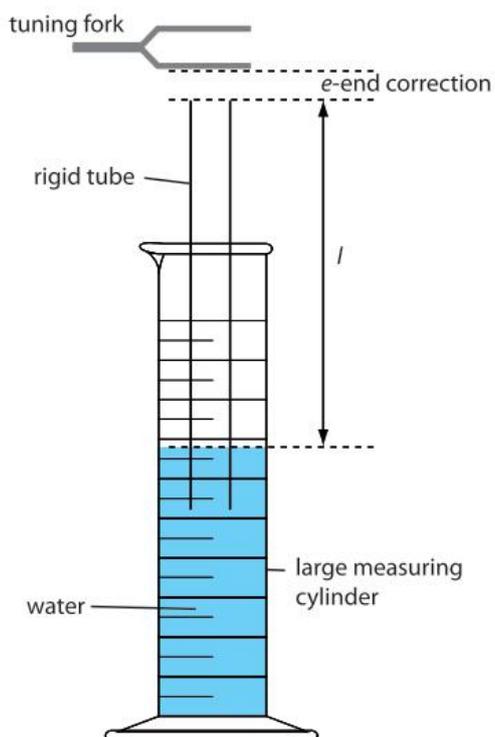

Waves produced by the tuning fork or the signal generator are propagated down the tube and are reflected at the water boundary. Standing waves are produced for certain water levels within the cylinder. These standing waves can be detected using resonance that occurs when the frequency of the source is equal to the natural frequency of the air column.

Resonance occurs when the standing or stationary waves produced have maximum amplitude. A node of high pressure and density is formed at the water boundary and an antinode of low pressure and density is formed a short distance, e , above the open end of the tube. The temperature of the air column will affect the speed of sound. The average speed of the air particles is greater at higher temperatures and therefore they can pass on compressions and rarefactions more quickly.

The longest wavelength producing resonance is equal to four times the length of the air column, L . This can also be stated as: 'the length ' L ' of the air column is equal to one quarter of the wavelength plus the end correction, e .'

$$\frac{\lambda}{4} = L + e$$

The speed of sound at a particular temperature is given by $v = f\lambda$

$$\therefore L + e = \frac{v}{4f} \quad \text{or} \quad L = \frac{v}{4f} - e$$

If the fundamental frequency, f , is determined using different tuning forks or signals from the signal generator for different lengths of the air column, a graph of L against $1/f$ produces a linear graph with a slope of $v/4$ and a y-intercept of $-e$.

Experimental measurements show that:

$$\frac{v_1}{v_2} = \sqrt{\frac{T_1}{T_2}} \quad \text{where } c = 331 \text{ m s}^{-1} \text{ at } 273 \text{ K.}$$

Write a report of your investigations on separate paper using the following headings:

AIM

To determine the speed of sound in air using standing waves in a column of air.

EQUIPMENT

METHOD

DATA COLLECTION

Complete your own data collection. A number of trials are needed.

DATA PRESENTATION AND ANALYSIS

Using the equation $L + e = \frac{v}{4f}$, plot a graph that allows you to determine the speed of sound ' v '.

Measure the room temperature and compare your value of V with the published value at that temperature.

CONCLUSION AND EVALUATION

Name _____ Date _____ Class _____ Time: _____

In this investigation you may be assessed using school-based criteria.

BACKGROUND

In this investigation, you will use pulses produced with a wooden dowel, periodic waves produced with a vibrator bar, and ripples produced with plastic spherical dippers. These disturbances will be used to observe reflection, refraction, diffraction and interference for surface water waves.

Some of the wave properties are more easily observed than other wave properties, and you will have to decide whether a pulse, a “wave train” or a ripple is the most appropriate technique in order to produce the best result for recording your observations. Be patient and thorough.

Your data collection requires carefully drawn and fully labelled diagrams of the observed wave patterns. The diagrams should include both wavefronts and rays to show the direction of wave travel. Your diagrams will be much easier to interpret if you organise a consistent legend for the representation of rays, wavefronts, barriers etc... (Perhaps a set of different coloured pens will help.)

AIM

To investigate wave properties using surface water waves in a ripple tank.

EQUIPMENT

Ripple tank kit including motor and light control unit, light, motor, metal reflectors, wooden dowel, eye dropper, vibrator bar, straight barriers, dippers, hand held stroboscope, sponge, perspex sheet, A3 paper, connecting leads, on/off switch, pens of different colour.


METHOD

Setting up the ripple tank

1. Place a lamp about 50cm above the ripple tank and set up the motorised vibrator bar.
2. Connect the lamp and motor to a ripple tank control unit, if available, or to two separate D.C. power sources.

Warning: Electrical device.

3. Place a piece of white A3 paper underneath the ripple tank to act as a screen.
4. Slowly pour water into the ripple tank until the depth is about 5 mm. Wipe the bottom perspex sheet with a sponge if there are air bubbles present. *Be careful not to scratch the Perspex.*
5. Level the tank by adjusting the height of the legs until the two images of the lamp, the image of the reflection from the water surface and the image of the reflection from the perspex surface, coincide on your white screen.
6. Use single drops from the eye- dropper to propagate circular wave pulses. Ripples in the tank act like lenses so that crests of wavefronts appear as bright areas and troughs appear dim areas, on the screen.
7. View the screen directly, and if you feel that you have eliminated any problems you should check with your teacher for preliminary planning and manipulative skills assessment.

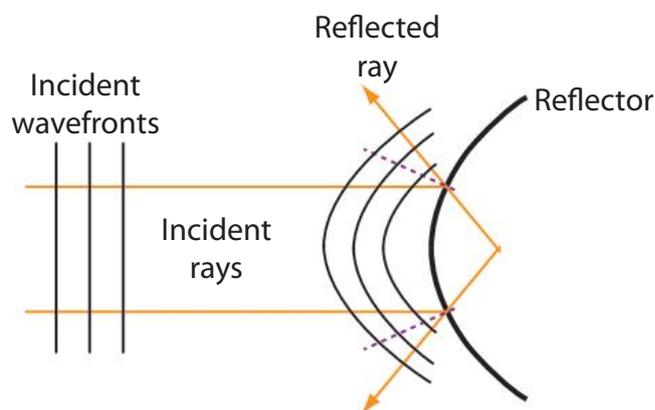

REFLECTION

1. Propagate straight (rectilinear) waves using the wooden dowel.
2. Observe wave pulses reflected from a straight barrier, a concave barrier and a convex barrier.
3. Record your observations in the data collection section clearly, showing incident and reflected wavefronts and rays.
4. Repeat the three steps using drops from the eye dropper to propagate circular waves.

REFRACTION

1. Place the perspex trapezium sheet in the ripple tank with the diagonal side facing the incident wavefronts. Adjust the water level in the ripple tank until the perspex sheet is just covered.
2. Propagate a passage of continuous waves by lowering the vibrator bar until it touches the water surface.
3. View the image on the screen with a hand held stroboscope, adjusting the speed of rotation until the wavefronts appear stationary.
4. Observe and sketch the incident and refracted wavefronts.
5. Observe the refracted patterns for different angles of incidence and different frequencies of the vibrator bar.

DIFFRACTION

1. Refill the ripple tank with water to the 5 mm depth.
2. Place the two metal straight barriers in your kit in the water, parallel to the vibrator bar with a gap of 3 cm between them.
3. Propagate periodic plane waves with the vibrator.
4. Observe and record the patterns for different sizes of aperture. Be careful to observe both the patterns produced at the edges and between the barriers.
5. Adjust the vibrator frequency and record any relevant observations.

INTERFERENCE

1. Raise the vibrator bar and attach the two dippers. Lower the bar until the dippers just touch the water surface.
2. Observe and record the pattern produced when the two coherent circular waves are superposed.
3. Note the changes in the patterns when the vibrator frequency and the separation of the dippers are varied.

WAVE VELOCITY

1. Record the frequency of a series of periodic plane waves using a stopwatch or a hand held stroboscope or both methods.
2. Record the wavelength of these waves.
3. Calculate a value for the velocity of surface water waves.

DATA COLLECTION

Attach sheets to show your observations. Make sure that you have fulfilled all the criteria for the data collection assessment component.

DATA PRESENTATION AND ANALYSIS

1. What kind of wave is the surface water wave?

2. For the reflection section, compare the radius of curvature of the reflected wave with the radius of curvature of the barrier.

3. Compare the reflections produced for water waves with those produced by light rays in curved mirrors.

4. In the refraction section, in which medium do the water waves travel faster?

5. What effect has the depth on the wavelength and the wave velocity?

6. In the diffraction section, comment on the incident wavelength and the diffracted wavelength for different sized apertures.

7. In the interference section, comment on the difference in the pattern produced for different dipper frequencies and different dipper separation.

8. Give a value and an explanation of how you calculated the wave velocity of water waves.

CONCLUSION and EVALUATION

What are the advantages and disadvantages of using water waves to investigate wave properties in comparison to using light waves or mechanical waves? Which properties are best demonstrated using surface water waves? (*attach more paper*).

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school-based criteria:

BACKGROUND

Electromagnetic waves consist of oscillating electric and magnetic fields travelling at the speed of light. The electric field oscillates at right angles to the magnetic field. Natural crystals of tourmaline and calcite, and synthetic “polaroid” will only allow oscillating electric vector components of a particular direction to pass through them. Therefore, these electric oscillations of electromagnetic waves emerging from such a material are parallel to each other and lie in one plane. They are said to be plane polarised.

Polaroid is a material composed of sheets of nitro-cellulose, containing crystals of iodosulfate, arranged as long molecules. These long molecules reflect and preferentially absorb electric vector components along their length. Polaroid is used in sunglasses and certain lamps to reduce glare. Many scientific observations that are not possible with ordinary unpolarised light may be made possible with polarised light. Certain optically active chemicals can be identified using polarimetry, and stress in structural materials can be observed using polarisation. Polarisation can also be used to determine the thickness of crystals and fibres.



Apart from light being partially or totally polarised by transmission through certain materials it can also be partially or totally polarised by reflection from shiny surfaces, by double refraction in certain minerals and high frequency blue light diffraction scattering by certain molecules in the atmosphere. It is believed that bees and other animals use polarisation for navigation.

In this investigation, you will observe and record some of the properties of polarised light that have been mentioned. You will use two sheets of polaroid called the polariser and the analyser. The intensity of light incident on an ideal polariser is halved after preferential absorption. The analyser can then be rotated from 0° to 90° to reduce the emerging light intensity to zero. When the electric field for light incident on a polaroid is at an angle θ to the plane of vibration then the electric field vector of the light emerging is $E_0 \cos \theta$, and the light intensity emerging from the polaroid is given by the Malus equation:

$$I = I_0 \cos^2 \theta$$

where I is the emerging light intensity and I_0 is the half intensity after polarisation.

Remember that other electromagnetic waves, such as radio and microwaves, can also be polarised.

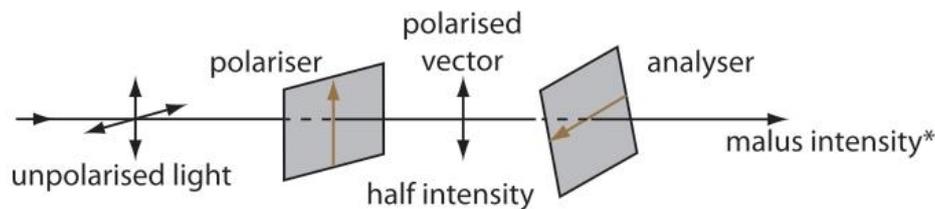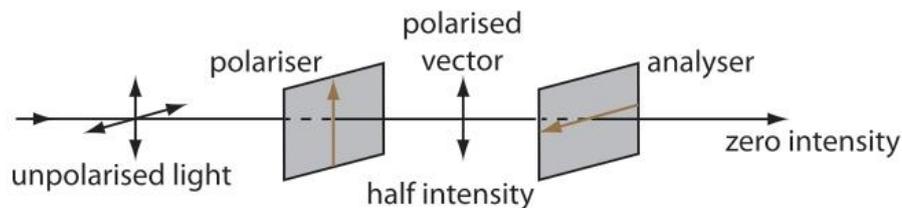

* when the light intensity seen is equal to zero

AIM

To investigate methods of producing and detecting polarised light.

EQUIPMENT

Three squares of polaroid 5 cm in diameter, 5 microscope slides, glass block, ray box to give a single beam of light, polarimeter if available, protractor, Perspex ruler, liquid crystal display (calculator, digital watch), masses string, colour filter for the ray box sucrose solution.

METHOD

Part A Production and detection of polarised light


1. Look at the light from the ray box through one piece of Polaroid, the polariser.
2. Rotate the polariser about an axis through the centre of the thin side.
3. Comment on the intensity of light.
4. Do the same with a second piece of Polaroid, the analyser, on its own.
5. Comment on the intensity of light.
6. Hold both the polariser and the analyser a short distance apart and look at the ray box at the same distance as in steps 1 and 4.
7. Rotate the analyser while keeping the polariser fixed in position.
8. Comment on the light intensity as the analyser is rotated through 360° .
9. Tilt the analyser forward while rotating it. Keep the polariser fixed in position.
10. Comment on the intensity of light compared to Step 8.

Part B Production of polarised light by reflection

1. Shine a ray of light onto a glass slide at an angle of incidence of 40° .
2. View the position of the reflected ray through a piece of Polaroid. Call this position 1, P1.
3. Rotate the piece of Polaroid about the axis of the reflected light and at 45° intervals, record the light intensity as high, medium, low or zero.
4. Now, move the Polaroid and view the beam of light directly transmitted through the slide called position 2, P2.
5. Rotate the piece of Polaroid as in Step 3.
6. Repeat Steps 1 to 5 for angles of incidence of 57° and 70° .
7. Place a second glass slide parallel with the first and 1 cm apart.
8. Repeat Steps 1 to 6.
9. Carry out the same procedure for a number of separated slides, and a glass slab about the same thickness as the stack of slides.
10. Record all your collected data in a table in the data collection section.

Part C Identifications

1. Observe a number of calculator or digital watch displays with a rotated polariser and record your observations.
2. Rotate a third piece of Polaroid between two crossed polaroids (the polarisation direction of the polariser and the analyser are at right angles to each other).
3. Use a polarimeter, or a ray box with Polaroids, set-up to examine a sucrose solution.
4. Rotate the analyser and record your observations.
5. Set up the following apparatus and record all relevant observations.

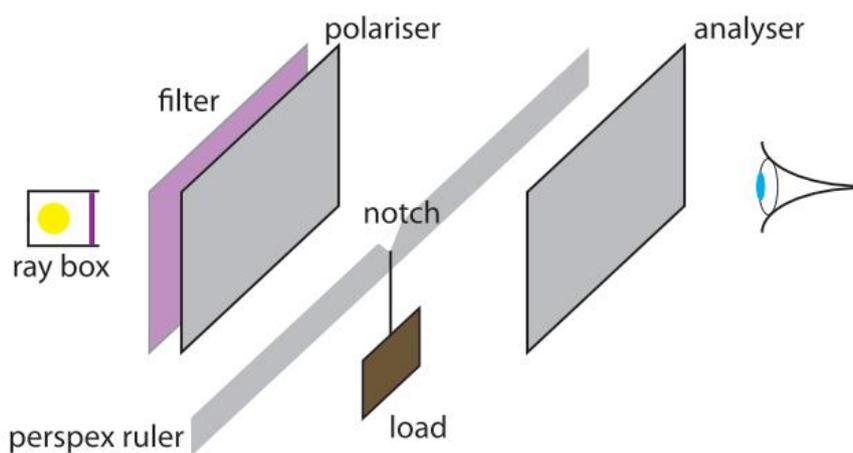

DATA COLLECTION AND PRESENTATION (use extra paper)

Use this space to record your data and observations.

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school assessment criteria:

BACKGROUND

After reading the 3 method sections hereunder, research and record the equations relevant for determining the refractive index of the blocks used.

Equation 1

Equation 2

Equation 3

AIM

To determine the refractive index of a semi-circular perspex slab using three different methods.


EQUIPMENT

Ray box, semi-circular block, rectangular perspex block, rotating platform, single slit, sheets of A4 paper and a pencil, protractor, graph paper.

METHOD


Part A: Graphical Method

1. Position a semi-circular perspex block on top of a piece of A4 paper at the centre of a rotating platform as shown in the diagram on the next page.
2. Turn on the raybox and rotate the platform so that the incident ray is directed onto the straight side of the semi-circular block (see diagram).
3. Measure and record the angle of incidence and the angle of refraction at this point.
4. Rotate the platform to obtain a number of angles of incidence and refraction over as wide a range as possible.
5. From the data, determine the refractive index of perspex.

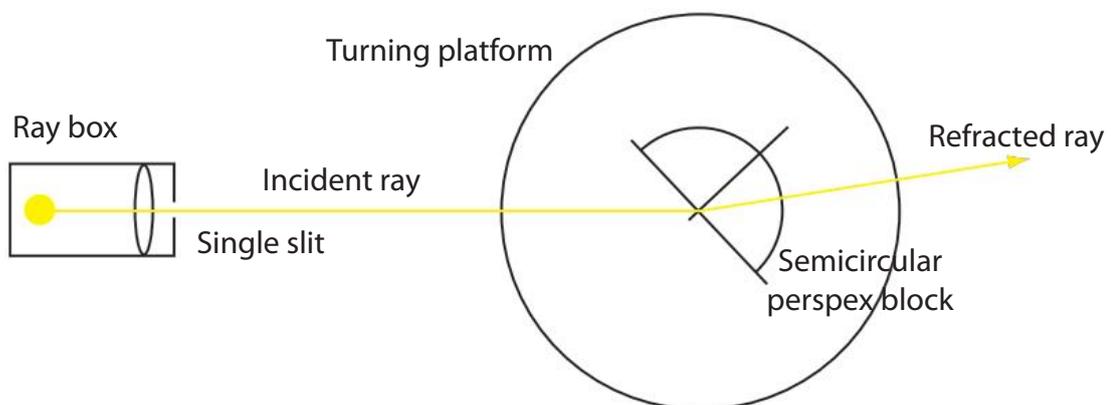


Part B: Using the Critical Angle

1. Position the semi-circular block on another sheet of A4 paper, as shown hereunder.
2. Rotate the platform to the position where the refractive ray just disappears and internal reflection occurs.
3. Determine the critical angle and the refractive index of perspex.

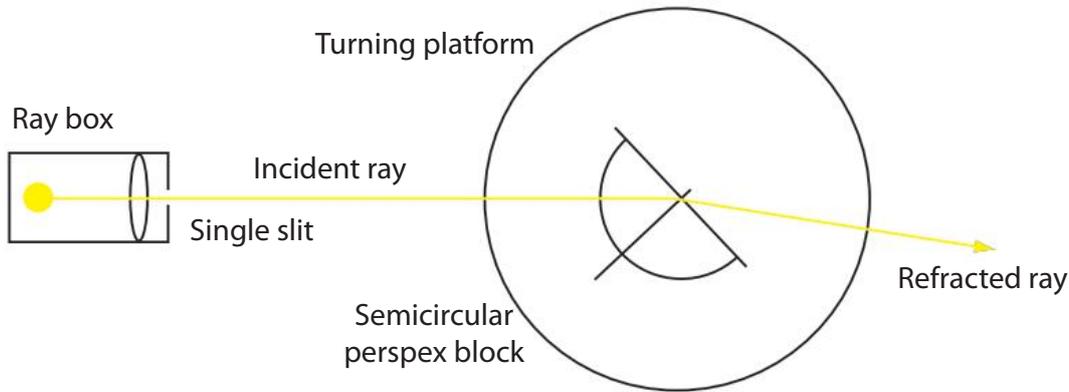

Part C: Real and Apparent Depth (optional)

1. Draw a straight line onto a piece of A4 paper.
2. Stand a rectangular perspex or glass slab on its end over the line drawn, as shown in the adjacent diagram.
3. Use the no-parallax method to determine the apparent position and apparent depth of the drawn straight line.
4. Determine the refractive index of the rectangular block.

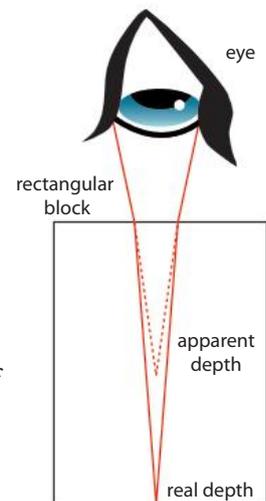

Present your report for one or more of these methods as instructed on extra paper using the following headings

DATA COLLECTION

DATA PRESENTATION AND ANALYSIS

CONCLUSION and EVALUATION

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school based criteria:

BACKGROUND

If a string is caused to vibrate at a particular frequency, it will only vibrate with a large amplitude if the generated frequency is one of the natural frequencies of the string. This is an example of resonance. An appropriate apparatus, shown hereunder, uses a signal generator and vibrator attached to a piece of string under tension, to produce standing or stationary waves.

If the frequency of the signal generator is slowly increased, then an amplitude in the form of a loop will be seen. With further increases in the frequency of the signal generator, two loops and three loops can be observed. The frequencies used are the first (fundamental), second and third harmonics of the string.

AIM


To find the relationship that exists between the frequency of the fundamental harmonic and the tension in the string.

EQUIPMENT

Signal generator, vibrator/oscillator, string, pulley, slotted masses, metre rule, weighing device.

METHOD

1. Set up the apparatus as shown in the diagram.

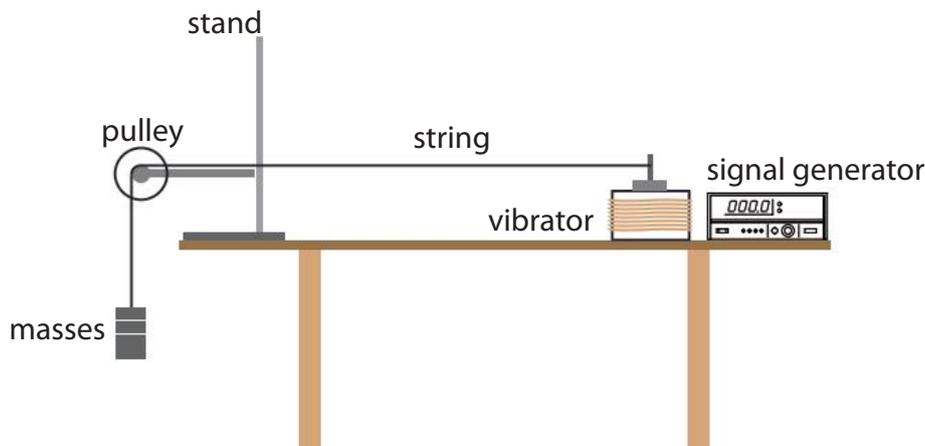

2. Connect the signal generator to the vibrator.
3. Hang 40 g from the string and adjust the frequency of the vibrator until the string vibrates in its fundamental mode.
4. Repeat the above steps for different masses.

Write a report of your investigations on separate paper using the following headings:

METHOD

DATA COLLECTION

DATA PRESENTATION AND ANALYSIS

Use the data to determine the relation between the fundamental frequency of vibration and the tension in the string.

CONCLUSION and EVALUATION

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using the following school-based criteria:

MATERIALS

In this experiment you will need:


- An EHT supply
- Electric field apparatus
- Grass seed
- Bare copper wire and leads
- Castor oil

METHOD

You should use the apparatus to observe the electric field patterns of the following:

- Two parallel conductors
- Single point conductor
- Two point conductors
- One point conductor and one straight conductor

The diagram below shows the set-up for observing the electric field pattern between two parallel conductors.

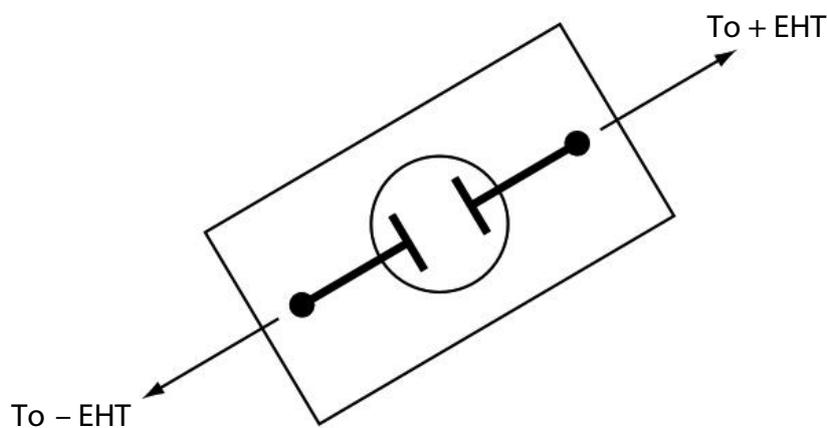

1. Add some castor oil to the dish and sprinkle some grass seed on to the surface of the oil.
2. Switch on the EHT supply and gradually increase the EHT supply voltage.
3. You should then make a sketch of the pattern that you observe.
4. To make a “single point” conductor you should bend a piece of the bare copper wire into this shape (approx $3\text{ cm} \times 3\text{ cm}$).

DATA

You should sketch diagrams to show your observations on separate paper.

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school-based criteria:

AIM


To determine the optimum value of the fixed resistor in each voltage divider circuit, as shown below.

EQUIPMENT

Light dependant resistor, $100\ \Omega$, $1\text{ k}\ \Omega$, $10\text{ k}\ \Omega$, $100\text{ k}\ \Omega$ and $1\text{ M}\ \Omega$ resistors, 9V battery or power supply, multimeters, connecting wires, on-off switch.

DESIGN

1. Take the multimeter and put it on the $20\text{ k}\ \Omega$ setting and measure the average resistance of the LDR when it is exposed to the light in the laboratory. Repeat with the LDR in a controlled shady location.
2. Set up the circuit as shown in the diagram, inserting the $100\ \Omega$ fixed resistor.

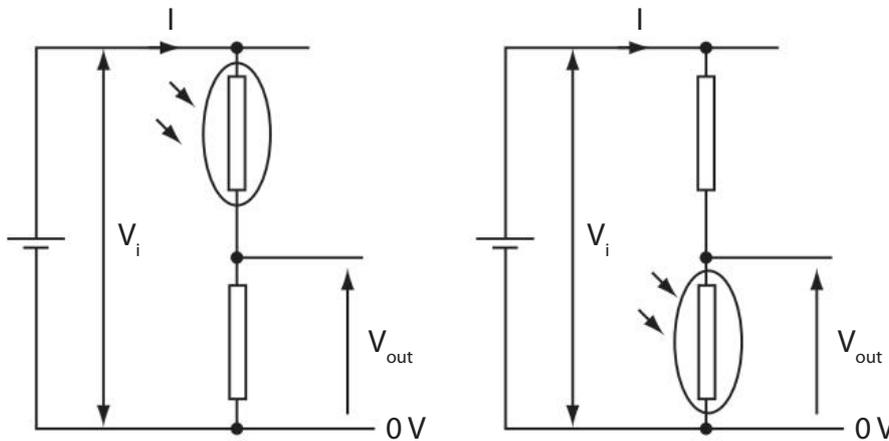

3. Measure the output voltage across the fixed resistor when the LDR is in the light and in the shade.
4. Repeat Step 2 while replacing the $100\ \Omega$ with each of the other resistors in turn.

DATA COLLECTION AND ANALYSIS

Record your results in a data table and determine the difference between the output voltage in the shade and in the light.

CONCLUSION and EVALUATION

Comment on the difference between the two circuits, referring to the potential divider equation.

Name _____ Date _____ Class _____ Time: 90 mins

You may be assessed using school-based criteria:

BACKGROUND

This is a formal design investigation.

You are required to design an investigation to show the relationship that exists between the resistance of a wire and its length and cross-sectional area. Results of the direct measurements and calculations of are to be presented graphically in order to determine the resistivity of the wire. The value obtained for the resistivity should be compared with published values.

You are provided with a certain wire of different lengths and different gauges. Any other equipment needed will be provided by your teacher.

Warning: Be careful not to use electric currents during the data collection component that will cause the wire to dissipate thermal energy (i.e. gets hot).



You are required to define the research question, formulate hypotheses and select any relevant variables.

You are also required to design realistic procedures to include appropriate apparatus, materials for both the control of variables and collection of data.

Your data should be clearly presented. A minimum of two graphs should be included with your report. Full error analysis and evaluation of your results is part of this formal report.

Present your report on separate paper.



Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school-based criteria

BACKGROUND

In 1826, Ohm (1787-1854) discovered the relationship that existed between potential difference and current flow through a metallic conductor. It is now known as Ohm's Law and can be stated as: "Provided the temperature is kept constant, the potential difference between the ends of a metallic conductor is directly proportional to the current flowing".

$V \propto I$

The formula is commonly written as: $V = IR$

where R is the resistance in ohms (Ω), V is the potential difference across the resistor in volts (V), and I is the current in the resistor in amperes (A).

As the current moves through the resistance of a device, it loses electric potential energy. The potential energy of a positive charge is less upon leaving the resistor than it was upon entering. We say that there is a potential drop across the device. Devices that obey the linear relationship of the graph are said to be **ohmic devices** or **ohmic conductors**. There are very few devices that are ohmic, although some metals can be if there is no temperature increase due to the heating effect of the current. However, many useful devices obey the law at least over a reasonable range.

AIM

To investigate the relationship that exists between the current passing through a resistor with a known value, and the potential difference across the resistor.


EQUIPMENT

A resistor with a known value, a variable rheostat, connecting wires, an on-off switch, a voltmeter and an ammeter (or 2 multimeters), a filament lamp.

Power supply (0-12 V) or a 1.5V dry cell.

METHOD

1. Set up the circuit as shown in the following diagram. When this is done, wait for your teacher to test your circuit.

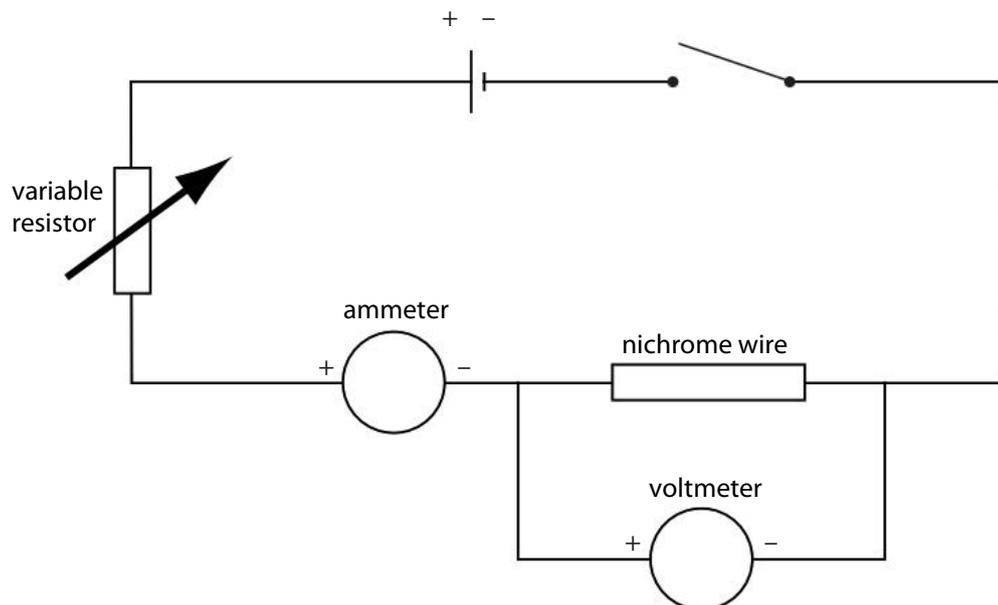

- When you have had your circuit checked, take a reading of the current through the resistor and the corresponding reading of the potential difference across it. Be sure to note the degree of uncertainty in your meters.
- By moving the top adjuster of the variable resistor, take another 5 readings of the current and the corresponding potential difference.
- Transfer these readings in ascending order of magnitude to the table given in the data collection section.
- Repeat Steps 3 and 4 replacing the resistor with a filament lamp.
- Plot graphs of the current flowing through the resistor and the filament lamp versus the potential difference across the two loads. Show the error bars for each reading.
- From the resistor graph, calculate the resistance of the resistor.
- For the resistor, complete the table in the data collection section for the power drawn by the wire.
- Draw graphs of power versus current, and power versus potential difference. Show the error bars for each reading.

DATA COLLECTION

Resistor	Current / A	Potential difference / V	Power / W
Reading	±	±	
1			±
2			±
3			±
4			±
5			±
6			±

Filament lamp	Current / A	Potential difference / V
Reading	±	±
1		
2		
3		
4		
5		
6		

DATA PRESENTATION AND ANALYSIS

1. What does your graph in Step 6 indicate about the relationship that exists between the potential difference and the current?

2. Calculate the resistance of the resistor as requested in Step 7. Calculate the degree of uncertainty in your measurement.

3. What are the relationships suggested by the graphs of power versus current and power versus potential difference for the resistor?

4. Using the equations $P = VI$ and $V = IR$ and your graphs, derive expressions for power as a function of current and power as a function of potential difference.

CONCLUSION AND EVALUATION (use extra paper)

What conclusions can be drawn from your analysed data? (Be sure to address the sources of error and suggest possible modifications or improvement that could have been made).

Name _____ Date _____ Class _____ Time: 45 mins

ASSESSMENT

You may be assessed using school-based criteria:

BACKGROUND

The basic electrical circuit can be thought of as an ‘input transducer’ and a ‘load’. The input transducer is the device that converts energy into electrical energy. For example, a cell converts chemical energy into electrical energy. The load is generally the device in which the electrical energy is converted back into another form of energy. For example, an electrical motor converts the electrical energy into kinetic energy and a resistor converts the electrical energy into thermal energy. We can think of the electric current as the means by which the electrical energy is transferred to the load. All input transducers possess a property called “internal resistance” and it is essentially this property that determines the maximum current and the maximum power that can be delivered by the transducer.

In this experiment, you will measure the internal resistance of a battery consisting of four dry cells (the transducer) each with a nominal emf of 1.5 V. You will also determine the emf of the battery and the value of the load resistance for which the power delivered by the battery to the load is a maximum. The load is a 0-15 Ω variable resistor.


If the battery has an emf E and the current drawn from the battery is I when the potential difference across the load is V then:

$$E = Ir + V$$

Where r is the internal resistance of the battery.

METHOD

Set up this circuit to measure V and I for different settings of the variable resistance.

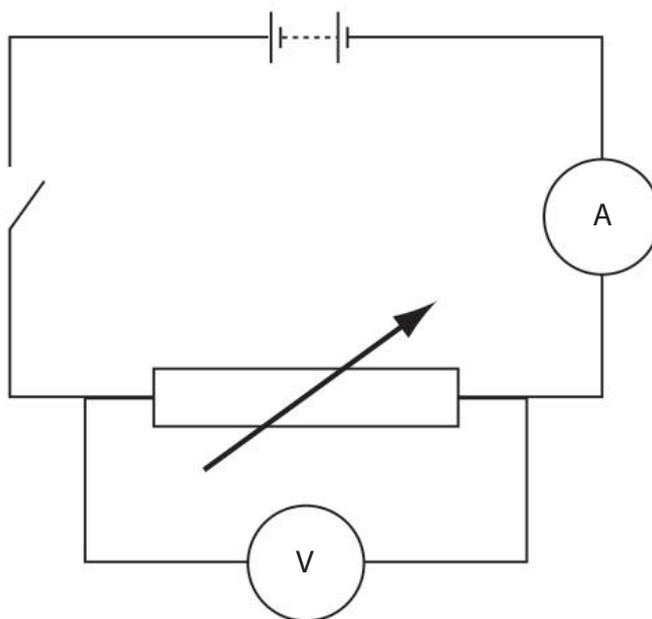

DATA COLLECTION

Prepare a suitable table for your data.

DATA PRESENTATION AND ANALYSIS (use extra paper)

1. Use a grid to plot an appropriate graph from which a value of E and r can be determined.
2. Calculate E and r
3. Use the data that you have recorded to find the power (P) delivered to the load for different values of the resistance (R) of the load.
4. Plot a graph of P against R and use this graph to find the value of R for which P is a maximum and comment on this value.

CONCLUSION AND EVALUATION

You should evaluate your experiment in accordance with the different aspects of the evaluation criteria.

Name _____ Date _____ Class _____ Time: _____

AIM


The purpose of this experiment is to show that the magnetic force on a current carrying conductor is proportional to the strength of the magnetic field and to the current in the conductor.

MATERIALS

You will require the following apparatus


- Top pan balance reading up to 1 kg
- 8 'magnadur' magnets
- A mild steel yoke
- Bare copper wire 2mm in diameter
- 12 V battery (dry cells)
- Ammeter
- Rheostat (0-15 Ω)
- Connecting wires and crocodile clips.

The experimental set-up is shown in the diagram.

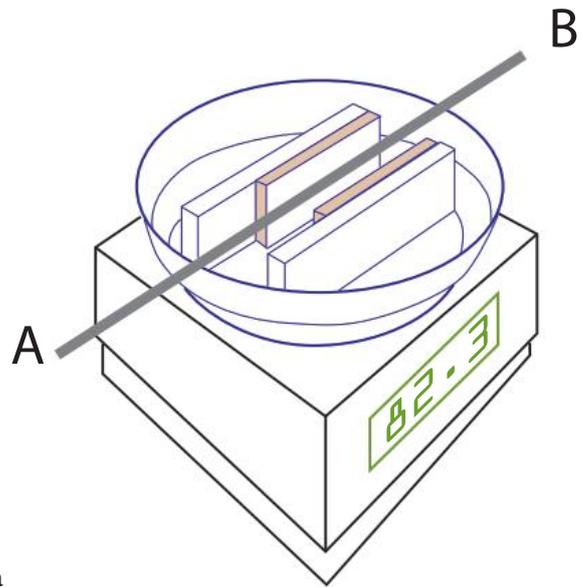

METHOD

1. Mount two magnets in the yoke and set the yoke inside a plastic dish as shown. The dish is of such a height that when placed on the balance the wire AB rests between the magnets as shown.
2. Below is the simple circuit diagram required for varying the current through the wire AB.
3. Connection should be made to the ends of wire AB with crocodile clips and the direction of the current should be such that the magnetic force on the wire is downwards.
4. Record the initial reading on the balance and then switch on the circuit with the rheostat set at its maximum value. Gradually increase the current until you obtain a noticeable difference in reading on the scale of the balance. Record this difference and the value of the current.
5. Analyse your results in an appropriate way to show that the force on the wire AB is proportional to the current through it.
6. Repeat the experiment using four magnets and six magnets and use the results from this experiment to show that the force on the conductor is proportional to the strength of the magnetic field.

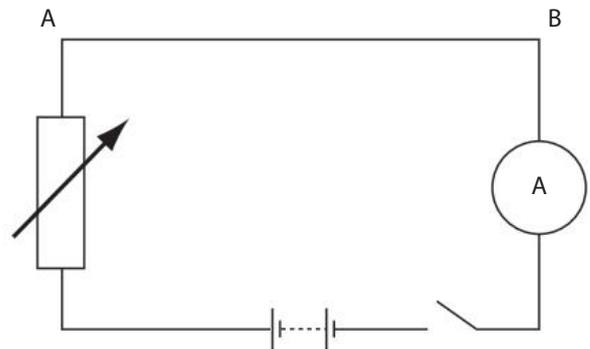

Present your report on separate paper

Name _____ Date _____ Class _____ Time: _____

You may be assessed using school-based criteria:

BACKGROUND

This investigation studies motion in a horizontal circle with uniform speed. The circulating mass is a rubber bung and the necessary centripetal force is provided by the tension in a piece of cord attached to the bung at one end and loaded with weights at the other. The cord passes through a short length of glass tubing.


To set the bung in horizontal circular motion, hold the glass tube firmly above your head and support the weights with your other hand. Move the glass tube in small circles to start the bung rotating and then release your hold on the weights. Practise this until you can whirl the bung at a steady rate and at a chosen radius without the cord slipping over the rim of the tube.

The apparatus is very simple but you must take a series of measurements. Be patient and think carefully about several major sources of error.

In each case, you will plot a graph that will enable you to assess whether or not the theory on uniform circular motion has been confirmed.

You will also be asked to deduce the value of the acceleration due to gravity “g” from each graph and to compare your values obtained with the standard value.

Warning: This investigation must be carried out in a manner that does not endanger property or other individuals. It is best done outdoors. Make sure that the apparatus is safe before beginning the investigation.

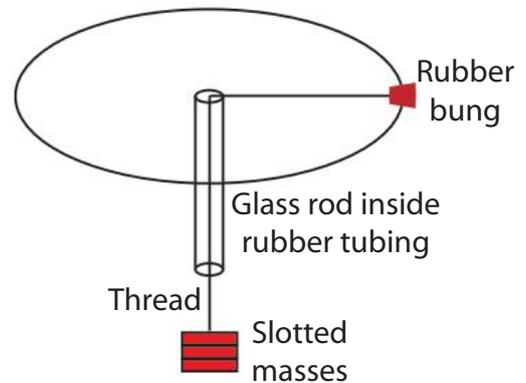

AIM

To investigate the relationship between the orbital period of a body moving with uniform circular motion and:

- the radius of the circular orbit of the body while keeping the centripetal force on the body constant.
- the centripetal force on the body while keeping the orbital radius of the body constant.

EQUIPMENT

Slotted masses and a mass carrier, thick-walled glass tube 15 cm long with an internal diameter of 5 mm and fire-polished ends, rubber bung/stopper, nylon thread 1.5 m long with a 10 kg breaking strain, alligator clip, stopwatch, weighing machine.

METHOD

1. Measure and record the mass of the rubber bung.
2. Thread one end of the nylon thread through the glass tube and tie it securely to the stopper.
3. Attach the 50 g mass carrier to the other end of the nylon thread through the glass tube until the radius of the stopper's orbital path is 1 metre. Place the alligator clip just below (3mm) the glass tube.
4. Whirl the stopper above your head with horizontal uniform circular motion of radius 1 m. Make sure the alligator clip stays just below the glass tube at all times.
5. Working in pairs, measure and record the time for 20 complete revolutions of the stopper which is executing uniform circular motion. Record the data in a suitable way.
6. Complete and record the radius, the time for 20 revolutions, the period and the period squared for the stopper's uniform circular motion. You must give the degree of uncertainty for the measurements recorded.
7. Repeat the procedure four times with varying orbital radii.
8. Repeat the above procedure, this time varying the centripetal force while keeping the orbital radius constant.
9. Record the centripetal force in grams weight. Then, calculate and record the centripetal force in newtons.
10. Complete and record the period, mass and the reciprocal of the period squared for the stopper's uniform circular motion. You must give the degree of uncertainty for the measurements recorded.
11. Repeat the procedure four times with different masses added to the mass carrier.

DATA COLLECTION (use separate paper)

DATA PRESENTATION AND ANALYSIS

Use the data to determine the relationship between orbital period and (a) the radius and (b) the centripetal force as stated in the Aim.

Also find from the data, a value for the acceleration due to gravity.

CONCLUSION AND EVALUATION

In the discussion that follows, you should explain what inferences you have reached with regards to the aims of the investigation. You should evaluate the results of the investigation and the procedures used and suggest modifications to the procedures. This infers that you will discuss the types of errors you encountered during the practical.

Name _____ Date _____ Class _____ Time: _____

In this experiment you may be assessed using school-based assessment criteria:

BACKGROUND

In a sample of a radioactive element it is not possible to predict which particular atom will undergo decay or when. The event is completely random. If for example we could observe just one atom we are unable to say that it will decay within a given time. However, if we could observe to atoms then we can say that we now have twice the chance of observing one of them decay in a given time. Increase the number of atoms and we further increase the chance. In fact we can say that the chance of observing an atom decaying is proportional to the number of atoms present in the sample. This is essentially the law of radioactive decay.

In this investigation one uses beer foam to simulate the exponential decay of a radioactive substance.

AIM

In this experiment we simulate the decay process using the height of beer foam as time progresses.

MATERIALS

500 mL measuring cylinder, masking tape, non-alcoholic beer, centimeter ruler, stopwatch.

METHOD

1. Place a strip of masking tape along the vertical scale of the measuring cylinder so that the beer liquid level can be marked at equal time intervals.
2. Pour the beer into the measuring cylinder until the foam nearly reaches the top.
3. Quickly mark the beer liquid level on the tape and start the stopwatch.
4. Mark the beer level every 5 seconds. Do this for as long as you can, up to two minutes.
5. When you no longer notice any change in beer liquid level, continue waiting for another two to three minutes until as much foam turns into liquid as possible. Some beer foam will remain on the inside of the measuring cylinder.
6. Now record the maximum beer liquid height on the tape.
7. Measure the beer height that is marked on the tape, and then record the height and the time for each mark on the tape.

DATA PRESENTATION AND ANALYSIS

1. Plot a graph of the beer liquid level against time.
2. It should show an increasing level (as we would expect because more foam becomes liquid) and a gradient decreasing with time (because less foam remains to turn into liquid).
3. The decreasing gradient suggests that the decay of foam may be exponential—there is less foam remaining, there is less beer mass per unit time that changes from foam to liquid.
4. Plot another graph of the natural logarithm of beer foam against time and calculate the decay constant λ . The value obtained should be around -0.012 s^{-1} .

Present your report on separate paper

Name _____ Date _____ Class _____ Time: _____

You may be assessed using school-based criterion:

BACKGROUND

Linacs are used to make radioisotopes for medical diagnosis and therapy. The X-rays produced by synchrotron radiation can be used to study the structure of matter at the molecular level. A machine that is more commonly used for medical purposes is the **cyclotron** that was invented by Ernest O Lawrence in the 1930s. A schematic diagram of a cyclotron is shown in diagram below. The cyclotron is basically like a linac that has been wrapped into a tight spiral. It has the following important components:

- a source of charged particles usually protons, deuterons or helium nuclei
- 2 semi-circular boxes called **dees**
- a uniform magnetic field
- an evacuated chamber
- an high-frequency alternating potential difference

Protons are injected into the first D-sector near the centre of the cyclotron and they move in a circular path according to $r = mv / qB$. If the proton takes time t to move a distance πr through this dee, then $t = \pi r / v$. Therefore, from these equations:

$$t = \pi m / qB$$

This demonstrates that the time to travel around a 'dee' is constant for a constant magnetic field intensity, and that the time is independent of the velocity and radius.

There is a high-frequency alternating potential difference between the dees that accelerates the protons into the second D-sector. Since their velocity has increased they will now travel in a path of larger radius because $r = mv / qB$. After leaving the second D-sector, the polarity of the potential difference is reversed and the proton is again accelerated into the first D-sector. The protons follow a spiral path that can consist of hundreds of loops. Upon reaching the maximum radius loop, the protons are deflected by a charged plate and are incident on a target material with energies of up to 25 MeV.

The energy gained E can be calculated for any radius according to:


$$E = \frac{1}{2} m v^2 = \frac{1}{2} m (qBr / m)^2$$

Since the potential difference must reverse twice each cycle, then the period T of each cycle will be given by:

$$T = 2\pi m / qB \text{ and therefore } f = qB / 2\pi m$$

This frequency is known as the **cyclotron frequency** or the **resonance frequency**. This is usually 10 MHz which is in the radio frequency range.

When the particles have energies of about 20 MeV, they become appreciably more massive according to the theory of relativity. This slows them down and they become unsynchronised with the alternating potential difference when they travel across the gaps between the dees. The solution is to use a synchro-cyclotron. An oscillator (radio-frequency generator) that accelerates the particles around the dees is automatically adjusted to stay in step with the accelerated particles.

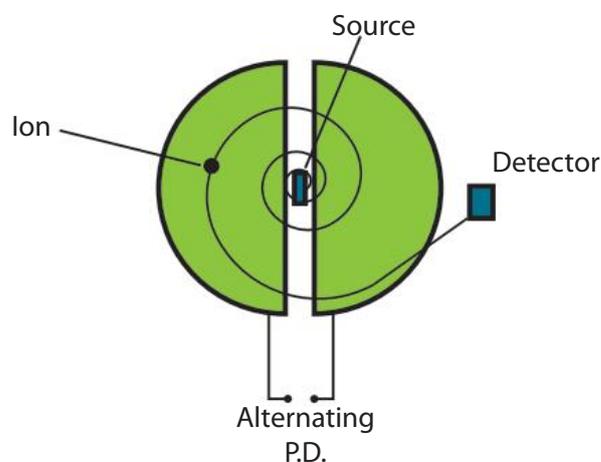

The principle of a cyclotron

The importance of radioisotopes for diagnostic and therapeutic use has increased greatly in medicine over the past 25 years. Many governments have commissioned cyclotron facilities to produce radioisotopes and to carry out research. These facilities are usually connected to a major hospital which in turn is connected with a university that specialises in medical research.

PREPARATION FOR THE VISIT

Do an internet search to find the most convenient location of a cyclotron in your area, and make a note of the telephone number of the Public Relations department. Also do some background reading on cyclotrons.

DURING THE VISIT

Make sure that you have prepared a series of questions that you may wish to ask the specialists who operate the machines. Do not rely on your teacher to do all the talking!

REPORT

If you go as a part of a school group you will obviously need to follow the advice and guidelines given by your teacher. If you go by yourself or with a small group of students the following headings may help your learning.

- the history and development of cyclotrons
- the theoretical physics that underlie cyclotrons
- particular applications of cyclotrons
- possible future developments of cyclotrons

You could consider the best way to present this information and using a movie or still digital camera and using the images to build a PowerPoint Presentation is a very effective medium.

Name _____ Date _____ Class _____ Time: _____

BACKGROUND

Dosimetry is the study of radiation. Recall that radiation can be transmitted in the form of electromagnetic waves or as energetic particles, and that when sufficient energy is absorbed by an atom, it can cause the release of electrons and the formation of positive ions. When radiation causes ions to form it is called **ionising radiation**. Ionising radiation is produced by X-rays, CAT, radioactive tracers and radiopharmaceuticals, as well as by many other natural and artificial means.

When ionising radiation penetrates living cells at the surface or within the body, it may transfer its energy to atoms and molecules through a series of random collisions. The most acute damage is caused when a large functioning molecule such as DNA is ionised leading to changes or mutations in its chemical structure. If the DNA is damaged it can cause premature cell death, prevention or delay of cell division, or permanent genetic modification. If genetic modification occurs, the mutated genes pass the information on to daughter cells.

Since the body is 65% water by weight, most of the radiation energy is absorbed by the water content. This energy can produce ions (H^+ , OH^- , H_3O^+) and electrically neutral free radicals of water. These ions and free radicals can cause chemical reactions with other chemical constituents of the cell. For example, OH^- ions and OH free radicals that form the strong oxidising reagent hydrogen peroxide (H_2O_2), can interfere with the carbon-carbon double bonds within the DNA molecule causing rupture of the double helical strands. Free radicals may also cause damage to enzymes that are required for the metabolism of the cell or they can effect the membranes that are vital for the transport of materials within the cell.

Ionising radiation appears to affect different cells in different ways. Cells of the reproductive organs are very radiation-sensitive and sterility is a common outcome after radiation exposure. Bone and nerve cells are relatively radiation-resistant. However, radiation of bone marrow leads to a rapid depletion of stem cells that can then induce anaemia or even leukemia. Exposure to radiation results in a range of symptoms including skin burns, radiation sickness (nausea, vomiting, diarrhoea, loss of hair, loss of taste, fever, loss of hair) and cancer, leukemia and death.


External exposure to α particles is fairly harmless as they will be absorbed by a few microns of skin. Internal exposure after ingestion is very damaging as the α -particles are very ionising and they can interact with body fluids and gases. β -particles are more penetrating but because of their irregular paths upon entering body tissue they are considered to have low ionising ability. X-rays and γ -radiation have high ionising ability (but not as high as ingested α -particles), and are a common cause of disruption to normal cellular metabolism and function. The exposure time to the radioactive source has to be carefully monitored.

As the intensity of the radiation obeys the inverse square law for distance from the source, keeping a safe distance from the source is the best means of protection. Workers in the industry often use mechanised calipers and tongs that operate within a confined area behind thick lead-glass viewing windows to manipulate the radioactive source.

Shielding materials are always used. For example, a suitable thickness of perspex sheet will stop beta rays, and lead, concrete and water will absorb gamma and X-rays. Lead aprons are often used on patients to stop any stray radiation. All radioactive sources must be completely contained to prevent the spread of contamination.

Radiation detectors such as a film badge as shown below or a thermoluminescent dosimeters (TLD) are worn by all workers employed in any industry using ionising radiation. The **film badge** is basically a double emulsion photographic film that is placed inside a holder with an area of 3 cm by 5 cm that contains different thicknesses of plastic, an open window and 3 different metal plates. It is pinned to clothing and over a period of time the exposure to radiation results in a darkening of specific areas of the photographic film. One side is coated with a large grain, fast emulsion that is sensitive to low levels of exposure. The other side of the film is coated with a fine grain, slow emulsion that is less sensitive to exposure. If the radiation exposure causes the fast emulsion in the processed film to be darkened to a degree that it cannot be interpreted, the fast emulsion is removed and the dose is computed using the slow emulsion.

The β -dose is monitored by comparing the blackening through the open window and different thicknesses of plastic. The dural (an alloy of aluminium) window absorbs beta and low-voltage X-rays and gamma rays. The lead/tin window absorbs all but the highest energy X and gamma rays. The cadmium/lead window absorbs most of the X and gamma rays but thermal neutrons interact with the cadmium to produce gamma radiation which blackens the film. Refer to Figure below.

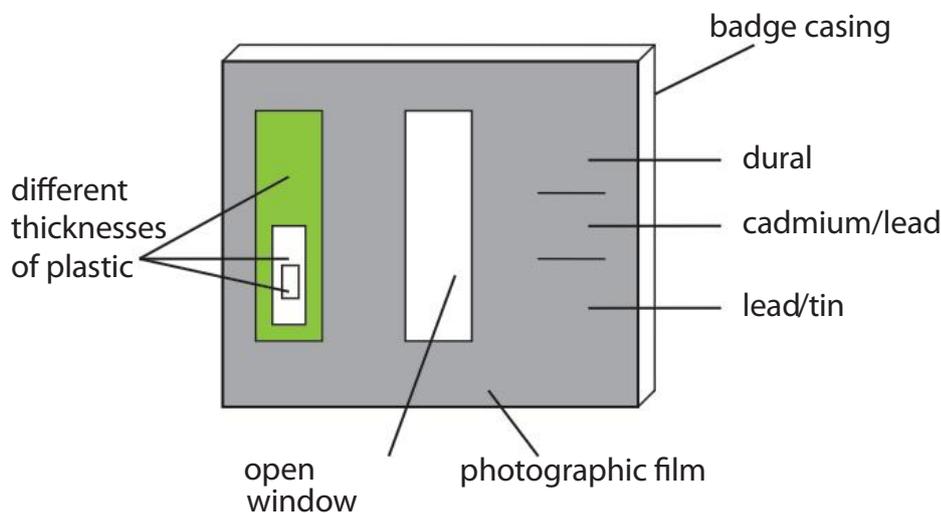

The badges are assessed every two to four weeks and the TLD every 3 months. The ICRP recommends that the effective dose to industry workers should not exceed an average of 20 mSv per year over any five-year period, with the proviso that the effective dose should not exceed 50 mSv in any one year. Members of the public should not receive more than 1 mSv per year from non-medical, artificial sources. It is considered that a dose of 250 mSv of whole body irradiation, or 750 mSv to a part of the body is an overdose.

For the patient, it is known that radiation doses to the bone marrow in the order of 3 000 to 4 000 mSv have lethal effects within a month in about half of the exposed people in the absence of specialised medical treatment. Single doses over 2 000 mSv absorbed by the testes or 3 000 mSv absorbed by the ovaries can cause permanent sterility. The specialised medical treatment in the case of doses up to 10 000 mSv would include isolation of the patient in a sterile environment, selective treatment with antibiotics and stimulation of leukocyte production in order to offset damage to white blood cells. Bone marrow transplant may also be necessary. So you can see that protection is paramount in any medical diagnosis or therapy.

Many countries in the world have atomic and nuclear facilities whether they are commercial or experimental in nature. There is usually an educational research unit with dedicated education officers where groups from schools can visit for the purpose of understanding the operation of a nuclear fission reactor and dosimetry measuring methods. These units are well prepared for school groups and you are likely to leave with an array of brochures and samples that will be made available free of charge.

You will most likely be shown a video of the operation of a nuclear fission reactor, and if you are lucky, you will be taken inside the nuclear reactor facility. You will be issued with protective clothing and you will be tested for radiation when you leave the complex.

Finally, radiation measuring techniques will be demonstrated and you will analyse the safety of nuclear reactors in terms of the radiation that is produced by them.

PREPARATION FOR THE VISIT

Do an internet search to find the most convenient location of an atomic energy facility in your area, and make a note of the telephone number of the Public Relations department. Also do some background reading on the particular form of atomic energy that interests you.

DURING THE VISIT

Make sure that you have prepared a series of questions that you may wish to ask the specialists who operate the machines. These people are experts in their field, and they are very good in explaining things on a basic level. It will make their job a lot easier if they can see that you have come prepared with some questions. Do not rely on your teacher to do all the talking!

REPORT

If you go as a part of a school group you will obviously need to follow the advice and guidelines given by your teacher. If you go by yourself or with a small group of students the following headings may help your learning.

- the history and development of this atomic energy facility
- the theoretical physics that underly this atomic energy facility
- particular applications of this atomic energy facility
- advantages and disadvantages of this atomic energy facility
- possible future developments of this atomic energy facility

You could consider the best way to present this information. Using a movie or still digital camera and using the images to build a PowerPoint Presentation is a very effective medium.

Name _____ Date _____ Class _____ Time: _____

You may be assessed using school-based criteria:

BACKGROUND

Using the Law of Conservation of Energy allows many investigations involving rotational motion to be solved. Bodies rolling down an incline and falling weights that cause rotation are the usual types of investigation that lead to a value for the moment of inertia of a body.


In most cases, the loss in gravitational potential energy equals the increase in translational kinetic energy plus the increase in rotational kinetic energy.

$$mgh = \frac{1}{2}mv^2 + \frac{1}{2}m\omega^2$$

$$mgh = \frac{1}{2}(mr^2 + \frac{1}{2}I)\omega^2$$

The schematic diagrams that are provided show two possible ways for determining the moment of inertia of an object.

In the falling weight investigation, different weights attached to the thread produce different accelerations of the small disc. Therefore, the angular velocity of the disc can be determined. Will both discs have the same angular velocity? By collecting the relevant data, and plotting a graph to determine the required relationship, the moment of inertia can be obtained from the graph. The value for the moment of inertia can be compared with the value obtained by an empirical method i.e. by using the theoretical formula for the disc and calculating the mass and radius of the small disc. The timing device used here is a fork attached to the large disc to break an electrical contact to a digital timer. You could use a stopwatch, photo-gate or a computer software package or other method. Each method has its own degree of accuracy.

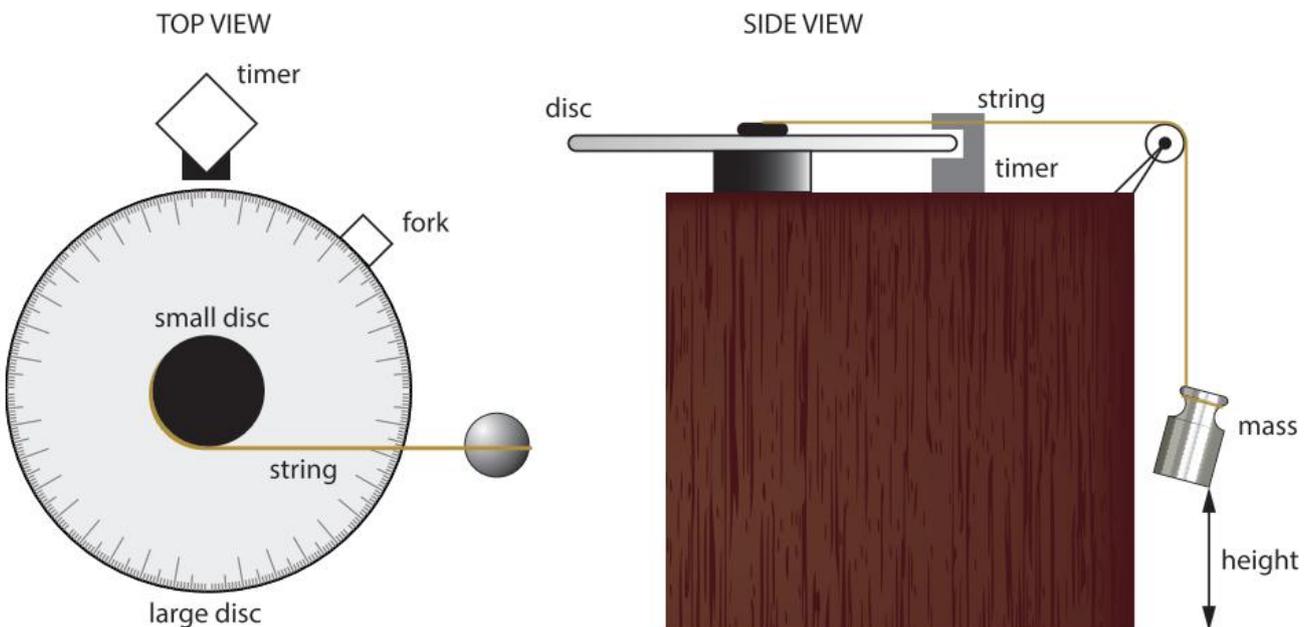

The incline method can employ the same timing devices. One timing device you may wish to explore is the use of a video camera. Most cameras operate at 25 frames to the second.

Name _____ Date _____ Class _____ Time: _____

AIM


To investigate the conditions for the static equilibrium of a rigid body in terms of the applied forces and the resultant torques.

EQUIPMENT

A metre rule, thread, slotted masses, retort stands.

METHOD

- Set up the apparatus, as shown in the diagram, with the ruler hanging from two Newton balances at the 10cm and the 90 cm ends respectively. Place the remaining three string loops at the 30, 50 and 70 cm marks with masses of 500 grams attached to each. Record the readings of the Newton balances together with that of the masses in the table below.

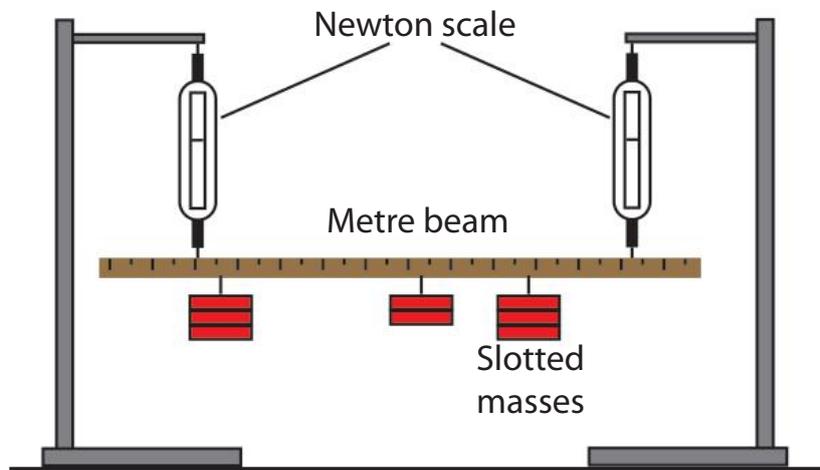

Repeat for different masses attached to different points along the ruler.

- Finally, move the retort stands so that the Newton balances are at an angle to the vertical. Record the readings and angles of the balance.

DATA COLLECTION

Design suitable tables and record data (use separate paper).

Name _____ Date _____ Class _____ Time: _____

Background

The muscular-skeletal system usually consists of antagonistic pairs of muscles that are attached to the bones by tendons. The muscles and bone within the body segments are moved by a system of levers. Nodding your head is an example of a 1st class lever, standing on your tip-toes is an example of a 2nd class lever, and bending your arm is an example of a 3rd class lever.

The centre of gravity of a body is frequently the point in a system that is used for motion analysis. Often we see little white stickers placed at certain points on a crash test dummy in automobile collision tests. Apart from the overall centre of gravity, each body segment has its own mass and weight as well as its centre of gravity. The standard segmental centre of gravity locations are shown in *Figure 1*.

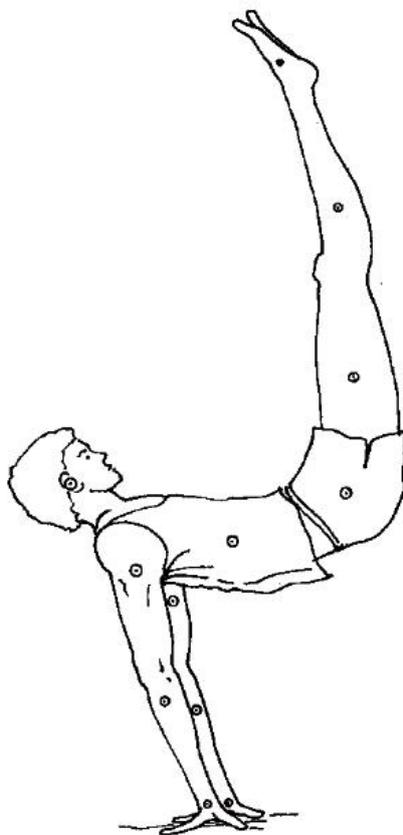


Figure 1. Centre of gravity locations

In this investigation the board and scale method will be used to determine the location of the centre of gravity relative to the soles of the feet using the Law of conservation of force and the Law of conservation of torque. The ends of the board are supported on a set of bathroom scales by triangular wedges.

Regardless of where a subject stands or lies on the board, the sum of the two scale readings will equal the sum of the subject's body weight and the weight of the board. (see Figures 2 and 3). If the board is placed on the scales, and the scales are set to a zero reading, the effects of the board's weight can be ignored in the whole body centre of gravity determination.

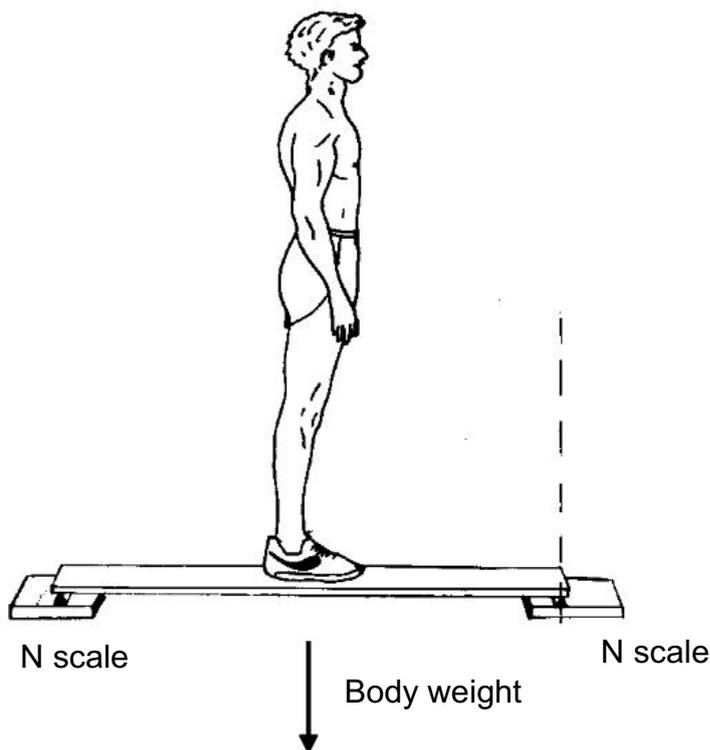


Figure 2

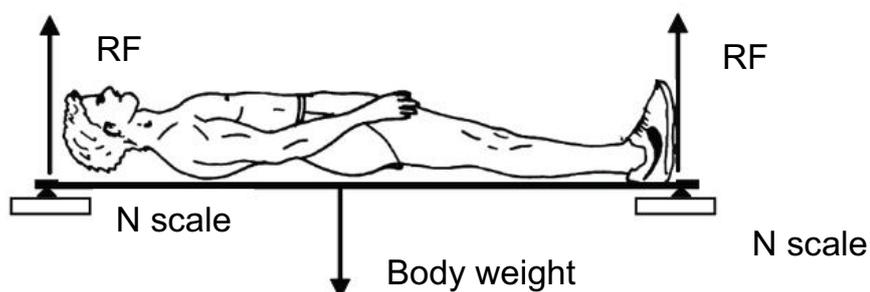


Figure 3

An axis of rotation is selected so that the sum of the torques on the system can be found. If the soles of the feet are taken as the axis of rotation, then:

$$\Sigma T = 0$$

$$\text{Weight}_{\text{person}} (x) + \text{Reaction force}_{\text{scale}} (\text{length of the board}) = 0$$

AIM

To calculate and compare the height of a whole body centre of gravity for males and females using the board and scale method.

EQUIPMENT

reaction board, 2 newton or bathroom scales, 2 triangular supports, male and female subjects.

METHOD

1. Measure the length of the board in metres.
2. Find your weight on a newton balance. Your partner of the opposite sex repeats for his/her weight.
3. Place the board on the newton scales so that the supports are as close to the edges as possible. Record the weight of the board.
4. Set the scale readings to zero.
5. Stand in the middle of the board with your arms by your sides, and record the scale readings. Repeat for your partner.
6. Determine the height of the centre of gravity for a male and female in the standing position.
7. Now lay on the board and take the scale readings. Repeat for your partner.
8. Determine the height of the centre of gravity for a male and female in the lying position with respect to the soles of the feet.

DATA COLLECTION

Weight of male	=	
Weight of female	=	
Length of the board	=	
Weight of board	=	

Standing

Scale readings of male	=		=	
Scale readings of female	=		=	

Lying Down

Scale readings of male	=		=	
Scale readings of female	=		=	

Complete your report using the following headings on separate paper:

DATA PRESENTATION AND ANALYSIS

CONCLUSION and EVALUATION

Investigation 15A (Option C)

FOCAL LENGTH OF A CONVERGING LENS

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school-based criteria:

BACKGROUND

The focal length of a convex lens will be determined by a number of alternative methods. You will be required to compare the accuracy of these methods as part of your assessment of the evaluation criteria.

The lens equation can be stated as $\frac{1}{f} = \frac{1}{u} + \frac{1}{v}$

where f is the focal length, u is the object distance, and v is the image distance.

AIM


To determine and compare the uncertainty in the focal length of a convex lens using a number of alternative investigations.

EQUIPMENT


Convex lens and holder, plane mirror, circular hole with cross-wires or a fine gauze triangle, lamp and holder, screen, metre rule.

METHOD

1. Focus the image of one of the classroom windows or another distant object on the screen provided.
2. Measure the distance between the lens and the screen to determine a value of the focal length of the lens.
3. Set up the lamp and holder, as shown in the diagram below, and place the gauze or the cross-wires at the focal length determined in Step 2.
4. Position a plane mirror about 10 cm behind the lens perpendicular to the principle axis.
5. Slowly move the gauze or cross-wires until a sharp image of the gauze or cross-wires is formed alongside them.
6. Measure the distance from the object to the centre of the lens.
7. Repeat this procedure a number of times and find the average distance and its uncertainty.

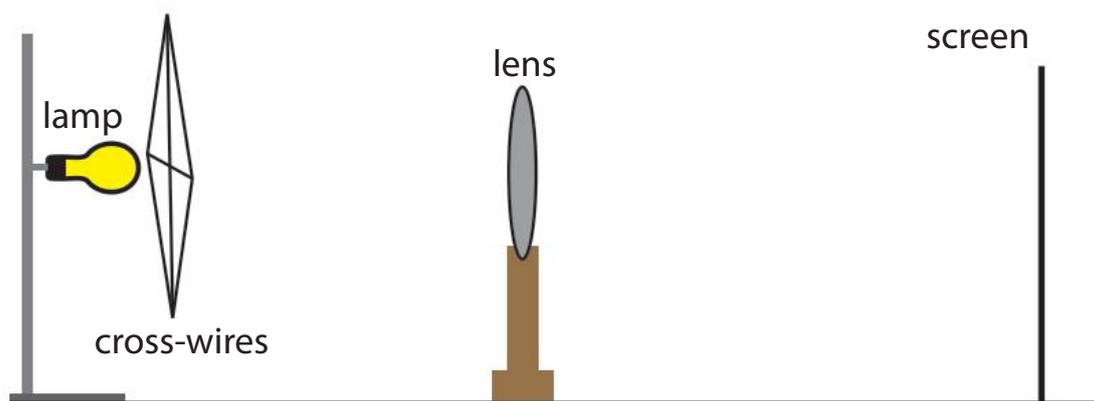

8. Place the cross-wires at a distance approximately two times the focal length and replace the mirror with a screen.
9. Measure the object distance, u , and the image distance, v .
10. Repeat this procedure at least five more times for different object distances from the lens.

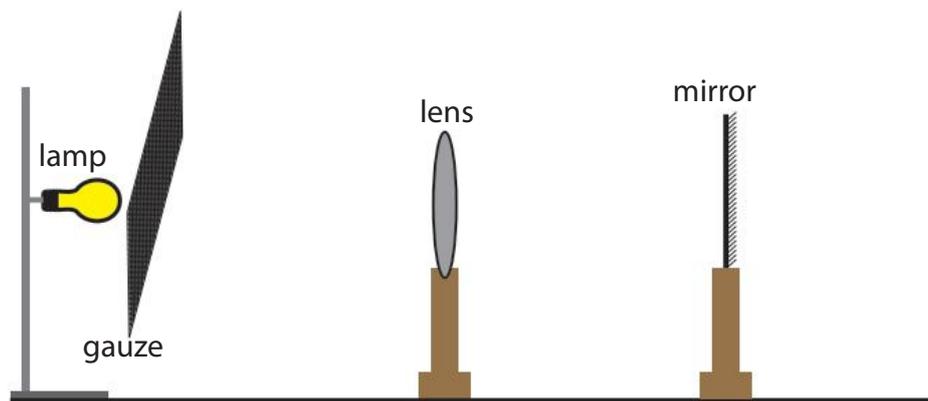

DATA COLLECTION

1. Approximate value of the focal length = _____
2. Design and use tables to record your data.

DATA PRESENTATION AND ANALYSIS (use extra paper)

1. Explain, with the aid of a ray diagram, why the distance from the gauze to the lens is equal to the focal length when the object and image coincide, when you used the auxiliary mirror.
2. Explain why the position of the mirror does not affect the value of the focal length.
3. Plot a graph that enables you to determine the focal length of the lens.

CONCLUSION and EVALUATION

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school-based criteria.

BACKGROUND

The refracting telescope is one of a number of telescope instruments. The purpose of a refracting telescope is to make distant objects appear closer and therefore larger. This is achieved by placing two converging lenses with different focal lengths in certain positions on an optics bench or similar device.


The **first lens**, the objective has a long focal length and forms a real image in its focal plane when a distant object is viewed through it alone. When a **second lens**, the eyepiece is placed at a distance so that the real image of the objective acts as a real object in the focal plane of the eyepiece, then the eyepiece magnifies the real image and produces a virtual image at infinity. The normal position of the separation of the lenses is equal to the sum of their focal lengths.

The brightness and area of the image can vary if the eye is too near or too far in distance from the eyepiece. When the eye is in the correct position the full image can be seen and no halo is observed. If the eye is too near or too far then part of the image is obscured and a halo is formed around part of the image. The method used for locating the correct eye position is called 'locating the eye ring'. You will need to practise this part of the investigation. The position of the eye ring (in theory) is the position of the image of the objective lens, itself produced by the eyepiece.

It can be shown that the angular magnification, M , for a set of appropriate lenses is given by:

$$M = \frac{f_o}{f_e}$$

where f_o is the focal length of the objective and f_e is the focal length of the eyepiece.

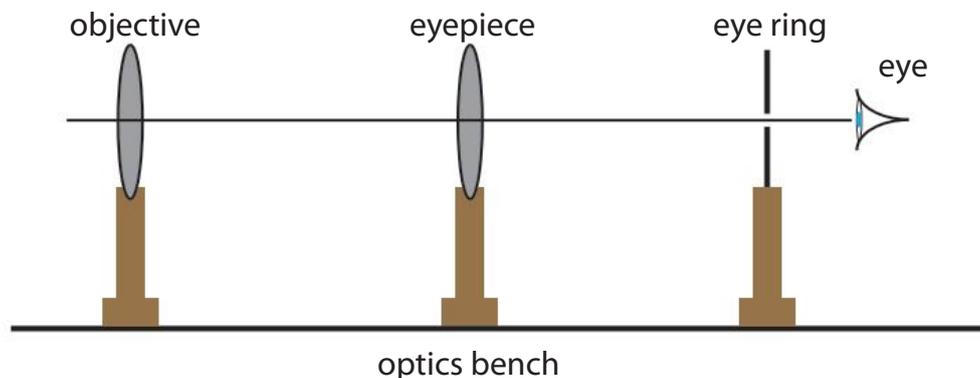

AIM

To construct a refracting telescope and measure and compare its magnification.

EQUIPMENT

Two converging lenses with focal lengths of 10cm and 50cm, optics bench, metre rule, lamp and power unit, greaseproof paper, screen, a card with a hole in it (the eye ring).

METHOD

Part A

1. Determine the focal length of each lens by viewing a distant object and focusing its image on a screen.
2. Determine the angular magnification of the telescope using the equation given in the Background section of this investigation.

Part B

1. Place the lamp and power unit on the far side of the laboratory and turn the lamp on.
2. Mount the lens with the longer focal length on one end of the optics bench.
3. Point the lens in the direction of the lamp and use a piece of greaseproof paper to locate the image of the lamp.
4. Record the position of the image using the metre rule.
5. Attach the second lens to the other end of the optics bench.
6. Point the optics bench in the direction of the lamp and position the second lens into a position and so that it acts like a magnifying glass for the image on the greaseproof paper that you located and recorded for the first lens.
7. Remove the greaseproof paper and view the image formed of the lamp formed by the telescope.
8. Record the distance to the image from each lens.

Part C

1. Illuminate, with a lamp, a piece of greaseproof paper placed close to the objective.
2. Place the card with a hole behind the eyepiece so that you observe a circle of light.
3. Move the card and your eye until the circle has a sharp outline.
4. Measure the diameter of this image and the diameter of the objective lens.
5. Record these values and find a ratio between the two quantities that is numerically equal to the angular magnification.

Write a report of your investigations on separate paper using the following headings:

DATA COLLECTION

Construct your own data table(s).

DATA PROCESSING AND PRESENTATION

1. Draw a fully labelled ray diagram of the refracting telescope that you constructed.
2. Calculate the angular magnification of the telescope by a variety of methods

CONCLUSION and EVALUATION

Name _____ Date _____ Class _____ Time: _____

BACKGROUND

The purpose of this investigation is to use the information provided for some nearest and brightest stars to construct parts of the Hertzsprung-Russell diagram using a spreadsheet.

You are to design a method that explains the steps that you used in your spreadsheet in order to obtain the Hertzsprung-Russell diagram. It is best to plot the absolute magnitude of luminosity by using the command '=log10' (with the relevant cell to be used). Clicking on the x-axis and then finding the reverse button in the Scale page can reverse the horizontal temperature scale.

SOME NEAREST SINGLE OR MULTIPLE STARS		
NAME	TEMPERATURE (K)	LUMINOSITY (L_{\odot})
Sun	5860	1
Proxima Centauri	3240	0.00006
α - Centauri A	5860	1.5
α - Centauri B	5250	0.43
Barnard's star	3240	0.00044
Wolf 359	2640	0.00002
BD +36° 2147	3580	0.0055
Luyten 726-8A	3050	0.00006
UV Ceti	3050	0.00004
Sirius A	9230	24
Sirius B	9000	0.002
Ross 154	3240	0.00048
Ross 248	3050	0.00011
ϵ - Eri	4900	0.30

THE 15 BRIGHTEST STARS		
NAME	TEMPERATURE (K)	LUMINOSITY (L_{\odot})
Sun	5860	1
Sirius A	9230	23.5
Canopus	7700	1500
Rigel Kentaurus	5860	1.5
Arcturus	4420	104
Vega	9520	55
Capella	5200	150
Rigel	11200	59700
Procyon	6440	7.2
Betelgeuse	3450	19700
Achernar	15400	655
Hadar	24000	8630
Altair	7850	11
α - Crucis	25400	3200
Aldebaran	15400	180

Once you have prepared a spreadsheet and a graph, answer the Data Analysis questions and present your report for assessment.

DATA PRESENTATION AND ANALYSIS

1. Label the horizontal axis further with the spectral type classifications

O	52000-33000 K
B	30000-11000 K
A	9500-7600 K
F	7200-6200 K
G	6000-5600 K
K	5200-4100 K
M	3900-2600 K

2. Include a copy of your H-R diagram
3. Identify the main sequence stars, the red giants and the white dwarfs.

4. Using your diagram, explain the difference between the nearest and brightest stars.

5. Given that the radius of a star is approximately equal to $L/4\pi T^2$, estimate the radius of one selected red giant and one selected white dwarf.

Name _____ Date _____ Class _____ Time: _____

BACKGROUND

This is really an extension of the previous spreadsheet (16A), and a new plot of the HR diagram for different data will be put into your spreadsheet, in order to trace the evolution of the Sun. The radius of the Sun is approximately equal to the square root of its luminosity multiplied by its temperature squared.

AIM

To construct a portion of the Hertzsprung-Russell diagram using a spreadsheet with graphics for the stellar evolution of the Sun.

EQUIPMENT

Computer with printing facilities, software spreadsheet/graphics package (eg. Microsoft Excel), luminosity and temperature values for the stages in the evolution of the Sun.

Age / (yrs)	Temperature / (K)	Luminosity / solar units)
10^6	4800	3.0
10^7	4800	0.3
10^8	5800	0.8
4.6×10^9	5800	1.0
10×10^9	5800	1.8
10.02×10^9	4800	3.0
11×10^9	3400	350

METHOD

1. Open spreadsheet from the previous investigation and type in new headings for luminosity, temperature and age in the appropriate cells.
2. Input the temperatures and luminosities.
3. To plot a graph, open the Chart Wizard, then enter the cell ranges to be plotted.
4. The temperature scale on the Hertzsprung-Russell diagram is reversed with temperature decreasing to the right rather than the left. To reverse this scale, click on the labelled X-axis, enter the axis scale page, and reverse the order of the X-axis.
5. When you are satisfied with the displayed graph print it. This is done by double clicking on the chart, entering the file menu and then clicking print.

DATA PRESENTATION AND ANALYSIS

1. Label the horizontal axis further on your graph with the following spectral type classifications

O	52000-33000 K
B	30000-11000 K
A	9500-7600 K
F	7200-6200 K
G	6000-5600 K
K	5200-4100 K
M	3900-2600 K

2. Attach your H-R diagram of stellar evolution.

3. The radius of a star is approximately equal to its square root of luminosity multiplied by its Kelvin temperature squared. Estimate the radius of the Sun when it becomes a red giant.

4. Describe the stellar evolution of the Sun.


5. Comment on the fate of the planets when the Sun becomes a red giant.

Name _____ Date _____ Class _____ Time: 1 hour

BACKGROUND

The simple pendulum essentially consists of a mass (the bob) suspended from a support by a string. The pendulum can be set into oscillation by pulling the bob back to A and releasing it.

The 'time period' of oscillation is the time it takes for the bob to swing from A to B and back to A.

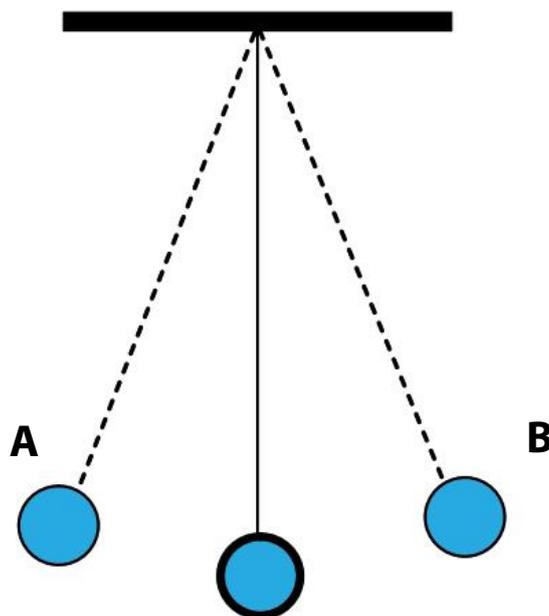

TASK

In this investigation you are asked to identify the factors that you think might affect the period and then investigate one of these factors in detail.

Alternatively you may wish to investigate one factor which may influence the period of the vertical oscillation of a mass on a helical spring.

Name _____ Date _____ Class _____ Time: *i* hour

You may be assessed using school-based criteria:

BACKGROUND

In this investigation you will make an attempt to make your own slits using blackened glass slides and razor blades.

Warning: Always cut away from yourself and onto a board.



You will need to be patient and careful, and it may require several attempts to obtain good interference patterns. However, your teacher may decide to issue you with already prepared slits and thus may not wish to assess your manipulative skills.

You will use white light from the vertical filament in a ray box. A filter will be inserted to reduce the range of wavelengths that will be viewed. This investigation is mainly qualitative and your observations and descriptions will form the basis of your assessment.

Warning: The following Investigation will examine the quantitative aspects of interference and diffraction using a helium-neon laser.



In 1801, Thomas Young (1773-1829) passed white light through pinholes to describe the factors that affected the light intensity of the observable interference patterns. This will be your task in this investigation.

AIM


To produce, observe and describe white light interference and diffraction patterns.

EQUIPMENT


Glass slides, black art paint, razor blades, cardboard, rubber bands, needle, glue, thin gauge copper wire, single-slit slide, double-slit slide, diffraction gratings up to approx. 106 lines per metre, ray box producing a single beam of light, green filter, metre rule, transparent ruler, magnifying glass or binocular microscope, power supply and connecting wires and glue.

METHOD

- Use the following two diagrams to produce single and double slits.

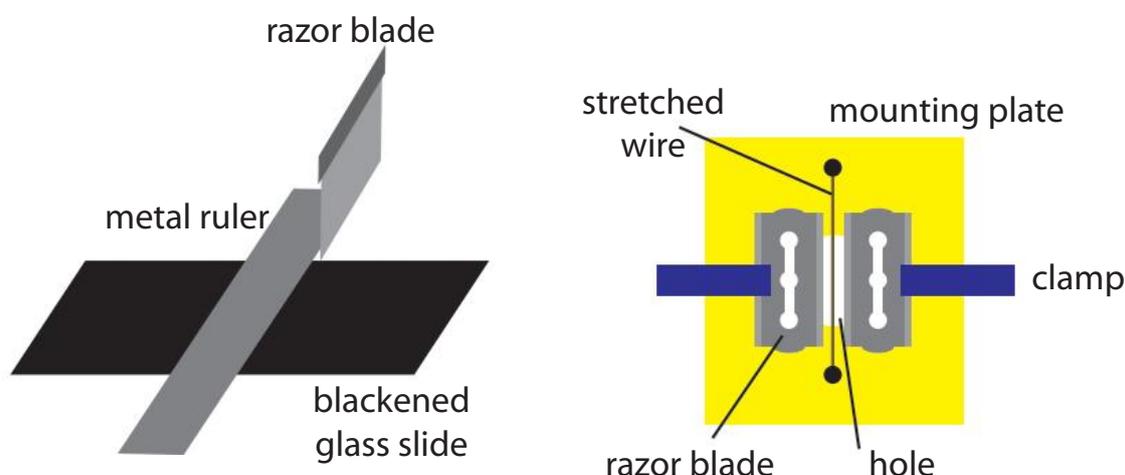

- Set up the apparatus as shown in the following diagram in a darkened room using a red filter.

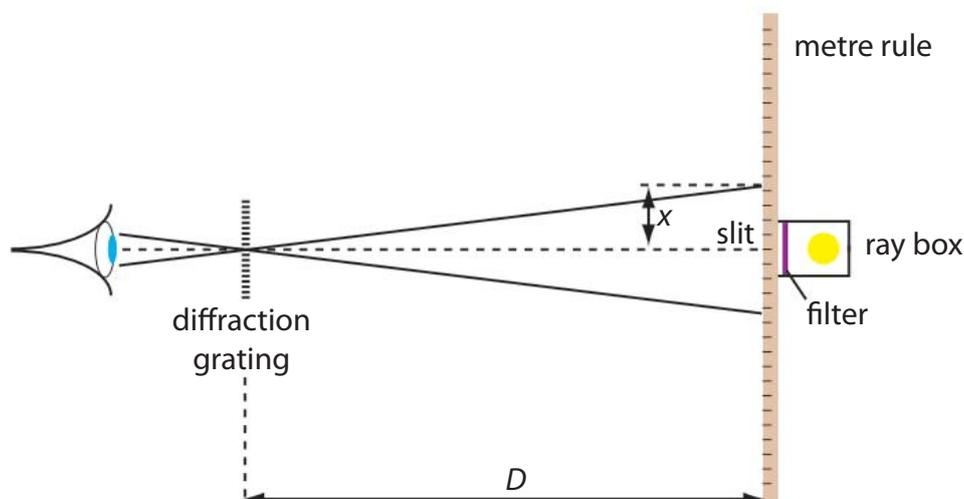

- Look through the diffraction grating at a single beam of white light.
- Vary the distance between the ray box and the diffraction grating and record your observations.
- Repeat using different size diffraction gratings and record your observations.
- Repeat using different light intensity from the ray box and record your observations.
- Place a green filter in the ray box in place of the red filter and record your observations.
- Replace the diffraction gratings with your double-slit and carry out Steps 3-9 again. Be sure to include how the distance between the slits affects the pattern.
- Replace the double slit with the single slit and make as many observations as possible.

Write a report of your investigations on separate paper using the following headings:

DATA COLLECTION

DATA PROCESSING AND PRESENTATION

Comment on the relative intensities, distances of maxima and minima, distance between slits produced by single-slits, double-slits and diffraction gratings.

CONCLUSIONS AND EVALUATION

(Use extra paper as necessary)

Name _____ Date _____ Class _____ Time: *i* hour

You may be assessed using school-based criteria:

BACKGROUND


All elements have an emission spectrum that is characteristic of the element. For elements that are gaseous at room temperature the best way of producing their emission spectra is by means of a discharge tube. A small amount of the element is placed in a sealed glass tube. A potential difference can be applied across the tube by connecting the electrodes at either end of the tube to an EHT supply. When the applied potential reaches a certain value the gas becomes conducting and excitation of the gas atoms takes place and the tube emits light.

In this experiment you will measure some of the wavelengths present in the emission spectra of helium and neon. You will also observe the spectra of oxygen and hydrogen. Oxygen and hydrogen are molecular at room temperature so that in this instance you will be observing a molecular as opposed to an atomic spectrum. To observe the atomic spectra of oxygen and hydrogen they have to be heated up until they become incandescent. This is a procedure not recommended to take place in a school laboratory!

The wavelengths will be measured using a diffraction grating in conjunction with a spectrometer.

The Spectrometer

A plan view of the essential features of a spectrometer is shown below.

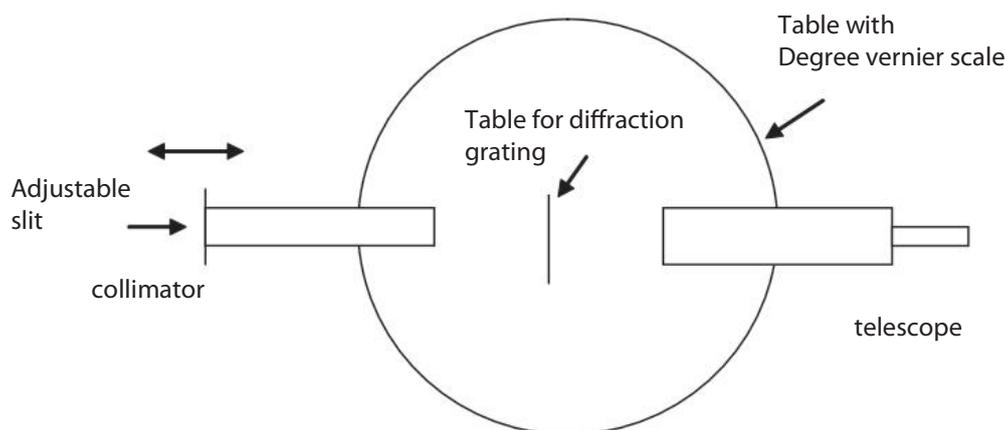


Setting up the Spectrometer

1. Look at a distant object through the eyepiece of the telescope. (The other end of the laboratory is distant enough).
2. Adjust the eyepiece lens until the viewed object is sharply focussed. The telescope is now adjusted for focussing parallel light.
3. Align the telescope with the collimator as shown in the diagram above.
4. Place the neon discharge tube a short distance from the adjustable slit.
5. Adjust the slit width such it is very narrow.
6. Turn out the lights and view the image of the slit formed by the telescope.
7. Move the slit end of the collimator in or out until the viewed image is sharply in focus. This means that light leaving the collimator is now parallel.
8. Turn on the lights and use a spirit level to ensure that the table upon which the diffraction grating is mounted is level.

The Diffraction Grating

The diagram below shows a schematic of the diffraction grating.

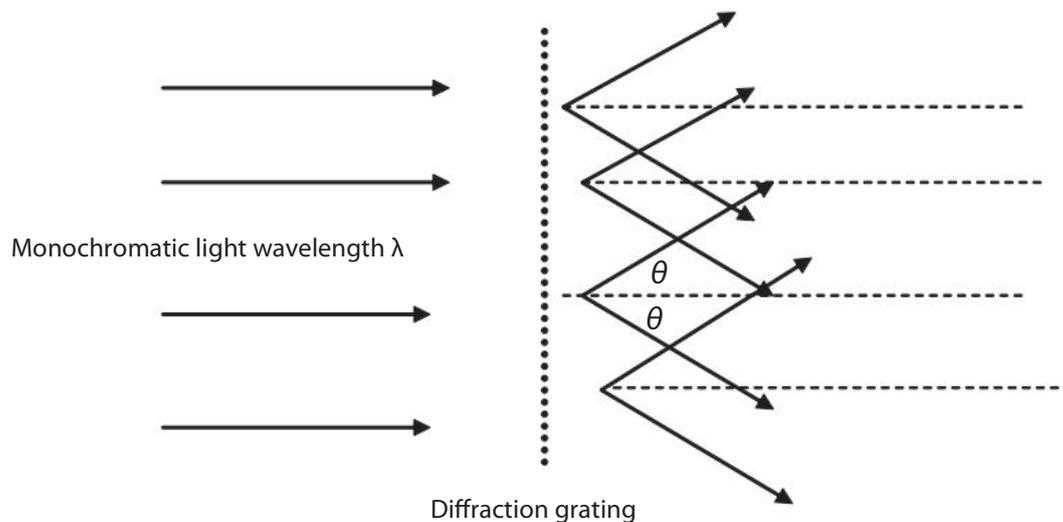

Parallel monochromatic light which is incident normally to the grating will form a first order diffraction image on either side of the normal at an angle θ to the normal given by:

$$d \sin \theta = \lambda \quad \text{where } d \text{ is the line spacing of the diffraction grating.}$$

If the diffracted light is viewed through the telescope then an image of the slit will be formed at this angle. In fact an image of the slit will be formed for all wavelengths present in the light incident on the slit. For the particular element present in the discharge tube an image of the slit will be formed for each of the wavelengths present in the light emitted by the element. (Since we are looking at images of slits, the spectrum is often referred to as a line spectrum).

METHOD

1. The diffraction grating should be placed as near to 90° to the collimator as you can judge.
2. Turn out the lights and rotate the telescope until the first order line spectrum is located. (You might need to cover the spectrometer and your head with a black cloth in order to cut out spurious light). Align the cross-wires of the telescope eyepiece on a particular line and lock the telescope in position. Turn on the lights and record the reading on the vernier scale.
3. Turn off the lights and rotate the telescope to the other side of the normal to the diffraction grating until the first order spectrum on this side of the normal is located. Align the cross-wires on the same spectral line and lock the telescope in position. Turn on the lights and record the reading on the vernier scale.
4. The value of the first order diffraction angle is found by subtracting the two readings and dividing by 2. This procedure of locating the spectrum on each side of the normal takes into account the fact that light might not be incident at 90° to the grating.
5. Repeat for other lines in the spectrum and also check to see if you can locate the second order spectrum. If you can then you should measure the appropriate second order angles. These readings can be used to check the values for the wavelengths that you determine from measurements of the first order spectrum.
6. Repeat the procedure using the helium discharge tube.
7. Your teacher will tell you how many lines per mm the grating has.

8. Use this value and the readings that you have taken to determine the wavelengths of the particular lines you selected.
9. Check your values with the accepted value.
10. You should now look at some molecular spectra and comment on the main differences between the appearance of an atomic spectrum to that of a molecular spectrum.

Present your report under the following headings.

DATA COLLECTION

DATA PRESENTATION AND ANALYSIS



Name _____ Date _____ Class _____ Time: _____

You may be assessed using school-based assessment criteria:

BACKGROUND

You will be using a helium-neon laser in this investigation.

WARNING: Care must be taken not to point the laser dot at anyone's eyes as retina damage may occur. Keep the laser mounted on a solid surface and wear protective goggles if available.



AIM

To determine the wavelength of a helium-neon laser using (a) a double-slit, and (b) a diffraction grating.


EQUIPMENT

Helium-neon laser or laser pointer, adjustable mounting table, protective goggles, tape measure, double-slit slide, diffraction grating, screen, metre rule, travelling microscope if available or a transparent ruler and a magnifying glass.

METHOD

(a) Diffraction grating

1. Set up the apparatus as shown in the diagram below.

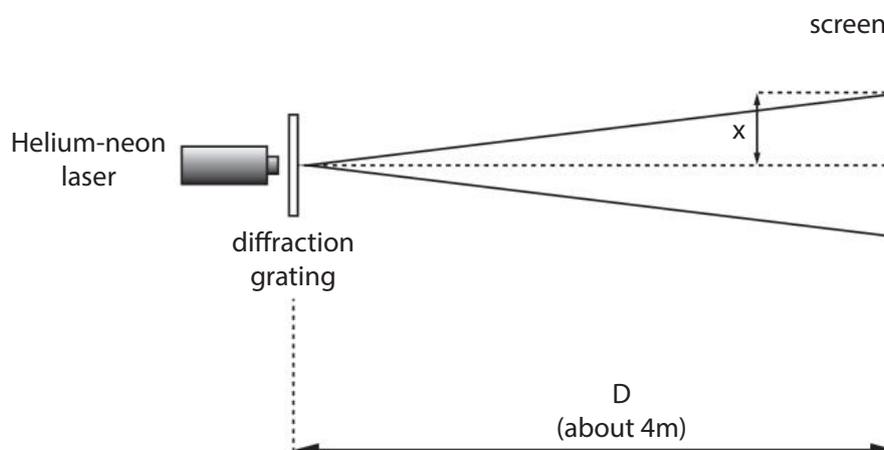


2. Turn on the laser.
3. Record the distance between the central maximum and the first order maxima (x), and the distance from the laser and the screen (D).
4. Record the number of lines per centimetre of the diffraction grating (d).
5. Repeat for different distances (D).
6. Use the relation $\lambda = xd/D$ to determine the average wavelength.

DOUBLE SLIT INTERFERENCE AND DIFFRACTION GRATINGS

7.

(b) Double slit

1. Replace the diffraction grating with a double slit and set up as shown below.

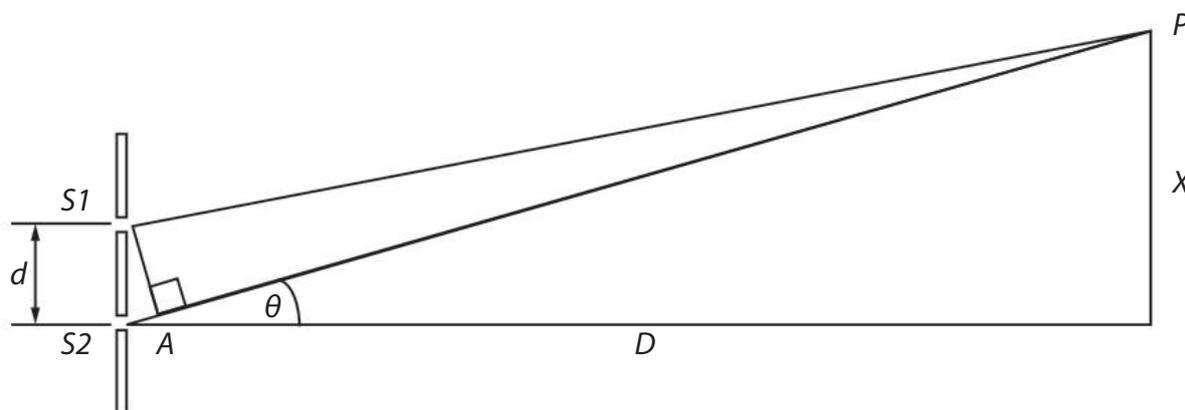

2. Count the number (n) of maxima in the screen in the distance x and record the fringe spacing $s = x/n$
3. Repeat for different distances D
4. Measure and record the slit spacing d if not supplied by the manufacturer, or use a travelling microscope or other method to determine the distance between the lines of the double-slit slide.
5. Use the relation $\lambda = sd/D$ to determine the average value of the wavelength.

Write a report of your investigations on separate paper using the following headings:

DATA COLLECTION**DATA PRESENTATION AND ANALYSIS****CONCLUSIONS AND EVALUATION**

Name _____ Date _____ Class _____ Time: _____

You may be assessed using school-based assessment criteria:

BACKGROUND

You will be using a laser pointer in this investigation.

Warning: Care must be taken not to point the laser dot at anyone's eyes as retina damage may occur. Keep the laser mounted on a solid surface and wear protective goggles if available.



AIM


To determine the spacing between CD and DVD tracks using diffraction patterns.

EQUIPMENT

Laser pointer with a known wavelength, joined sheets of A4 paper, protective goggles, a CD disc and a DVD disc, metre rule and scotch tape.

METHOD

- Place the CD on the whiteboard and fix it in position with sticky tape. Make sure the shiny side is pointing outwards.
- Join the two pieces of A4 paper together horizontally.
- Punch a small hole in the paper so that the laser light can pass through it.
- Hold the A4 sheets about 30cm from the whiteboard.
- Turn on the laser and aim it at the CD disc. On the side of the A4 sheets facing the whiteboard, you should see a series of dots.
- Record the distance between the central maximum and the first order maxima (x), and the exact distance the sheets of paper are from the whiteboard (D).
- Knowing the value of the wavelength λ , you can now determine the spacing between the CD tracks d .
- Consult the literature to compare your value with the published value.
- Repeat the above steps replacing the CD with the DVD disc.
- Record the distance between the central maximum and the first order maxima (x), and the distance from the laser and the screen (D).

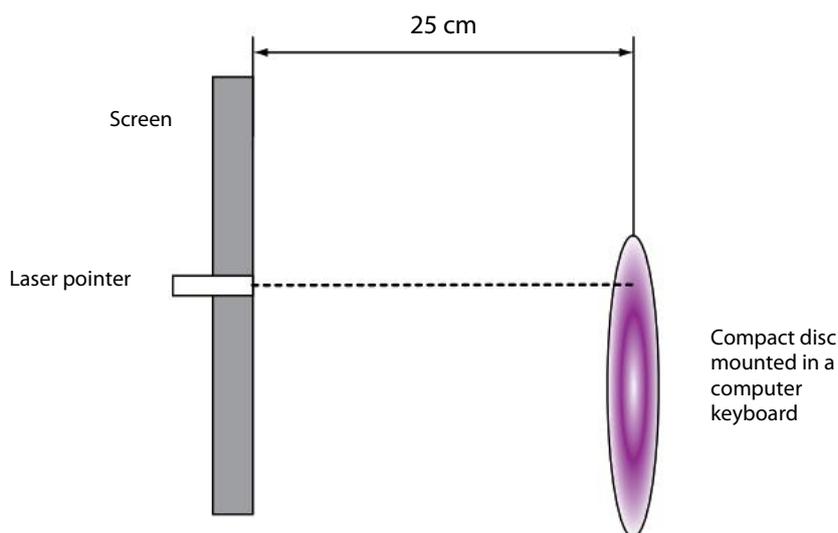

On separate paper present a report including:

DATA PRESENTATION AND ANALYSIS

CONCLUSION AND EVALUATION

Name _____ Date _____ Class _____ Time: _____

INTRODUCTION

This experiment is, in fact, four experiments: A, B, C and D

In **Experiment A**, you will devise a suitable method to find out whether or not microwaves obey the law of reflection.

In **Experiment B** you will devise a suitable method to see whether or not microwaves obey the law of refraction.

In **Experiment C** you will demonstrate that microwaves exhibit the properties of interference and also measure the wavelength of the microwaves.

In **Experiment D** you will devise an experiment to measure the wavelength of microwaves by setting up standing waves.

In order to perform the experiments you will need a 3-cm microwave transmitter and diode detector, some aluminium sheets and a block of paraffin wax.

Before starting any of the experiments you should make sure that your teacher has explained to you how to set up and use the microwave transmitter and receiver.

Experiment A Reflection and Refraction

Bearing in mind that microwaves are reflected by metal, devise a suitable method for showing whether or not microwaves obey the law of reflection.

Use the method that you have devised to test whether or not the law of reflection is obeyed.

You should then Evaluate this experiment. Please use and attach extra paper as necessary.

Experiment B Refraction

Bearing in mind that microwaves travel slower in paraffin wax than in air, devise a suitable method for showing whether or not microwaves obey the law of refraction.


Use the method that you have devised to test whether or not the law of refraction is obeyed.

You should then Evaluate this experiment.

Experiment C Interference

You should arrange three of the metal plates such that they form a double slit. The slits should be about 3 cm in width and should also be separated by about 3 cm. The diode is usually placed about 25 cm from the double slit.

A plan view of the arrangement is shown below.

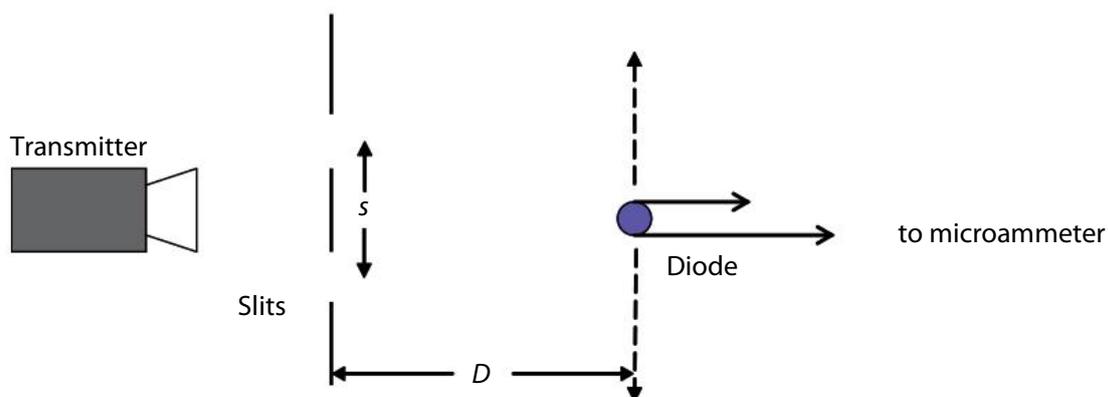

The diode is placed on a plain sheet of paper, distance 'D' from the slits and is moved along the line as shown. You should mark on the paper each point where the current registered by the microammeter is a maximum.

The fact that the readings on the micro-ammeter go through a series of maxima and minima, shows that the microwaves that pass through each slit are interfering.

Record the following data:

The slit separation, (s) (distance should be measured from the centre of each slit)

The distance from the slits to the diode (D), when the diode is in the position shown in the diagram previous page.

The separation (d), of the positions of the diode at which the current reading is a maximum

The wavelength λ of the microwaves is given by the Young's double slit formula:

$$\lambda = \frac{sd}{D}$$

You should now find a range of values of d for a range of values of 'D'.

To do this you will need to collect and tabulate data and plot a suitable graph to find the wavelength of the microwaves. Your graph should include appropriate error bars.

Present your calculations and evaluation on separate paper.

Experiment D Standing waves

You should devise a suitable method to demonstrate that a standing wave pattern can be set up using microwaves.

You should then use the method you have devised to collect data that will enable you to determine the wavelength of the microwaves.

Determine the percentage error in the value of the wavelength that you have found from the data.

Name _____ Date _____ Class _____ Time: *i* hour


You will not be assessed for this investigation.

AIM

The aim of this investigation is to estimate the excess of charge on 2 pieces of sticky tape after they have been stripped off a surface.

METHOD

1. Find the mass of a piece of sticky tape that is 22cm long.
2. Take 2 pieces of sticky tape that are 22 cm long. Fold 1 cm of each piece of sticky tape on top of each other so as to make the pieces of sticky tape 'unsticky' so that you can hold the pieces in your fingers when required to do so.
3. Now stick 10 cm of the 20 cm sticky parts on a clean surface and rub them firmly so that they are completely stuck on the surface.
4. Quickly pull the 2 pieces of tape from the surface. Each piece has an excess of electrons on the bottom part of the sticky tape.
5. Now bring the top parts close to each other so that they repel.
6. When the tapes are in equilibrium, the net force is zero.
7. Measure the angle between the 2 pieces of sticky tape.
8. Now using the relevant equations, estimate the magnitude of the nett charge on each piece of tape in coulombs.

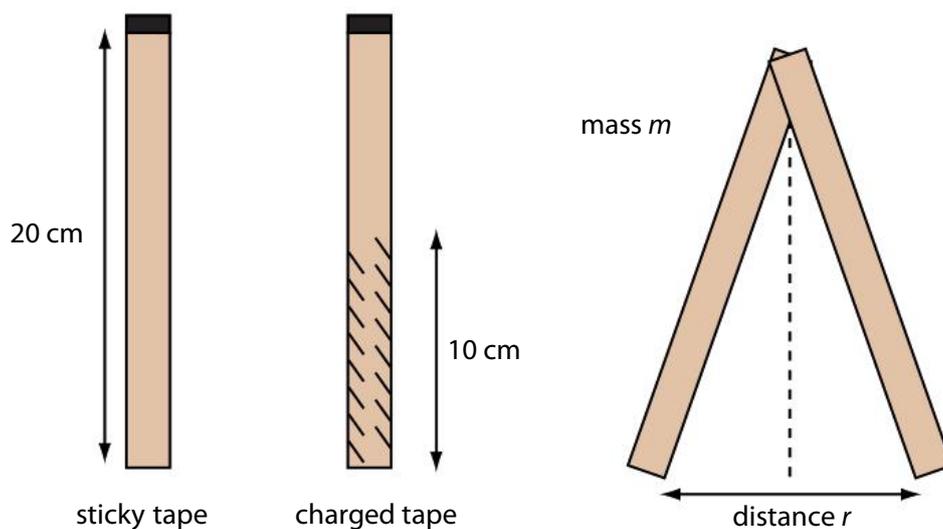

On separate paper present a brief report including:

DATA PRESENTATION AND ANALYSIS

CONCLUSION AND EVALUATION

Name _____ Date _____ Class _____ Time: _____

You will be assessed using school-based assessment criteria:

BACKGROUND

This data-based investigation uses a modified Cavendish laboratory method for the determination for the Newtonian Universal Constant of Gravitation.

It uses a fine quartz fibre suspension system that is capable of supporting considerable mass allowing for a smaller sized apparatus which can be enclosed to reduce air convection currents. The quartz fibre also offers less resistance to twist as the torsion balance executes horizontal rotational motion.


The torque of the gravitational force exerted by metal spheres as they slowly turn through a distance is equal to the torque of the quartz fibre as it turns through a distance.

The torsion balance consists of two smaller lead balls of mass m , connected by a thin metal rod of length $2L$ to the centre of mass of the balls. A mirror is attached to the rod so that a beam of light from a source is reflected from the mirror onto a scale on a distant screen.

Initially, two big spheres, M , of mercury in a glass container are brought close to the small spheres, and the gravitational force of attraction rotates the balance clockwise. It starts to swing and executes several slow oscillations. After several hours, the bar then comes to rest and the position of the light beam on the screen scale is noted. The large masses are then moved to the opposite side of the small spheres, and the balance rotates counter-clockwise. The new screen scale position is noted.

This procedure is repeated using different large spheres.

The diagram below shows a typical schematic arrangement:

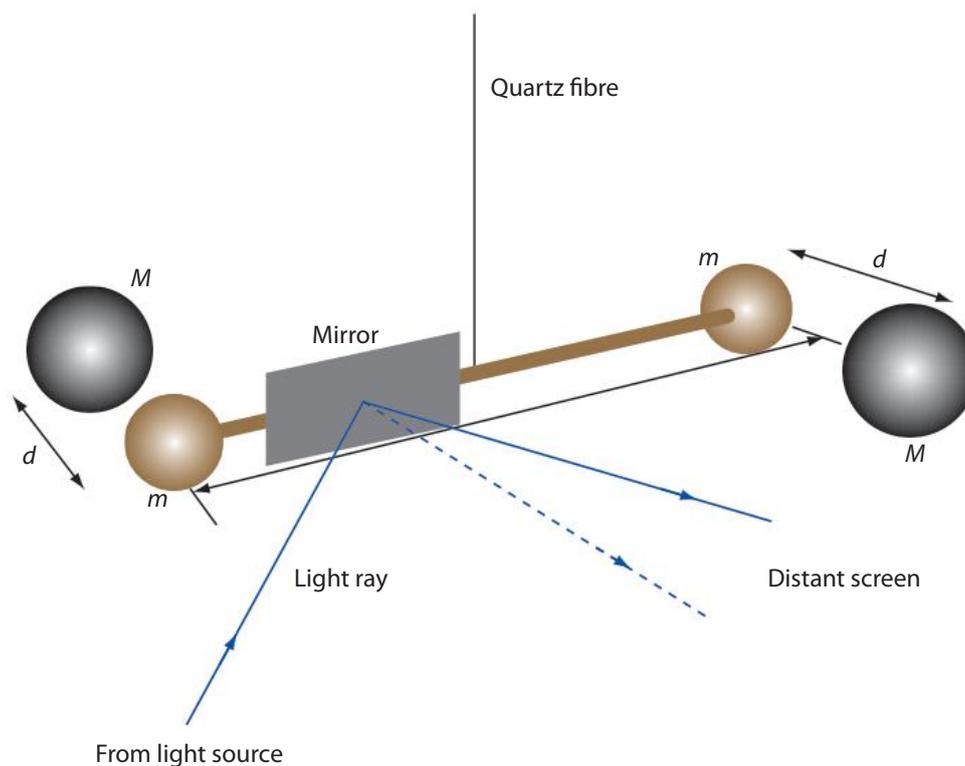

THEORY

Because the angle of deflection, θ , is small, $2\theta \approx \tan 2\theta = \Delta / D$. $\theta = \Delta / 2D$.

The gravitational couple is balanced by the torsional couple of the quartz fibre

$$\frac{2L G Mm}{d^2} = \mu \theta$$

Where $2L$ is the distance between the centres of the small spheres and μ is the torsional constant of the fibre.

The torsional constant can be determined by finding the period of the torsion balance given by $T = 2\pi \sqrt{\frac{I}{\mu}}$

Where I is the moment of inertia of the balance and is equal to $2mb^2$.

In order to determine the period of the balance, the position of the light beam on the screen at certain times is recorded as the torsion balance oscillates.

AIM

To determine the value of the Universal Gravitational Constant from the data provided.

EQUIPMENT

Graph paper, data provided in tables below.

Oscillation of torsion bar

TIME/min	POSITION/cm	TIME/min	POSITION/cm
1	1.0	15	29.5
3	27.5	17	34.3
5	44.5	19	27.7
7	37.2	21	17.6
9	17.4	23	15.3
11	7.6	25	21.6
13	15.5	27	28.2

Deflection of torsion bar

INVESTIGATION	MASS OF SPHERE	SCALE READING	
	M/kg	Clockwise/cm	Counterclockwise/cm
1	1.01	16.3	32.3
2	1.50	15.1	34.6
3	2.96	10.4	39.1

METHOD

1. Plot a graph of the position on the screen versus the time of the oscillation of the torsion balance from the data provided in the data section.
2. Determine the period of oscillation of the torsion balance from the graph.
3. Plot a graph of M/d^2 versus Δ for the data of the three different large masses provided in the data section. Use the graph to determine the value of G.

DATA

Apparatus constants

Small Spheres $m = 1.5 \times 10^{-3} \text{kg}$

Large Spheres $M = 1.01 \text{kg mercury}$ outside diameter $= 5.3 \times 10^{-2} \text{m}$

$M = 1.50 \text{ kg lead}$ outside diameter $= 6.25 \times 10^{-2} \text{m}$

$M = 2.96 \text{ kg lead}$ outside diameter $= 7.80 \times 10^{-2} \text{m}$


Distance (d) between the centres of the big and small spheres is equal to the radius of the big spheres plus $1.55 \times 10^{-2} \text{m}$.

Distance (2L) between the centres of the small spheres is $1.00 \times 10^{-1} \text{m}$.

Distance (D) between the mirror and the screen scale is 5m.


DATA PRESENTATION AND ANALYSIS (use separate paper)

CONCLUSION AND EVALUATION

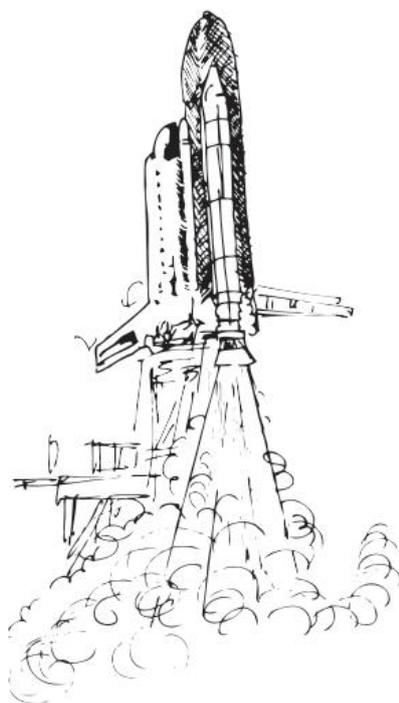

Name _____ Date _____ Class _____ Time: *i* hour*You may be assessed using the following school-based criteria:***BACKGROUND**

A time changing magnetic field induces an emf. The direction of the emf is such that it will oppose the change to which it is due. To illustrate this we can consider the situation shown below.

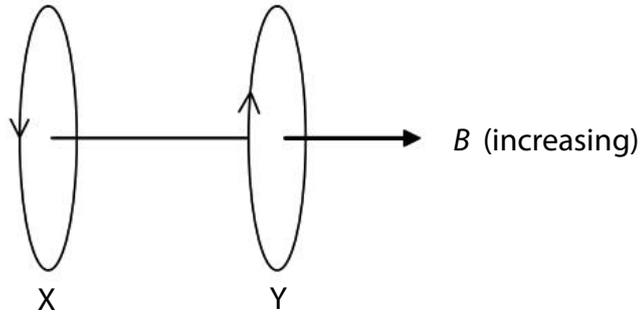

The current in coil 'X' produces a magnetic field in the direction shown. This field links the coil 'Y'.

If the current in coil 'X' increases then B increases and the emf induced in coil 'Y' is such that a current will flow in the direction shown. This current gives rise to a magnetic field in the opposite direction to the field B so opposing its increase in strength.

AIM

You are asked to design an experiment to verify Lenz's law. You will not be asked to carry out the experiment. Use separate paper as necessary.

DEFINING THE PROBLEM AND SELECTING THE VARIABLES

CONTROL OF VARIABLES AND DEVELOPING A METHOD (use more paper)

Name _____ Date _____ Class _____ Time: *i* hour

You will be assessed for this investigation using the school-based criteria.

INTRODUCTION

In Topic 9.3 we learnt that the potential ' V ' of a sphere of radius ' r ' which has a charge ' Q ' is given by the expression

$$V = \frac{Q}{4\pi\epsilon_0 r}$$

From this we see that the ratio $\frac{Q}{V}$ is equal to $4\pi\epsilon_0 r$.

This in effect means that the quantity of charge that can be stored per unit of potential of the sphere depends only on its geometry. This is in fact true for any system that can store electric charge and we call this property of the system *capacitance*. It is given the symbol ' C ' and is defined as

$$C = \frac{Q}{V}$$

The SI unit of capacitance $C \text{ V}^{-1}$ is called the farad (F). A device that is manufactured to have a specific capacitance is called a *capacitor*. A farad is an enormous unit and typical values of capacitance of commercial capacitors range from pF to several μF . To show just how large a unit the farad is, the capacitance of Earth is only about 10^{-1} F ($4\pi \times 8.85 \times 10^{-12} \times 6.4 \times 10^9$).

If a capacitor ' C ' that is connected across a resistor ' R ' is initially charged to a potential ' V_0 ', a time-dependent current will be produced.

When a capacitor is charging or discharging, the potential ' V ' across it is given by the following equation:

$$Vt = V_0 (1 - e^{-t/RC})$$

where the rate of decrease of potential is determined by time constant of the circuit RC .

AIM


To determine how the voltage across a $10\mu\text{F}$ non-polarised capacitor varies with time as it is charged and discharged through a resistor.

MATERIALS

$10\mu\text{F}$ non-polarised capacitor, smooth 9V power supply, 2 microammeters, variable resistor box, voltmeter with a full scale deflection of 10V, stopwatch, on-off switch, connecting leads.

PROCEDURE

1. Set up the circuit shown in the diagram overpage.
2. Make a note of the tolerance values of the capacitor and resistor.
3. Close the switch and copy down the readings on the meters every 10 seconds until the capacitor is fully charged.
4. Now open the switch and record the readings on the meters every 15 seconds as the capacitor discharges.
5. Repeat this procedure using a different resistor.

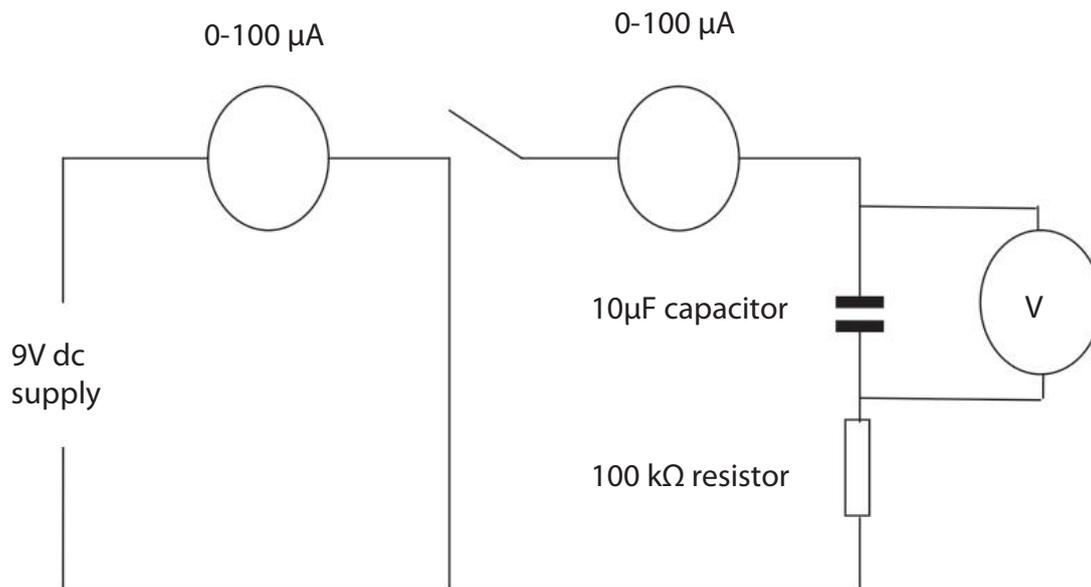

DATA COLLECTION AND ANALYSIS

Copy your rough data into relevant tables and sketch or plot graphs of the data collected.

Process your observations and determine the rate of fall of the voltage in the discharging of the capacitor.

CONCLUSION AND EVALUATION

State a valid conclusion based on interpretation of results.

Evaluate the procedure including limitations and errors.

Suggest a modified procedure to improve the investigation.

Name _____ Date _____ Class _____ Time: *i* hour

You will be assessed using school-based criteria:

BACKGROUND

This experiment provides a simple method for obtaining an approximate value of Planck's Constant using a light emitting diode (LED).


The diode is made from semi-conducting material. A simplified model of a semi-conductor is one within which there are two principal energy 'bands' that electrons can occupy- the *conduction band* and the *valence band*. The bands are separated by a 'forbidden' gap- the *energy gap*. If, for example, the conduction band and valence band are separated by an energy gap of 2 eV this means that for an electron to transfer from the valence band to the conduction band will require an energy of 2 eV. In other words the diode will not become conducting until a potential of 2 V is applied across it. Pure semi-conductors can be made into diodes (i.e. they only allow conduction in one direction) by the addition of controlled amounts of 'impurity' elements. The width of the energy gap can also be controlled in this manner.

At the operating voltage of an LED electrons are continually entering the conduction band and then falling back to the valence band. In doing so, they emit a photon of energy equivalent to the energy of the gap. The frequency of the light emitted by the diode is therefore given by:

$$E_G = hf$$

METHOD

1. The LED is shielded from the surroundings light by a cardboard cylinder.
2. Connect together the circuit shown adjacent.
3. Switch on the power and view the LED through the cylinder. Adjust the potentiometer until the LED just begins to emit light. Record the reading on the voltmeter and milliammeter.
4. Switch off the power and repeat the procedure using the other two LED's.
5. Your teacher will give you the value of the frequency of the light emitted by the LED.
6. To calculate Planck's Constant you will need to calculate the following from your readings:
 - The power drawn by the LED when it just begins to emit light
 - The number of electrons flowing through the LED each second.
7. From this you can now calculate the energy transferred for each electron passing through the LED and hence Planck's Constant.
8. Use the readings for each LED to determine an average value of Planck's Constant.

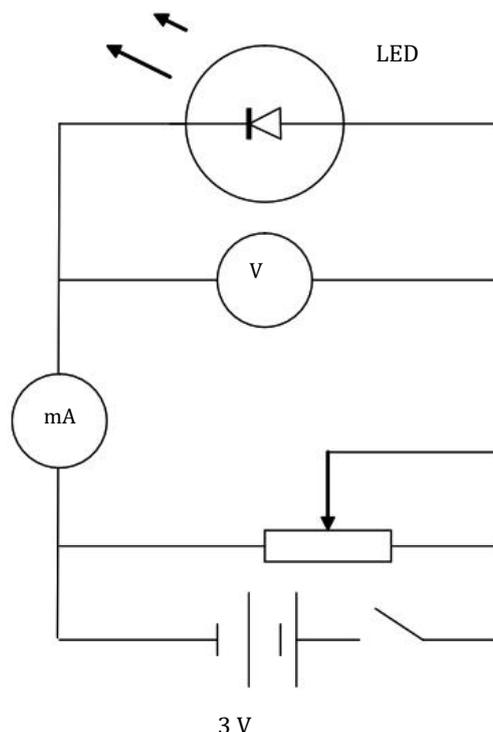

Present your report under the following headings.

DATA COLLECTION

DATA PRESENTATION AND ANALYSIS

Name _____ Date _____ Class _____ Time: 1 hour

You may be assessed using school-based criteria:

BACKGROUND

In 1911, Geiger and Nuttall stated that the half-life T and the range R of alpha radiation can be determined using the equation:

$$\log T = m \log R + c \quad \text{where } m \text{ and } c \text{ are constants.}$$

Furthermore, Geiger stated that the range R and the energy E of the alpha radiation could be determined by the equation:

$$R = \omega E^{3/2} \quad \text{where } \omega \text{ is a constant.}$$

AIM

You are to determine whether these relationships are valid for the half-life, range and energies of alpha emitting isotopes in the thorium decay series.

PROVIDED DATA

The following data is provided. This data will be sufficient for you to check the validity of the equations.

ISOTOPE	HALF -LIFE (s)	RANGE (cm)	ENERGY (MeV)
Thorium	5.96×10^7	4.01	5.39
Radium	3.14×10^5	4.34	5.67
Bismuth	3.60×10^3	4.80	6.04
Radon	5.46×10^1	5.05	6.29
Polonium	1.61×10^{-1}	5.69	6.75

DATA ANALYSIS

Draw a graph the will allow you to present and process the provided data.

CONCLUSION AND EVALUATION

State a valid conclusion based on interpretation of results. Evaluate the procedure including limitations and errors. Suggest a modified procedure to improve the investigation.

Name _____ Date _____ Class _____ Time: _____

You may be assessed using school-based criteria:

BACKGROUND

Atmospheric pressure operates over the surface of all objects on the Earth. An average male has a surface area of approximately 2 m^2 . For a normal atmospheric pressure of $1.01 \times 10^5 \text{ N.m}^{-2}$, the thrust force on this person would equal $2.02 \times 10^5 \text{ N}$ – a very large weight indeed. However, the body compensates for this by maintaining the blood pressure in the circulatory system at a level slightly higher than atmospheric pressure.

At high altitudes or at small depths in water, the body cannot compensate adequately for these pressure effects. For example, when trekking in the high mountains or diving in deep water, nosebleeds are common.

This investigation consists of three parts. In the first two parts, you will carry out the methods described, draw the apparatus used, and use your understanding of pressure to explain certain observations. Try to give both qualitative and quantitative explanations where possible. The last part asks you to design experiments to examine viscous flow and to determine the coefficient of viscosity of water. Some research may be necessary for you to carry out this design.

AIMS

1. To examine the characteristics of pressure in liquids.
2. To measure gas pressure using a manometer.
3. To examine viscous flow in water and to measure the viscosity of water using Poiseuille's formula.
4. To determine if the height of water in a container with one hole at the bottom fits an exponential equation.

EQUIPMENT

- A can with 3 holes of equal size drilled in the side, a plastic bag, a pin, plastic tubing, buckets of water.
- 2 sections of rubber tubing, length of plastic tubing, barometer.
- Equipment of your choice to examine viscous flow and viscosity of water.
- Cylindrical water container with a small hole near the bottom.

METHOD

Part 1

1. Connect a piece of rubber hosing to the laboratory tap.
2. Place the hose into the can that has 3 holes drilled in the side.
3. Turn on the water so that the rate of flow is steady; when the rate of inflow is equal to the rate of outflow through the holes.
4. Determine the range of the water flow out of each hole.
5. Draw the apparatus used and explain the observed results.
6. Use the pin to poke about 20 evenly distributed holes in the bottom surfaces of the plastic bag.
7. Fill the bag with air until it forms a spherical shape, and then fill it with water.
8. Observe the water flowing out the holes.
9. Squeeze the top of the bag and again observe the outflow of water.
10. Draw the apparatus used and explain the observed results.

11. Siphon some water from one place to another.
12. Draw the apparatus used to siphon the water and explain how the pressure conditions allowed this to be achieved.

Part 2

1. Connect the rubber tubing to a gas tap.
2. Place some water into the plastic tube and turn it into a U-shape.
3. Convert the plastic tube to a manometer by connecting the rubber tubing to the plastic tubing. Make sure there are no air leaks at the join, and that no water from the U-tube has entered the gas line.
4. Slowly turn the gas tap until the water in one side of the U-tube rises to a maximum.
5. Measure the height difference between the water levels in each side of the manometer.
6. Record the atmospheric pressure with the barometer.
7. Draw the apparatus used and determine the pressure of the gas supply.

Part 3

You are to study viscous flow by dropping ball bearings into two different liquids. Design and carry out your investigation making both qualitative and quantitative explanations of your collected data.

Poiseuille (1799-1869) found that the rate of flow of an incompressible liquid undergoing laminar flow in a cylindrical horizontal cylinder is given by the formula:

$$V/t = \pi r^4 (P_2 - P_1) / 8\eta L$$

If a steady flow of water passes through a capillary tube of length L and radius r , then the volume of water V flowing in time t , can be used to determine the viscosity of the water. Recall that the pressure difference between the ends of the capillary tube can be related to a height h of the water held in a reservoir above the capillary tube.

You are to design and carry out this investigation. You are to choose the variables necessary to determine the viscosity of water by graphical means. Submit as a separate formal write-up.

Present your report under the following headings.

DATA COLLECTION

DATA PRESENTATION AND ANALYSIS

CONCLUSIONS AND EVALUATION

Part 4

Using the cylindrical water container with a small hole near the bottom, examine how the height of the water changes with time.

See whether it fits the equation

$$h = h_0 e^{-at}$$

where h_0 is the initial height of the water

AIM

To observe how one or more of the various diagnostic instruments work, and to investigate the advantages and disadvantages of various diagnostic techniques.

PREPARATION FOR THE VISIT

Do an internet search to find the most convenient location of a major hospital in your area, and make a note of the telephone number of the Public Relations department. Also do some background reading on the particular technology/machine that interests you.

DURING THE VISIT

Make sure that you have prepared a series of questions that you may wish to ask the specialists who operate the machines. These people are experts in their field, and they are very good in explaining things on a basic level. They will explain the operation of each machine and the advantages of the various images produced. It will make their job a lot easier if they can see that you have come prepared with some questions. Do not rely on your teacher to do all the talking!

REPORT

If you go as a part of a school group you will obviously need to follow the advice and guidelines given by your teacher. If you go by yourself or with a small group of students the following headings may help your learning.

- the history and development of this diagnostic technology/machine
- the theoretical physics that underly this technology/machine
- any side-effects for the patient
- particular applications of this technology/machine (e.g cancer diagnosis)
- particular advantages and disadvantages of this technology/machine
- possible future developments of this technology/machine

You could consider the best way to present this information. Using a movie or still digital camera and then using the images to build a PowerPoint Presentation is a very effective medium.

BACKGROUND

Textbooks can describe the workings of machines and provide some schematic diagrams or photos to aid in the explanation of theory. However, seeing a machine will stick in your memory for a lot longer than what you read in a book.

Hospitals are public institutions and as such they are usually obliging to small groups of students who want to learn how various diagnostic instruments work. You should have the opportunity to contact a hospital in order to arrange a visit on behalf of your school. Hospitals are also very busy institutions and most of the diagnostic instruments are continually being used throughout the day. Therefore, when arranging a visit, it is important that you are punctual at the time they make available to you. You will be met by a Public Relations officer who will escort you around the hospital – you will also most likely be offered some refreshments during your visit.

You should put in a request to see one or more of the following instruments and images produced:

1. Various X-ray machines
2. A CAT scanner
3. An ultrasound machine
4. An MRI machine

The hospital may also have a gamma camera, facilities for producing common radioisotopes and a section where audiograms are produced.


Some major hospitals also have a cyclotron where more sophisticated radioisotopes are made.

Please note that we are only providing basic information about these machines here. If you want more information you should consult a reputable and relevant textbook such as:

IB Physics Kerr G, IBID Press, which can be purchased from the website <www.ibid.com.au>


1. X – Rays

There are a number of X-ray tubes used for medical purposes. The tubes can be classified as either diagnostic (medical imaging) or therapeutic (radiation therapy). Most diagnostic X-ray machines use a rotating anode X-ray tube as shown in the following schematic diagram.

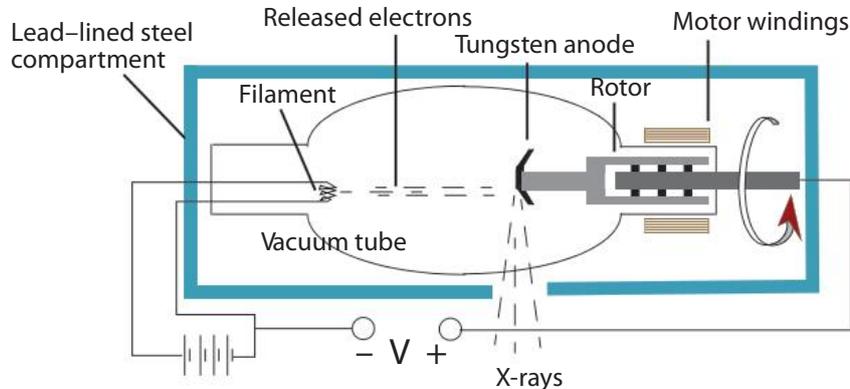

The X-rays enter the patient where they are either scattered or absorbed. In order to decrease blurring on the radiograph due to scattering, a lead grid system is inserted before the photographic film. Direct X-rays pass between the grid while the scattered X-rays are absorbed by the lead plates as shown below. The direct X-rays then fall on an intensifying screen cassette containing double-sided film sandwiched between two fluorescent screens.

The standard X-ray machine used in radiography can produce images of some of the internal organs of the body and bones. Air pockets, fat and soft tissues can be differentiated from each other because they can attenuate the X-ray beam in different ways. Bones produce a white image because they contain heavier body elements such as calcium and phosphorus in a dense matrix that attenuate the X-ray beam more than the softer tissues. Tissues that contain lighter elements such as hydrogen, carbon, nitrogen and oxygen produce a grey image on the radiograph. It is easy to distinguish a black lung image because it contains lower density air when compared with more dense water that is present in abundance in tissues.

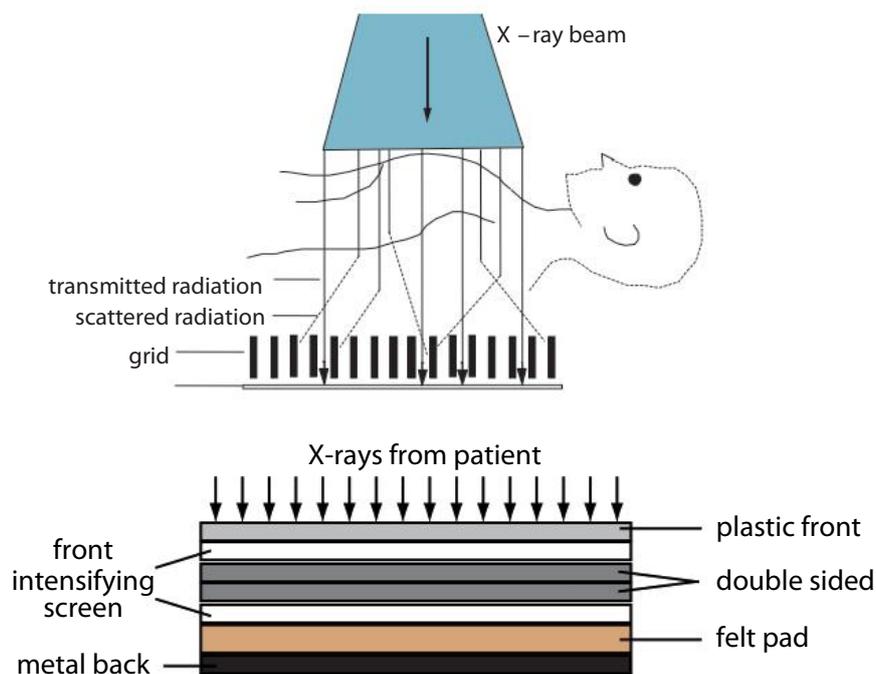


2. Computed Axial Tomography (CAT) Scans

Certain parts of the body are difficult to image against the background of other body parts. In order to improve the contrast of the image, solutions of heavy elements with a large attenuation co-efficient can be introduced into the body. These materials are known as **contrast-enhancing media**. Barium and bismuth can be introduced through the mouth or the rectum for the imaging of the alimentary canal or the appendix. It is common for people with possible stomach pain or gastro-intestinal ulcers to be asked to drink a “barium sulfate meal” before an X-ray is taken. An iodine solution can be introduced intravenously to enhance the image of the cardiovascular system, the kidney and the brain. However, the contrast of the image produced in soft tissue anatomy is not very clear in many situations. Over the past 20 years, this clarity has been greatly improved by using X-rays and **electronic detection and display** together in computed tomography imaging.

Standard X-ray imaging techniques record a longitudinal image on a photographic plate producing 30 shades of grey. **Computed tomography (CT) imaging**, also called computed axial tomography (CAT) imaging, uses X-rays, scintillation detectors and computer technology to build up an axial scan of a section of an organ or part of the body with 256 grey shades. The tube voltages of around 130 kV, and the exposure time are greater than that of standard radiography. (Tomography means the study of body section radiography).

A patient lies on a table that passes through a circular scanning machine about 60-70 cm in diameter called a gantry. The gantry can be tilted, and the table can be moved in the horizontal and vertical directions. X-rays from the gantry are fired at the organ being scanned and attenuation occurs dependant on the type of tissue being investigated. The image produced on the computer monitor is a series of sections or slices of an organ built up to create a three-dimensional image. A schematic diagram of one section is shown below.

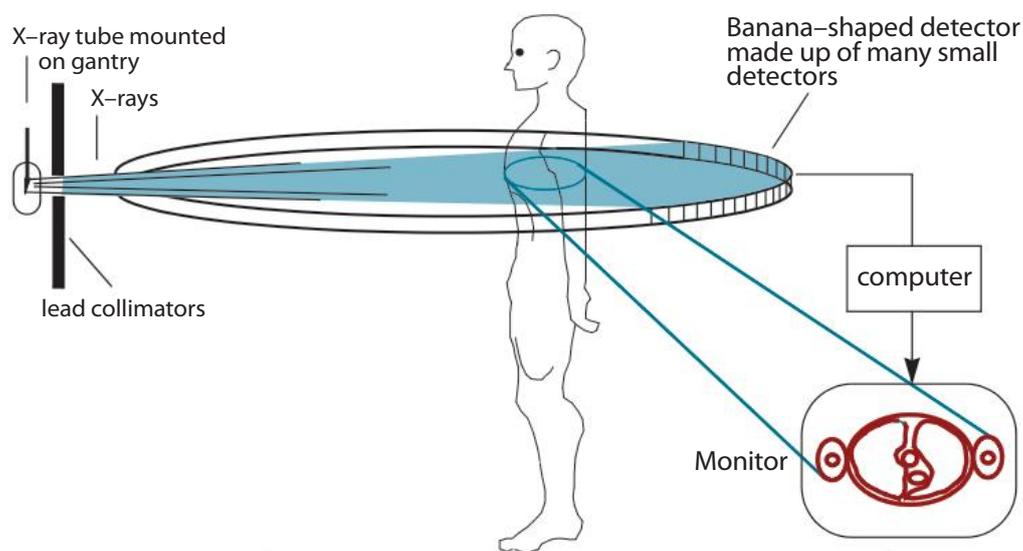

The detectors send the information to a series of computers and a host computer oversees the entire operation. The plane of the tomographic image is divided into small pixel areas of about 1 mm^2 , each of which can be given a grey shade value from 1 (black) to 256 (white). The thickness of each slice is simultaneously built into a volume pixel called a voxel. The image is produced on a computer monitor, and this image can be manipulated and reconstructed to get rid of interference by subtracting the background. The required well-contrasted image of the organ being investigated is then obtained. CAT scans provide detailed cross-sectional images for nearly every part of the body including the brain and vessels, the heart and vessels, the spine, abdominal organs such as the liver and kidneys. They are being used in many diagnostic applications including the detection of cancerous tumours and blood clots.

3. Ultrasound

Ultrasound from 20,000Hz to several billion hertz can be produced by ultrasound transducers (a device that converts energy from one form to another) using mechanical, electromagnetic and thermal energy. Normal sound waves are not useful for imaging because their resolution is poor at long wavelengths. Medical ultrasound uses frequencies in the range greater than 1 MHz to less than 20 MHz. In this range with speeds around 1500 m s^{-1} in body tissue the wavelengths are about 1-2 mm.


In ultrasound imaging, it is the reflected portion of the ultrasound beam that is used to produce the image. The greater the difference in the characteristics of the media boundary, the more energy will be reflected to give an echo. The major characteristic is called the **acoustic impedance** (Z) of a medium. It is a measure of how easy it is to transmit sound through that medium and it has been found that acoustic impedance depends on both the speed of the sound wave (v) and the density of the medium being considered (r) in the following way:

$$Z = r v$$


A scan produced by a single transducer when a single bit of information with a one-dimensional base is displayed is called an A-scan (amplitude-modulated mode). The transducer scans along the body and the resulting echoes are plotted as a function of time as shown below. The A-mode measures the time lapsed between when the pulse is sent and the time the echo is received. The first echo is from the skin, the second and third pulses are from either side of the first organ, the fourth and fifth echo are from either side of the second organ. The pulse intensity decreases due to attenuation. This mode is seldom used but when it is, it measures the size and distance to internal organs and other organs such as the eye.

In the B-scan mode (brightness-modulated scan), an array of transducers scan a slice in the body. Each echo is represented by a spot of a different shade of grey on an oscilloscope. The brightness of the spot is proportional to the amplitude of the echo as shown below.

The scan head containing many transducers is arrayed so that the individual B-scans can be built up to produce a two-dimensional image. The scan head is rocked back and forth mechanically to increase the probability that the

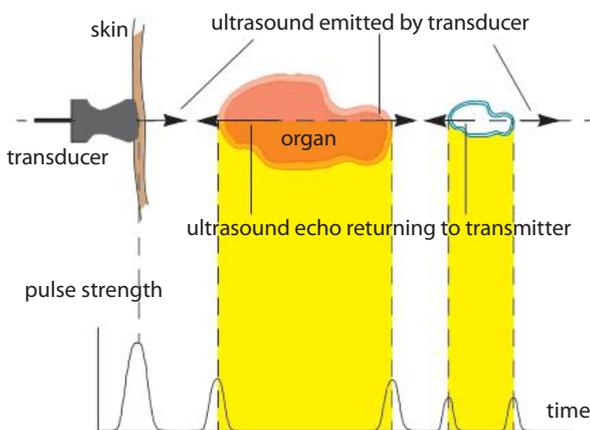

B-scan mode

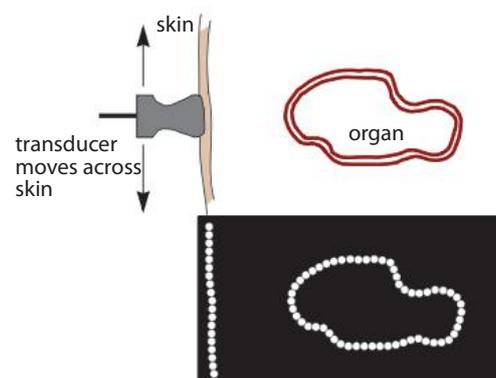


B-scan mode

pulse will strike irregular interfaces.

4. Magnetic Resonance Imaging (MRI)

The phenomenon known as nuclear magnetic resonance is the basis of the diagnostic tool known as magnetic resonance imaging—MRI. It is a technique used for imaging blood flow and soft tissue in the body. It is the preferred diagnostic imaging technique for studying the brain and the central nervous system. Rather than using X-rays as the source of radiation, it uses radiation in the radio region of the electromagnetic spectrum and magnetic energy to create cross-sectional slices of the body.

The patient is laid on a table and moved into a chamber containing magnets that can produce a uniform strong magnetic field around 2T as shown below. Pulses of non-uniform radio-frequency (RF) electromagnetic waves bombard the patient. At particular RF frequencies, the atoms in the tissues absorb and emit energy. This information is sent to a computer that decodes the information and produces a two-dimensional or three-dimensional image on a computer monitor screen.

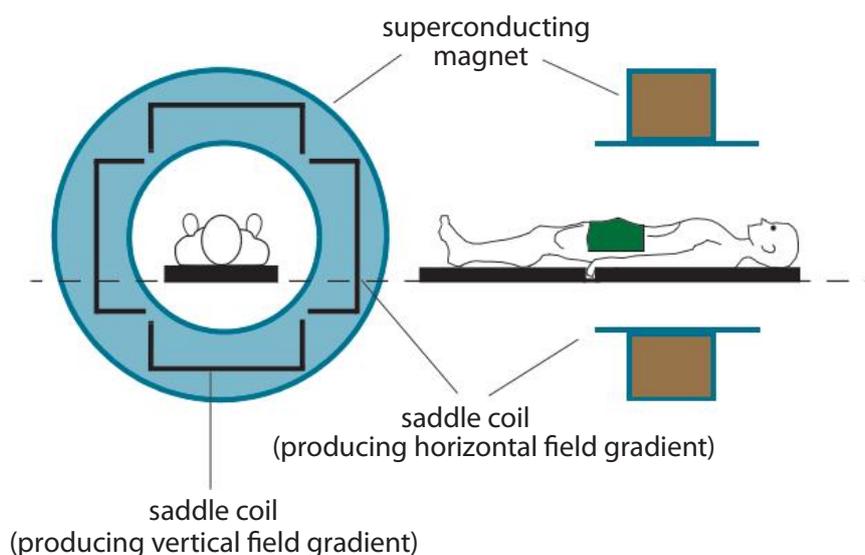

If hydrogen nuclei are placed in a strong external magnetic field, they will tend to align their rotation axes with the external field direction. However, the laws of quantum mechanics only allow certain alignment angles, and as a result the nuclear magnets cannot come into perfect alignment with the external field. Some will align with the magnetic field and others align themselves in the opposite direction to the magnetic field. In fact, they precess like small magnetic tops wobbling at fixed angles around the magnetic field direction.

When a weak oscillating magnetic field in the form of pulses of radio waves are superimposed on the strong magnetic field, the oscillating field rotates at right angles to the strong field. If the radio frequency is not a certain frequency known as the Larmor frequency, the axis of the rotating particle will wobble as described previously. If the applied frequency is equal to the Larmor frequency of precession, the charged particles resonate and absorb energy from the varying radio wave magnetic field. The magnetisation of the material is changed and this is detected by a radio-frequency signal emitted from the sample.

The strength and duration of the radio signals absorbed and emitted are dependent on the properties of the tissue being examined. The proton in the hydrogen atom has a strong resonance signal and its concentration is abundant in body fluids due to the presence of water. Bone shows no MRI signal. MRI is ideal at detecting brain and pituitary tumours, infections in the brain, spine and joints and in diagnosing strokes.

Name _____ Date _____ Class _____ Time: 11 hours

DUE DATE 1 _____

DUE DATE 2 _____

DUE DATE 3 _____

BACKGROUND

Research scientists usually work in teams that contain experts in their specialist areas. Using a collaborative effort, these scientists hope to shed new light on a problem. The processes used in an investigation will be explored using the Group 4 Project. The Group 4 Project is a common component for all of the Group 4 Sciences, and makes up 10 hours of the internally assessed “Practical Scheme of Work”.

The aims of the Project are:

To provide an opportunity for students in Physics, Chemistry, Biology, Environmental Science, Design and Technology, other science school-based courses or approved combination of courses to pursue an interdisciplinary and collaborative investigation chosen by the total group of teachers and/or students.

To gain an appreciation of the implications of science and the limitations of scientific study.

The project could follow the following processes of an investigation:

Selection phase

Action phase

Presentation phase

Evaluation or reflection phase

Space and some guidance will be given to allow you to develop each of these phases. Your teacher will give you a due date for the assessment of each phase.

You will be assessed on Planning skills mainly in the Selection and Presentation phases. Your evaluation should demonstrate an appreciation of the implications of science and the limitations of scientific study. The development of teamwork will be expected for your Personal skills assessment.

SELECTION PHASE(2 hours)

Welcome to the meeting of all science students and teachers at your school or groups of schools. By the end of 120 minutes, the group should

- reach a consensus on the selection of the topic for your Group 4 Project
- decide on the composition of individual groups to carry out the various components of the project
- decide on the first draft of the specific investigations that will be undertaken

For homework, the details of the selection phase should be completed fully, and presented for assessment by the due date.

What were the initial themes discussed by the total group as potential topics for the Group 4 Project?

How was the eventual topic for the Group 4 Project chosen by the total group?

What is the due date for the completion of each phase?

PHASE	DUE DATE
Selection phase	
Action phase	
Evaluation or reflection phase	
Presentation phase	
Other	

What is the composition of the sub-groups, and what are the names of the students in each of the individual groups?

Groups			
Names			

What specific investigation/s will your group examine in order to contribute to the chosen topic?

State the aim of your investigations

State the hypothesis for the investigation. Be sure to give an explanation as to why you have chosen your hypothesis.

What equipment will you need to carry out your investigation? (It is important to state all the materials needed because there may be other students who need similar equipment)

What are the controls and variables in your investigation?

What is the procedure you plan to use in order to control these variables?

ACTION PHASE (6 hours)

Now that you have an action plan, it is time to collect your equipment and perform your investigation. You may need to modify your experimental design in order to collect accurate and reliable data. You have a responsibility to ensure your data collection is not falsified, and that your data analysis lies within the present paradigms of the scientific method. Please use and attach extra paper as necessary.

- 1 Draw a diagram of your experimental design
- 2 Explain why you have settled on this design. Are there other designs that you could have used?
- 3 Use this page to construct some tables for your data collection
- 4 Use this space in order to analyse your data.
- 5 What general conclusion are you going to present to the total group about your analysed data? (Be sure to address the sources of error and suggest possible modifications or improvement that could have been made).

PRESENTATION PHASE (2 hours)

Now is the time to present your work to your peers and parents. Each group will be given a presentation space at a chosen location. Your group will be expected to make a presentation to the other groups in the first hour. Your teachers may ask you some important questions to assess your skills, so be prepared.

Having then refined your communication skills, you and your teachers can relax as the doors are opened to the school community for the final hour.

You need to have prepared your presentation space in advance. It would be good if you could have some experimental set-up or design Video, slide and computer presentations require electricity. You are encouraged to make use of technology and posters.

Jot down some of the things you need to organise.

REFLECTION PHASE (1 hour)

Give an evaluation of the chosen Group 4 Project based upon the information you collected during the presentation phase.

IB Physics Investigations

Volume 2 (Higher Level)



TEACHING NOTES

(For use with the IB Diploma programme)

(Fourth edition)



Author: Gregg Kerr

Series editor: David Greig

Syllabus Correlation Table

Standard Level

Core Topic
Sub topic

Syllabus reference

Practical Number
Title

1	1.2	<ul style="list-style-type: none"> Explaining how random and systematic errors can be identified and reduced 	1A	Errors in measurement
2	2.1	<ul style="list-style-type: none"> Determining the acceleration of free-fall experimentally Qualitatively describing the effect of fluid resistance on falling objects or projectiles, including reaching terminal speed Analysing projectile motion, including the resolution of vertical and horizontal components of acceleration, velocity and displacement <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	2A 2B 2C 2D	Falling objects using stroboscopic photo Motion of a falling body. Terminal velocity in a fluid The range of a projectile
	2.2	<ul style="list-style-type: none"> Using Newton's second law quantitatively and qualitatively Describing solid friction (static and dynamic) by coefficients of friction <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	2E 2F 2G	Newton's second Law Static and kinetic friction Static equilibrium
	2.3	<ul style="list-style-type: none"> Discussing the conservation of total energy within energy transformations Quantitatively describing efficiency in energy transfers <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	2H	Propulsion using elastic potential energy
	2.4	<ul style="list-style-type: none"> Determining impulse in various contexts including (but not limited to) car safety and sports Applying conservation of momentum in simple isolated systems including (but not limited to) collisions, explosions, or water jets Qualitatively and quantitatively comparing situations involving elastic collisions, inelastic collisions and explosions <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	2I 2J	Energy and impulse Investigation circus
3	3.1	<ul style="list-style-type: none"> Describing temperature change in terms of internal energy Applying the calorimetric techniques of specific heat capacity or specific latent heat experimentally Describing phase change in terms of molecular behaviour Sketching and interpreting phase change graphs Calculating energy changes involving specific heat capacity and specific latent heat of fusion and vaporization <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	3A 3B 3C	Conservation of thermal energy Specific heat capacity of a metal Latent heat of fusion of ice
	3.2	<ul style="list-style-type: none"> Solving problems using the equation of state for an ideal gas and gas laws Sketching and interpreting changes of state of an ideal gas on pressure–volume, pressure–temperature and volume–temperature diagrams Investigating at least one gas law experimentally <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	3D 3E 3F 3G	Universal Gas Law determination Boyle's Law determination (data-based) Charles' Law and Pressure Law determination (data-based) Zartmann Investigation

4	4.1	<ul style="list-style-type: none"> Qualitatively describing the energy changes taking place during one cycle of an oscillation Sketching and interpreting graphs of simple harmonic motion examples <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	4A	Period of an oscillating spring
	4.2	<ul style="list-style-type: none"> Explaining the motion of particles of a medium when a wave passes through it for both transverse and longitudinal cases Sketching and interpreting displacement–distance graphs and displacement– time graphs for transverse and longitudinal waves Investigating the speed of sound experimentally <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	4B 4C	Waves in springs Speed of sound using resonance
	4.3	<ul style="list-style-type: none"> Sketching and interpreting diagrams involving wavefronts and rays Sketching and interpreting the superposition of pulses and waves Describing methods of polarization <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	4D 4E	Surface water waves in a ripple tank The polarisation of light
	4.4	<ul style="list-style-type: none"> Sketching and interpreting incident, reflected and transmitted waves at boundaries between media Solving problems involving reflection at a plane interface Solving problems involving Snell's law, critical angle and total internal reflection Determining refractive index experimentally <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	4F	Properties of refraction
	4.5	<ul style="list-style-type: none"> Describing the nature and formation of standing waves in terms of superposition Distinguishing between standing and travelling waves Observing, sketching and interpreting standing wave patterns in strings and pipes <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	4G	Standing waves in a string
	5.1	<ul style="list-style-type: none"> Identifying two forms of charge and the direction of the forces between them <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	5A	Electric field patterns
	5.2	<ul style="list-style-type: none"> Drawing and interpreting circuit diagrams Investigating combinations of resistors in parallel and series circuits Describing practical uses of potential divider circuits, including the advantages of a potential divider over a series resistor in controlling a simple circuit Investigating one or more of the factors that affect resistance experimentally Identifying ohmic and non-ohmic conductors through a consideration of the V/I characteristic graph <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide.</p>	5B 5C 5D	Voltage divider circuits Factors affecting electrical resistance Ohm's Law
	5.3	<ul style="list-style-type: none"> Investigating practical electric cells (both primary and secondary) Identifying the direction of current flow required to recharge a cell Determining internal resistance experimentally 	5E	Internal resistance of a dry cell
	5.4	<ul style="list-style-type: none"> Determining the direction of force on a charge moving in a magnetic field Determining the direction of force on a current-carrying conductor in a magnetic field Sketching and interpreting magnetic field patterns Determining the direction of the magnetic field based on current direction 	5F	Force on a current carrying conductor
6	6.1	<ul style="list-style-type: none"> Identifying the forces providing the centripetal forces such as tension, friction, gravitational, electrical, or magnetic Qualitatively and quantitatively describing examples of circular motion including cases of vertical and horizontal circular motion <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide</p>	6A	Uniform circular motion
7	7.1	<ul style="list-style-type: none"> Determining the half-life of a nuclide from a decay curve Investigating half-life experimentally (or by simulation) 	7A	Half life of beer foam
	7.2	<ul style="list-style-type: none"> These are suggestions only, obviously whether and how such excursions can be arranged will depend on local circumstances. 	7B	A visit to a cyclotron
	7.3		7C	A Visit To An Atomic Energy Facility

Option Topic
Sub topic

Syllabus reference

Practical Number

Title

B	B.1	<ul style="list-style-type: none"> Solving problems involving moment of inertia, torque and angular acceleration Solving problems in which objects are in both rotational and translational equilibrium Calculating torque for single forces and couples 	14A	Moment of inertia
			14B	Translational equilibrium
			14C	Biomechanics
C	C.1	<ul style="list-style-type: none"> Describing how a curved transparent interface modifies the shape of an incident wavefront Identifying the principal axis, focal point and focal length of a simple converging or diverging lens on a scaled diagram Explaining spherical and chromatic aberrations and describing ways to reduce their effects on images <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide</p>	15A	Focal length of a converging lens
	C.2	<ul style="list-style-type: none"> Investigating the performance of a simple optical astronomical refracting telescope experimentally 		
D	D.2	<ul style="list-style-type: none"> Sketching and interpreting HR diagrams Identifying the main regions of the HR diagram and describing the main properties of stars in these regions 	16A	Hertzsprung-Russell diagram
		<ul style="list-style-type: none"> Sketching and interpreting evolutionary paths of stars on an HR diagram Describing the evolution of stars off the main sequence Describing the role of mass in stellar evolution 	16B	Stellar evolution

	AHL Topic Sub topic	Syllabus reference	Practical Number	Title
9	9.1	<ul style="list-style-type: none"> Describing the interchange of kinetic and potential energy during simple harmonic motion Solving problems involving energy transfer during simple harmonic motion, both graphically and algebraically <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide</p>	9A	The Pendulum
	9.2	<ul style="list-style-type: none"> Describing the effect of slit width on the diffraction pattern Determining the position of first interference minimum Qualitatively describing single-slit diffraction patterns produced from white light and from a range of monochromatic light frequencies <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide</p>	9B	White light interference and diffraction patterns
	9.3	<ul style="list-style-type: none"> Solving problems involving interference from thin films Qualitatively describing two-slit interference patterns, including modulation by one-slit diffraction effect Investigating Young's double-slit experimentally Sketching and interpreting intensity graphs of double-slit interference patterns Solving problems involving the diffraction grating equation Describing conditions necessary for constructive and destructive interference from thin films, including phase change at interface and effect of refractive index <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide</p>	9C 9D 9E 9F	Emission spectra Double Slit Interference and Diffraction Gratings Spacing between CD and DVD tracks The Behaviour Of Microwaves
10	10.1	<ul style="list-style-type: none"> Representing sources of mass and charge, lines of electric and gravitational force, and field patterns using an appropriate symbolism Mapping fields using potential <p>Describing the connection between equipotential surfaces and field lines</p>	10A	Electrons on sticky tape11
	10.2	<ul style="list-style-type: none"> Solving problems involving the speed required for an object to go into orbit around a planet and for an object to escape the gravitational field of a planet Solving problems involving orbital energy of charged particles in circular orbital motion and masses in circular orbital motion Solving problems involving forces on charges and masses in radial and uniform fields 	10B	Determination of 'G'
11	11.1	<ul style="list-style-type: none"> Describing the production of an induced emf by a changing magnetic flux and within a uniform magnetic field Explaining Lenz's law through the conservation of energy 	11A	Lenz's Law
11	11.3	<ul style="list-style-type: none"> Describing the effect of different dielectric materials on capacitance Investigating combinations of capacitors in series or parallel circuits Determining the energy stored in a charged capacitor Describing the nature of the exponential discharge of a capacitor <p>And the relevant Aim 6 Statement as found in the IBO Physics Guide</p>	11B	Charging and discharging a capacitor
12	12.1	<ul style="list-style-type: none"> Discussing the photoelectric effect experiment and explaining which features of the experiment cannot be explained by the classical wave theory of light Discussing experimental evidence for matter waves, including an experiment in which the wave nature of electrons is evident 	12A	Photoelectric effect
	12.2	<ul style="list-style-type: none"> Solving problems involving the radioactive decay law for arbitrary time intervals 	12B	Half-Life, Energy and Range of an α Particle

Option Topic
Sub topic

Syllabus reference

Practical Number

Title

Option Topic	Sub topic	Syllabus reference	Practical Number	Title
B	B.3	<ul style="list-style-type: none"> • Determining buoyancy forces using Archimedes' principle • Solving problems involving pressure, density and Pascal's principle • Solving problems using the Bernoulli equation and the continuity equation 	14D	Pressure and properties of a fluid
C	C.4	<ul style="list-style-type: none"> • Explaining features of X-ray imaging, including attenuation coefficient, half-value thickness, linear/mass absorption coefficients and techniques for improvements of sharpness and contrast • Explaining features of medical ultrasound techniques, including choice of frequency, use of gel and the difference between A and B scans • Explaining the use of gradient fields in NMR • Explaining the origin of the relaxation of proton spin and consequent emission of signal in NMR • Discussing the advantages and disadvantages of ultrasound and NMR scanning methods, including a simple assessment of risk in these medical procedures 	15C	A Hospital excursion

Investigation 1A ERROR IN MEASUREMENT

Syllabus relevance: 1.2 Skills

Explaining how random and systematic errors can be identified and reduced

This first investigation is set out in a self-guiding fashion. Students are required to fill in the gaps with the correct magnitude of the answer, the uncertainty and the units, where appropriate, for the spaces provided.

In **Part 1**, students investigate a timing device. The more inaccurate the timing device used, the better. No uncertainty is required as this concept is developed in Parts 2-6.

In **Part 2**, students measure the mass of a coin. Many digital balances have tare devices to remove zero error. It would be better if students do not use this facility. The final answer has spaces for the magnitude, uncertainty and units.

In **Part 3**, students find the weight of a one kilogram mass using a spring balance. Please ensure that there is a zero error on the spring balances before they are issued to students. The final answer has magnitude and uncertainty.

In **Part 4**, students are introduced to the use of vernier calipers in finding the diameter of a coin. Most calipers do have a small zero error.

In **Part 5**, students use a micrometer screw gauge to measure the thickness along the length of a wire. Using the residual (the greatest difference from the mean), they determine the wire thickness.

Part 6 is for higher level candidates, and requires an understanding of the addition of relative errors for multiplication and division.

If students want to take more than one reading in each investigation part, they should then use the residual as their absolute error.

Investigation 2A FALLING OBJECTS USING A STROBOSCOPIC PHOTO

Syllabus relevance: 2.1 Skill and Aims 6 and 7

Determining the acceleration of free-fall experimentally

Students are required to be familiar with a variety of timing devices used to analyse the motion of objects.

The stroboscopic photo firstly requires the conversion of scale distances to real distances. The students are told that the real distance between windowsills is 3.15 m and that three photographs are taken each second.

The following values are provided as possible solutions for the data collection:

Scale distance between the windowsills = 3.6 cm

Real distance conversion factor = $3.15 / 0.036$

(The top window sills are about 3.6 cm apart. However, the bottom windowsills have a separation of 3.9 cm. Perhaps the students should only consider the top windowsills).

Some guidance will be necessary in order that students do the correct construction of the five chords, that will be used for determining the instantaneous velocities during the motion. The first chord could be drawn from $t = 1/6$ s to $t = 3/6$ s. The second chord could be drawn from $t = 3/6$ s to $t = 5/6$ s, and so on.

It should be stressed that the value for the acceleration of the falling object should be obtained from the gradient of the line of best fit for Graph 2.

No uncertainty is required for this investigation.

Investigation 2B MOTION OF A FALLING BODY

Syllabus relevance: 2.1 Skill and Aim 6

Determining the acceleration of free-fall experimentally

There are many methods available for determining the acceleration due to gravity of a falling object. If photogates and electronic timers are not available, then ticker tape or a marble in a grooved inclined plane can be used. The use of a video camera and motion sensors are becoming popular methods for the study of motion. All of these methods are discussed in the background section of the investigation.

It is a good experience for the students to set up the photogate and trapdoor alternatives on their own, and to award manipulation skill assessment based on their speed and correctness in completing the circuits. I have found that they are very good at this, and once one group has solved the problem the other students soon get the hang of it.

Depending on the method chosen for finding the value of g , students fill in the gaps provided and answer the relevant questions.

The inclined plane alternative needs to have the $g \sin \theta$ adjustment. Both this alternative and the ticker tape method are more time-consuming. The photogate method is very good. Students need to realise that the required graph may not pass through the origin in this case as the object dropped has moved some distance before encountering the first light gate. The trapdoor method is commonly used and it yields very good results. Again the line of best fit should not be forced through the origin.

Investigation 2C TERMINAL SPEED IN A FLUID

Syllabus relevance: 2.1 Skill and Aim 6

Qualitatively describing the effect of fluid resistance on falling objects or projectiles, including reaching terminal speed

There are many methods available for describing the terminal speed of an object in a fluid.

A possible suggestion would be to fill a large measuring cylinder with a viscous fluid (not water). Choose a graduation on the measuring cylinder that could be used when the terminal speed of a steel ball bearing can be clearly observed. Start timing at this graduation mark, and stop timing when the object reaches the bottom of the measuring cylinder. Remove the ball bearing with a magnet.

Investigation 2D THE RANGE OF A PROJECTILE

Syllabus relevance: 2.1 Skill and Aims 6 and 7

Analysing projectile motion, including the resolution of vertical and horizontal components of acceleration, velocity and displacement

By measuring the height of the bench, the time for the sphere to fall from the bottom of the incline to the floor can be determined from:

$$v_y^2 = u_y^2 + 2gs \quad \text{and} \quad v_y = u_y + gt$$

Realising that $u_y = 0 \text{ m.s}^{-1}$, and that it takes the same time whether the sphere is projected off the incline, or simply dropped vertically downwards.

Another alternative is to use the conservation of energy. The E_p of the sphere at the top of the incline is converted to E_k at the bottom of the incline. The velocity of the launch can be determined by measuring the range of the projectile, and knowing that the horizontal velocity is constant, $t = \text{range} / v_x$

Investigation 2E NEWTON'S SECOND LAW

Syllabus relevance: 2.2 Skill and Aim 6

Using Newton's second law quantitatively and qualitatively

Students do not find the analysis of this conventional investigation easy. Some help and guidance will be necessary.

The investigation is best done using digital timers and a linear air track. Computer software has found to be unreliable unless it has been recently manufactured.

If using ticker tape, students will need to know the procedure for recording the initial and final velocities. For example, take six dots at the beginning of the tape and six dots towards the end of the tape. The time interval for each set of dots would then be 0.1 s. Measure the distance between each set of six dots, and record the displacements for the chosen time, the initial velocities and final velocities.

In Part A, the slope of the ' F versus a ' graph should be approximately equal to the total mass of the system (trolley + slotted masses).

In Part B, the slope of the ' m versus a^{-1} ' should be approximately equal to the constant falling mass.

If equipment is not available, the following photogate data for the first part of the experiment can be used:

Distance between the light gates(dlg)	= 83.7 cm
Length of the card (lc)	= 20.0 cm
Mass of the trolley (M)	= 228.45 g
Mass of the mass carrier	= 10.0 g
Total mass of the system	= 228.45 + 90 + 10 g

m/g	t_1/s	v_1/ms^{-1} ($v_1 = l_c/t_1$)	t_2/s	v_2/ms^{-1} ($v_2 = l_c/t_2$)	a/ms^{-2} $a = (v_2^2 - v_1^2) / 2d_{lg}$	a/ms^{-2}
30	0.410	0.488	0.156			
	0.408	0.490	0.156			
	0.384	0.521	0.155			
50	0.296	0.676	0.120			
	0.252	0.794	0.116			
	0.294	0.680	0.120			
70	0.221	0.905	0.099			
	0.236	0.847	0.100			
	0.246	0.813	0.101			
90	0.235	0.851	0.090			
	0.200	1.000	0.087			
	0.226	0.885	0.089			
	0.186	1.075	0.086			

a/ms^{-2}	F/N
0.837	0.2943
1.390	0.4905
1.952	0.6867
2.541	0.8829

Investigation 2F STATIC AND KINETIC FRICTION

Syllabus relevance: 2.2 Skills and Alm 6

Describing solid friction (static and dynamic) by coefficients of friction

There are many possibilities as to how to carry out this investigation. Different surfaces can be used. Rather than using masses on the end of the pulley, you could use a vessel containing water. Water can be added drop by drop at the critical point.

A graph of the frictional force, as a function of the normal force, will yield a straight line that will not pass through the origin because the wooden box has mass.


Investigation 2G STATIC EQUILIBRIUM

Syllabus relevance: 2.2 Skills and Alm 6

Solving problems involving forces and determining resultant force

Investigation 14B extends this for those undertaking the engineering physics Option B.

It is a very standard practical that can be carried out with basic equipment. Some schools have circular force boards made of Masonite with a series of holes in which to put the spring balances. These boards are good to buy.

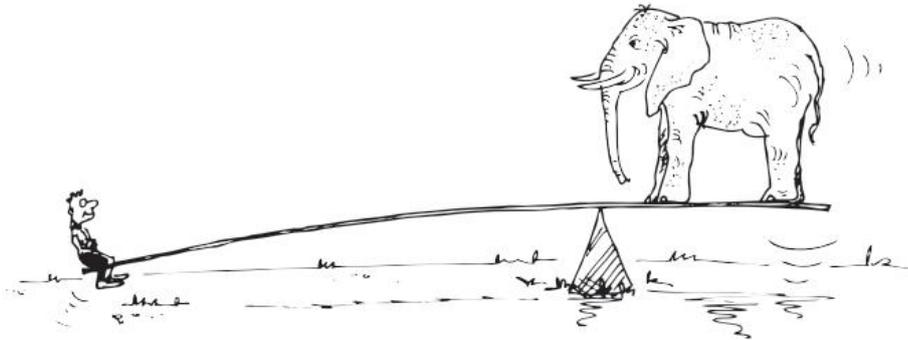

Investigation 2H INVESTIGATING THE MOTION OF AN OBJECT

Syllabus relevance: 2.3 Skills and Aim 6

Discussing the conservation of total energy within energy transformations.

Quantitatively describing efficiency in energy transfers.

This is a good investigation to apply some assessment criteria. The scope of the investigation can be restricted if so desired to investigating just one factor and probably not the nature of the runway.

Student can extend the investigation to measure the coefficient of dynamic sliding friction between the tub and the runway.

The students should recognise the following factors that affect the distance travelled:


- mass of the tub
- distance that the elastic is stretched
- nature of the surface of the runway

Essentially students have to devise a method for:

- propagating the tub along the runway
- measuring the distance that the elastic is stretched when the tub is pulled back (*This is not as easy as it sounds since when it is pulled back it will look something like this*)

Students will have to decide which “stretched” distance they are going to measure:

- measuring the distance travelled along the runway
- securing slotted weights to the bottom of the tub.

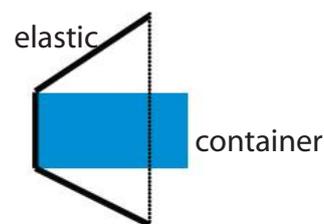

They will need the following extra apparatus

- a set of slotted weights
- drawing pins or small nails (to secure the elastic to the sides of the runway)
- Scotch tape (to secure the slotted weights to the base of the tub)
- a top pan balance (to measure the mass of tub and weights)
- a metre ruler
- a marker pen

In investigating the effect of increasing the mass, students should recognise that they need to devise a means of ensuring that the tub is pulled back the same distance each time. A graph of distance travelled against mass should show an inverse relation.

In investigating the effect of increasing the distance that the elastic is stretched, students should appreciate that they now need to keep the mass constant. A graph of distance stretched against distance travelled should show a quadratic relation. ($\frac{1}{2} kx^2 = Fs$)

Investigation 2I ENERGY AND IMPULSE

Syllabus relevance: 2.4 Skills and Aim 6

Determining impulse in various contexts including (but not limited to) car safety and sports

This is an open-ended planning investigation requiring three different types of balls and a measuring device. However, students are likely to ask you for other equipment.

Students need to be issued with the sheets well in advance of doing the investigation. After they have read the sheets, they should submit their equipment list request so that the laboratory assistant has time to collate their requests. Another alternative is that the students submit the completed Aim, Theory, Equipment and Method sections before they are allowed to proceed.

The basic idea is that the gravitational potential energy is converted to kinetic energy. The velocity before impact with the ground can be calculated. Knowing the rebound height of the ball, the velocity of the ball just after impact can be calculated. The impulse can be found from the vector addition of the change in momentum of each ball after each bounce.

The collisions with the ground are inelastic, as can be seen from the rebound heights.

There is space provided for three graphs. These could be computer generated. Typical graphs will include rebound height versus the number of bounces, change in energy versus the number of bounces, and impulse versus the number of bounces.

Extra assessment criteria are provided at the end of the investigation.

Investigation 2J INVESTIGATION CIRCUS

Syllabus relevance: 2.4 Various Skills

Qualitatively and quantitatively comparing situations involving elastic collisions, inelastic collisions and explosions

In **Problem 1**, by measuring the height of the bench, the time for the sphere to fall from the bottom of the incline to the floor can be determined from:

$$v_y^2 = u_y^2 + 2gs \quad \text{and} \quad v_y = u_y + gt$$

Realising that $u_y = 0 \text{ m.s}^{-1}$, and that it takes the same time whether the sphere is projected off the incline, or simply dropped vertically downwards.

Another alternative is to use the conservation of energy. The E_p of the sphere at the top of the incline is converted to E_k at the bottom of the incline. The velocity of the launch can be determined. By measuring the range of the projectile, and knowing that the horizontal velocity is constant.

$$t = \text{range} / v_x$$

Problem 2 is best done outdoors as squirting water in the laboratory has many potential problems. A garden hose is a good constant water source.

Assuming the water pressure and the rate of flow of such is constant, students can test the validity of:

$$\text{Range} = v^2 \sin 2\theta / g$$

The range is maximum when $2\theta = 90^\circ$. Therefore, maximum range occurs when the water is projected at 45° .

Problem 3 has some potential safety considerations. Safety goggles should be worn at all times.

The problem can be solved by assuming that the work done in moving the clay ball and the clay block through a distance, as measured by the straw, is equal to the initial velocity of the clay ball projected from the sling shot.



Investigation 3A CONSERVATION OF THERMAL ENERGY

Syllabus relevance: 3.1 Skills and Aim 6

Describing temperature change in terms of internal energy

This is a standard introduction to the law of conservation of thermal energy. Students do a number of trials, and from their data they compare the total thermal energy lost and gained when warm water is added to cold water.

Students should calculate the thermal energy lost and gained for the first trial before they proceed with the second trial. The investigation can be completed in about 50 minutes provided an electric jug of hot water is always available. Using water heated by a Bunsen burner should be discouraged as it is time consuming.

Investigation 3B SPECIFIC HEAT CAPACITY OF A METAL

Syllabus relevance: 3.1 Skills

Calculating energy changes involving specific heat capacity and specific latent heat of fusion and vaporization

If a direct method of mixtures procedure is used, such as heating a metal block with an immersion heater, then the theory for cooling correction will need to be completed before this investigation is carried out.

Students are asked to confirm the identification of the unknown metal using a second physical property. This could be a density investigation.

Investigation 3C LATENT HEAT OF FUSION OF ICE

Syllabus relevance: 3.1 Skills

Calculating energy changes involving specific heat capacity and specific latent heat of fusion and vaporization

This is another standard investigation that produces a good result.

Students should be able to complete the data collection and analysis in a 50-minute period.

Investigation 3D UNIVERSAL GAS CONSTANT DETERMINATION

Syllabus relevance: 3.2 Skills and Aim 6

Investigating at least one gas law experimentally

The correct equation for determining R is:

$$1/V (nRT) = m (g / A) + P_0$$

If a graph of $1/V$ is plotted against m , the gradient is equal to $g / RAnT$.

Therefore, $R = g / (\text{gradient}) AnT$

The number of moles of air in the syringe can be found under the laboratory conditions can be determined by using the Combined Gas Law, and the fact that one mole occupies 22.4 dm^3 at STP.

Investigation 3E BOYLE'S LAW INVESTIGATION

Syllabus relevance: 3.2 Skills and Aim 6

Investigating at least one gas law experimentally

There are three experimental Set-ups given for this investigation, depending on the equipment available. If using the mercury method, students should be made aware of the poisonous nature of mercury. Sulfur or a mercury clean-up kit should be at hand. If using the modern Boyle's Law apparatus, the glass capillary tube should not be given too much pressure.



Investigation 3F CHARLES' LAW AND THE PRESSURE LAW

Syllabus relevance: 3.2 Skills and Aim 6

Investigating at least one gas law experimentally

One apparatus is shown for Charles' Law and two are shown for the Pressure Law. Again, if mercury is going to be used then students must be made aware of the poisonous nature of the substance.



Investigation 3G ZARTMANN INVESTIGATION

Syllabus relevance: 3.2 Skills and Aim 6

Investigating at least one gas law experimentally

I first saw this investigation on a video put out by ILPAC (available from John Murray publishers in the UK). This simulation has been adapted from this video. In a true sense, there are some oversimplifications of the true Zartmann experiment, and it is hoped that students might identify these in their conclusion. For example, bismuth density on the glass plate may not be related to the dots here because the sample of bismuth dots is very small. Furthermore, the width of each segment is very large.

Students should have little difficulty in analysing their data. The first graph is the lower temperature case. Zartmann concluded that the bismuth particles had a range of speeds with most concentrated around the average value with some much slower and some much faster than this average. He confirmed that the range of speeds was due to continual collisions between particles as assumed in the kinetic theory of gases.

Investigation 4A THE SIMPLE PENDULUM AND SPRING

Syllabus relevance: 4.1 Skills and Aim 6

Qualitatively describing the energy changes taking place during one cycle of an oscillation

Simple harmonic motion is now in the syllabus, and the simple pendulum and/or coiled spring provide excellent open-ended planning experiments.

The investigation lends itself readily to the assessment of many criteria. In a similar way, the oscillations of a mass on the end of a spring can also be used to assess these same criteria. The students can be told what constitutes a period of oscillation and then be asked to investigate the factors that affect the period. Unless students have access to a reasonably wide variety of springs, this investigation is more limited in scope than the simple pendulum.

Investigation 4B WAVES IN SPRINGS

Syllabus relevance: 4.2 Skills and Aim 6

Qualitatively describing the energy changes taking place during one cycle of an oscillation

This investigation introduces some of the properties of compressional and transverse waves using mechanical pulses and continuous waves in slinky springs.

For such a simple investigation, students for some reason tend to only obtain average results in this investigation. They seem to rush the procedure and their patience is really tested. Therefore, it must be emphasised that each of the factors that are asked for in the questions should be clearly observed and explained.

Investigation 4C SPEED OF SOUND USING RESONANCE

Syllabus relevance: 4.2 Skills and Aim 6

Investigating the speed of sound experimentally

Three different methods for undertaking this investigation are given. The students determine the speed of sound by plotting a graph of the length of the air column L against f^1 . The relationship is explained in the background section of this investigation. The speed of sound at a particular temperature is given by:

$$v = f\lambda$$

$$L + e = v / 4f \quad \text{or} \quad L = v / 4f - e$$

If the fundamental frequency, f , is determined using different tuning forks or signals from the signal generator for different lengths of the air column, a graph of L against f produces a linear graph with a slope of $v/4$ and a y -intercept of $-e$.

If using the procedure with the tuning fork, a long PVC tube should be inserted into the large measuring cylinder, and the resonance of the air in the tube should be obtained by moving the tube up and down in the water.

The signal generator works best on a low frequency between 50 – 100 Hz.

Warning: Students should be warned of the potential hazards of using water near an electrical power supply.



Investigation 4D

WATER WAVES IN A RIPPLE TANK

Syllabus relevance: 4.3 Skills and Aim 6

Sketching and interpreting diagrams involving wavefronts and rays

It is unlikely that schools will have sufficient ripple tanks for this Investigation and it may best be done as a demonstration in which case the assessment skills and criteria will be very limited.

Students who have the patience and perseverance usually obtain satisfactory results. This will most probably take a double period since the ripple tanks need some introductory adjustments and maintenance. It is better if the students do not connect the motor for the first period, but rather concentrate on the pulses and rectilinear wave reflections.

Students are required to submit a series of sketches with their laboratory record. A good reference book for excellent diagrams is *The World Of Physics* by J. Avison published by Nelson ISBN 0-17-438245-6.

Investigation 4E

POLARISATION OF LIGHT

Syllabus relevance: 4.3 Skills and Aim 6

Describing methods of polarization

In this investigation, students will observe and record some of the properties of polarised light. They use two sheets of Polaroid, the polariser and the analyser. The intensity of light incident on an ideal polariser is halved after preferential absorption. The analyser can then be rotated from 0° to 90° to reduce the emerging light intensity to zero. When the electric field for light incident on a Polaroid is at an angle θ to the plane of vibration, then the electric field vector of the light is $E_0 \cos\theta$, and the light intensity emerging from the Polaroid is given by the Malus equation:

$$I = I_0 \cos^2\theta$$

where I is the emerging light intensity and I_0 is the half intensity after polarisation.

The equipment must be prepared in advance and is included for your information:

3 squares of polaroid 5 cm in diameter, 5 microscope slides, glass box, ray box to give a single beam of light, polarimeter if available, protractor, perspex ruler, liquid crystal display (calculator or digital watch), masses, string, colour filter for the ray box, sucrose solution.

In Part A, the students produce and detect polarised light, and comment on the intensity of light.

In Part B, they examine the reflection of polarised light.

In Part C, they examine a liquid crystal display, a sucrose solution, and stress and strain in plastics.

Investigation 4F PROPERTIES OF REFRACTION

Syllabus relevance: 4.4 Skills and Aim 6

Sketching and interpreting incident, reflected and transmitted waves at boundaries between media

Determining refractive index experimentally

Students use a graphical method, the critical angle, and real and apparent depth to find the refractive index of a perspex slab. The investigation needs to be issued to the students in advance so that they can research the equations necessary to complete the task. The equations are easily found in textbooks.

In Part A, the students collect a series of angles of incidence and the corresponding angles of refraction. By plotting a graph of $\sin i$ versus $\sin r$, the slope of the straight line gives the refractive index:

$$\sin i = n \sin r$$

In Part B, the refractive index is found from:

$$\sin C = 1 / n$$

In Part C, the refractive index is found from:

$$n = \text{real depth} / \text{apparent depth}$$

Investigation 4G STANDING WAVES ON A STRING

Syllabus relevance: 4.5 Skills and Aim 6

Observing, sketching and interpreting standing wave patterns in strings and pipes

Describing the nature and formation of standing waves in terms of superposition

The equation $v = \sqrt{\frac{T}{\mu}}$ is no longer a syllabus requirement.

However, the students can still carry out an investigation to determine how the frequency of the standing wave in a string depends on the tension of the string. Since the wavelength of the standing wave is kept fixed, this is the same as determining the dependence of speed on tension.

The investigation can be set as an open-ended question enabling all five moderated criteria to be assessed.

Investigation 5A ELECTRIC FIELD PATTERNS

Syllabus relevance: 5.1 Skills and Aim 6

Identifying two forms of charge and the direction of the forces between them

To make the electric field apparatus you will need a flat piece of wood measuring about $20\text{ cm} \times 10\text{ cm} \times 0.5\text{ cm}$. On this, two terminal pins are mounted, as shown in the diagram in the experiment.

The dish is a typical flat-bottomed glass dish found in all chemistry laboratories. If possible it should not be more than 1 cm in height.

The bare copper wire used in the experiment is about 2 mm in diameter.

Soldering two pieces of copper wire together makes the parallel conductors.

The EHT should give a range of 0 – 5000 V.

If the students wish to observe the field pattern of two like point charges then two supplies will be needed.

Investigation 5B VOLTAGE DIVIDER CIRCUITS

Syllabus relevance: 5.2 Skills and Aim 6

Describing practical uses of potential divider circuits, including the advantages of a potential divider over a series resistor in controlling a simple circuit

This investigation needs little explanation provided that an LDR and a variable resistance box is available.

Investigation 5C FACTORS THAT AFFECT ELECTRICAL RESISTANCE

Syllabus relevance: 5.2 Skills and Aim 6

Investigating one or more of the factors that affect resistance experimentally

This is a formal report with a planning component.

The equipment that they are likely to ask for include all the equipment from the previous Ohm's Law investigation, together with nichrome or copper wire of different lengths and gauges. Your laboratory technician should be requested in advance to prepare sets of:

- 3 pieces of gauge 32 wire of lengths 0.5 m, 0.75 m and 1.0 m
- 2 other 0.5 m lengths of different gauge (say gauges 24 and 28)



They will also need a micrometer screw gauge to measure the diameter of the different thicknesses of wire.

Students have been warned of the danger of using high electric currents. Your vigilance will be necessary once they begin to collect their data.

The resistance of the wires can be obtained by measurement of the current in the wire and the potential difference across it. Graphs of resistance versus length and resistance versus the reciprocal of cross-sectional area can be plotted in order to determine the resistivity of the wire provided.

The published values for copper and nichrome resistivity at $20\text{ }^{\circ}\text{C}$ are $1.68 \cdot 10^{-8}\text{ }\Omega\cdot\text{m}$ and $100 \cdot 10^{-8}\text{ }\Omega\cdot\text{m}$ respectively.

Investigation 5D OHM'S LAW

Syllabus relevance: 5.2 Skills and Aim 6

Identifying ohmic and non-ohmic conductors through a consideration of the V/I characteristic graph

This is a traditional practical that should be familiar to everyone. I suggest the inclusion of a variable resistor as this circuit has been examined on many occasions, and the chief examiner has always had the inclusion of the variable resistor in mark schemes.

Use low-value resistors (0.5 – 10 Ω). Of course these resistance values are for a typical laboratory rheostat. The printed value of the resistor can be covered over with opaque tape so the student doesn't know the printed value.

The students are requested to show their first circuit to the teacher before proceeding with their data collection. This is an opportunity to record an assessment for their manipulative skills. An on-off switch is important as long exposure to increasing electric current has a heating effect on the wire. This can introduce a non-ohmic component to their measurements.

Students should be able to calculate the degree of uncertainty in their measurements, and to produce error bars on their graphs. The value for the resistance can be obtained from the gradient of the pd. versus current graph. The degree of uncertainty of the resistance can be obtained from the maximum range in the possible lines of best fit.

The added graphs of power versus current and potential difference, and the associated question are there to add an extra challenge.

Investigation 5E INTERNAL RESISTANCE OF A DRY CELL

Syllabus relevance: 5.3 Skills and Aim 6

Determining internal resistance experimentally

There will be a negative gradient. The y-intercept will be the value of the emf and the gradient will be the value of the internal resistance.

Investigation 5F FORCE ON A CONDUCTOR

Syllabus relevance: 5.4 Skills

Determining the direction of force on a charge moving in a magnetic field

Determining the direction of force on a current-carrying conductor in a magnetic field

Sketching and interpreting magnetic field patterns

Determining the direction of the magnetic field based on current direction

These written instructions may be given to the students and the experiment submitted as an IA sample since the students must devise their own table of results, analyse their results in an appropriate way and also make their own evaluation of the experiment.

Investigation 6A UNIFORM CIRCULAR MOTION

Syllabus relevance: 5.3 Skills and Aim 6

Qualitatively and quantitatively describing examples of circular motion including cases of vertical and horizontal circular motion

This investigation is a commonly used practical for studying uniform circular motion. Students who do not practise in the beginning generally obtain poor results.

It is best to do this investigation outdoors. The laboratory is too small, and the corridors are too crowded with other students. This practical has the potential to cause injury, and students need to be fully aware of this.

Warning: Safety goggles should be worn at all times.



In the first part, the radius is varied, and a single 50 g mass carrier keeps the tension in the string constant:

$$m_w g = m_b v^2 / r = m (2\pi r / T)^2 / r$$

$$\therefore T^2 = k \cdot r \quad \text{where } k = m_w g / m_b 4\pi^2$$

g can be determined from the slope of the line of best fit.

In the second part, the radius is kept constant and adding slotted masses varies the tension in the string.

$$F_c = m_w g = m_b v^2 / r = m (2\pi r / T)^2 / r$$

$$\therefore m_w = k / T^2 \quad \text{where } k = m_b 4\pi^2 r / g$$

g can be determined from the slope of the line of best fit.

Investigation 7A THE HALF-LIFE OF BEER FOAM

Syllabus relevance: 7.1 Skills and Aim 6

Determining the half-life of a nuclide from a decay curve Investigating half-life experimentally (or by simulation).

Determining the half-life of a nuclide from a decay curve

In this investigation one uses beer foam to simulate the exponential decay of a radioactive substance, non alcoholic beer may be used.

Investigation 7B A Visit To A Cyclotron

Particular Outcomes will vary depending on circumstances.

There is a proton cyclotron in the grounds of Royal Prince Alfred hospital in Sydney. Again, they are accustomed to having students visit their facility and there are many interesting things to see. They dress the students up and they take radiation checks when the students leave the facility. If you are in Sydney, you can take in a 2 day excursion to the cyclotron, RPA hospital and the Lucas Heights nuclear reactor. The author understands that access to similar facilities exists in most countries.

Investigation 7C A Visit To An Atomic Energy Facility

Particular Outcomes will vary depending on circumstances.

The author experienced no difficulty in arranging a visit to the Australian Atomic Energy complex at Lucas Heights in Sydney. They have an educational centre and they let us inside their experimental reactor. It was a great visit for understanding dosimetry measurements. The author understands that access to similar facilities exists in most countries.

Investigation 14A (Option B) MOMENT OF INERTIA

Syllabus relevance: B.1 Skills

Solving problems involving moment of inertia, torque and angular acceleration

This investigation is a very standard practical that can be carried out with basic equipment.

Investigation 14B (Option B) TRANSLATIONAL EQUILIBRIUM

Syllabus relevance: B.1 Skills

Solving problems in which objects are in both rotational and translational equilibrium

Again, this investigation is a very standard practical that can be carried out with basic equipment.

Investigation 14C (Option B) BIOMECHANICS AND THE MUSCULOSKELETAL SYSTEM

Syllabus relevance: B.1 Skills

Calculating torque for single forces and couples.

This investigation uses the board and scale method to find the whole body centre of gravity of a subject. By using their knowledge that the sum of the clockwise torques equals the sum of the anti-clockwise torques, students calculate their centre of gravity. The male and female subjects are compared.

Investigation 15A (Option C) FOCAL LENGTH OF A CONVERGING LENS

Syllabus relevance: C.1 Skills and Aim 6

Identifying the principal axis, focal point and focal length of a simple converging or diverging lens on a scaled diagram

The focal length of a convex lens may be determined by a number of alternative methods. Students are required to compare the accuracy of these methods as part of the assessment of the assessment criteria.

The equipment list consists of:

Convex lens and holder, plane mirror, circular hole with cross-wires or a fine gauze triangle, lamp and holder, screen, metre rule.

Students should plot a graph of $1/\mu$ against $1/v$ in order to determine the focal length.

Investigation 15B (Option C)

THE REFRACTING TELESCOPE

Syllabus relevance: C.1 Skills and Aim 6

Investigating the performance of a simple optical astronomical refracting telescope experimentally

The aim of this investigation is to construct a refracting telescope and measure and compare its magnification.

It can be shown that the angular magnification, M , for a set of appropriate lenses is given by:

$$M = \frac{u}{v}$$

where u is the focal length of the objective and v is the focal length of the eyepiece.

Students firstly determine the focal length of each lens by viewing a distant object and focusing its image on a screen. They then determine the angular magnification of the telescope using the equation given. They then construct their telescope using the two lenses, and record the distance to the image from each lens. Finally, they measure the diameter of an image and an object, and find a ratio between the two quantities that is numerically equal to the angular magnification.

Investigation 16A (Option D)

THE HERTZPRUNG-RUSSELL DIAGRAM

(using a spreadsheet)

Syllabus relevance: D.2 Skills and Aim 6

Sketching and interpreting HR diagrams

Identifying the main regions of the HR diagram and describing the main properties of stars in these regions

The data is given in the investigation. Students will need to have spreadsheet computer skills. It is usually the case that most have done it but will need some reminding of the instructions. It is hoped that enough information is given to get through the sequence of events.

Investigation 16B (Option D)

STELLAR EVOLUTION

Syllabus relevance: D.2 Skills and Aim 6

Sketching and interpreting evolutionary paths of stars on an HR diagram

Describing the evolution of stars off the main sequence

Describing the role of mass in stellar evolution

This is really an extension of the previous (16A) spreadsheet and a new plot of the HR diagram to trace the evolution of the Sun. Given a data table of solar properties, the Sun's evolution through the T. Tauri (pre-main sequence), the main sequence and red giant phases can be graphed using the spreadsheet. The radius of the Sun is calculated at the point of it being a red giant.

Investigation 9A – A simple pendulum

Syllabus relevance: 9.1 Skills and Aim 6

Describing the interchange of kinetic and potential energy during simple harmonic motion.

Solving problems involving energy transfer during simple harmonic motion, both graphically and algebraically.

This is a simple investigation that can be used to develop graphing skills to determine the acceleration due to gravity.

Investigation 9B – White Light Interference And Diffraction

Syllabus relevance: 9.2 Skills and Aim 6

Qualitatively describing single-slit diffraction patterns produced from white light and from a range of monochromatic light frequencies

This is a qualitative investigation where the eye is used as a screen to view white light through slits and diffraction gratings.

The equipment list is given here for fast recognition of the method being used:

Glass slides, black art paint, razor blades, cardboard, rubber bands, needle, glue, thin gauge copper wire, single-slit slide, double-slit slide, diffraction gratings up to approx. 106 lines per metre, ray box producing a single beam of light, green filter, metre rule, transparent ruler, magnifying glass or binocular microscope, power supply and connecting wires and glue.

The students firstly make their own single and double slits by the method given. The prepared slits are then put aside for the moment. If this is felt to be too time-consuming, then prepared single and double slits should be issued instead. They then observe the patterns of the light intensity for different diffraction gratings. Some explanation of what is meant by light intensity diagrams may be necessary. For a diffraction grating:

$$n\lambda = d \sin\theta = d x / L$$

$$x = n\lambda L / d$$

As the distance to the screen increases the value of 'x' increases. As d becomes bigger 'x' becomes smaller, and the resolution becomes poorer. Different light intensity does not affect the value of 'x' but it does affect resolution. Light intensity is proportional to L^{-2} . Using a green filter in place of a red filter should decrease 'x'.


The students repeat the procedure using a double-slit in place of the diffraction grating, and record their observations. It may be difficult to observe all the properties with a single slit, but students should notice a definite shift in constructive and destructive interference.

Investigation 9C – Emission Spectra

Syllabus relevance: 9.3 Skills and Aim 6

Investigating Young's double-slit experimentally

It is unlikely that a school will have sufficient spectrometers to carry out a class experiment! This experiment is therefore likely to be part of a circus of experiments. The diffraction should have several hundred lines per mm in order to produce reasonable diffraction angles. If your school does not possess a spectrometer then a simpler but less accurate experiment can be carried out by looking directly through the grating at the discharge tube and measuring the angle directly. This can be done across the shorter dimension of a laboratory table (bench). The diagram below shows the plan view of the arrangement.

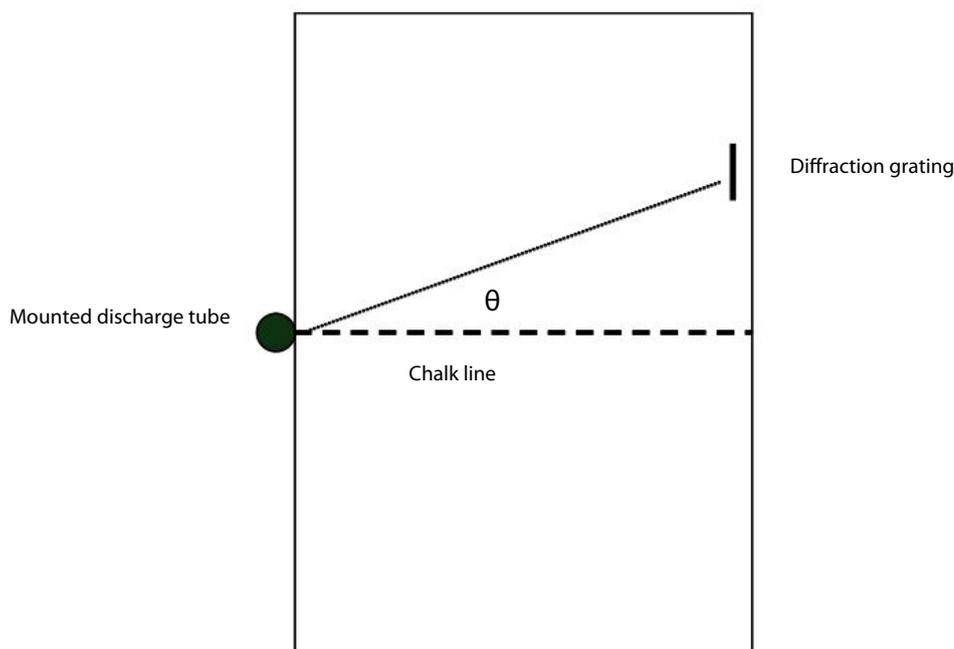

Investigation 9D – Double Slit Interference and Diffraction Gratings

Syllabus relevance: 9.3 Skills and Aim 6

Sketching and interpreting intensity graphs of double-slit interference patterns

This investigation is quantitative in nature. Students will use a helium-neon laser dot that passes through a diffraction grating and a double slit, and is then viewed on a screen. The aim is to calculate the wavelength of the helium-neon laser in each case, and compare the values obtained with that supplied with the laser. Maximum supervision is required at all times.

All safety precautions need to be taken. Any large reflecting object should be removed from the laboratory. It is good to borrow an adjustable platform from the chemistry department on which the laser can be mounted.



If a travelling microscope is not available then some magnification method can be employed. Travelling microscopes are expensive, but they should be included in every equipment inventory especially if the Optics option is being considered.

An interesting introduction to this investigation is to place two similar diffraction gratings at right angles to each other, and a small distance apart, and view the regular lattice structure of the dots.

Investigation 9E – Spacing between CD and DVD tracks

Syllabus relevance: 9.3 Skills

Sketching and interpreting intensity graphs of double-slit interference patterns

This investigation is quantitative in nature. Students will use a laser pointer dot that passes through the A4 sheets, and is then viewed on a screen. The aim is to calculate the spacing between CD and DVD tracks in each case, and compare the values obtained with that supplied. Maximum supervision is required at all times.



All safety precautions need to be taken. Any large reflecting object should be removed from the laboratory.

Investigation 9F – The Behaviour Of Microwaves

Syllabus relevance: 9.3 Skills and Aim 6

Describing conditions necessary for constructive and destructive interference from thin films, including phase change at interface and effect of refractive index


General

A microwave kit with all the appropriate accessories can be obtained from most major educational suppliers.

Since it is likely that schools will have only one kit then clearly this series of experiments cannot be set as a class experiment. It would be better done as part of a circus of experiments involving waves.

Experiment A – Reflection

The fact that the apparatus (apart from a ruler and protractor) will have been given to the student means essentially that the planning aspects will apply to designing a suitable method for measuring a range of incident and reflected angles. The aluminum plate that acts as the reflector should be mounted vertically on a plain sheet of paper. A plan view is shown below.

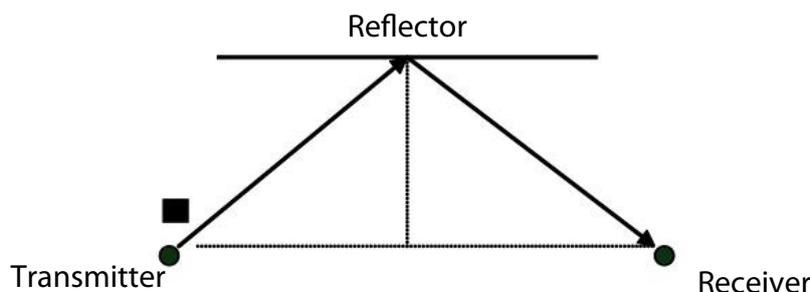

The normal to the reflector can be found by making sure that the transmitter and receiver are on the same line and then by locating the mid-point between them.

Students should comment on the fact that the transmitter and receiver are not flush with the paper and suggest whether or not this needs to be taken into account.

Students should construct their own data table and to gain the maximum marks for the data collection criterion they should make sure that they include the uncertainty (ies) in their data.

Their data analysis should show that the angle of reflection is equal to the angle of incidence within the limits of their suggested experimental error (or not, as the case may be). This should be mentioned in their evaluation report.

Experiment B – Refraction

The experiment is carried out in very much the same way that an experiment using a glass block and light would be. The main problem is in locating the point on the block at which the microwaves are incident and the point at which they leave the block. To achieve this, the students should recognise that this can be done by using the diode receiver as a 'pin' as one would with light from a raybox.

Another approach to this experiment would be to ask them to devise a method for measuring the refractive index of paraffin wax using microwaves. This is quite nice since it underlines the fact that refractive index depends on wavelength.

Students should construct their own data table with appropriate uncertainties.

Their data analysis should show that $\frac{\sin i}{\sin r} = \text{constant}$ within the limits of their suggested experimental error (or not, as the case may be).

This should be mentioned in their evaluation report.

Experiment C – Interference

In their evaluation students should recognise that one way to improve the experiment would be to find another set of values of 'd' and 'D' for a different value of 's'. They could also keep 'D' constant and vary s.

Experiment D – Standing waves

In the planning, students should recognise that they should make use of the standing wave formula $\lambda = \frac{2L}{n}$. The experiment that they devise should be a variation of the experiment in which standing waves of different wavelengths are set up in a stretched string. In the microwave case, λ is constant. The standing wave is set up by reflection. The students should position the diode midway between the reflector and the transmitter. They should then move the reflector either away or towards the transmitter until no current is recorded by the micro-ammeter. The separation between the diode and transmitter is now such that an integral number of half-wavelengths are 'fitted in'. They should then move the diode until the next nodal point is located. The wavelength can then be determined. The experiment can be repeated with different separations that produce a standing wave patterns and the result can be checked by finding other positions of zero current or positions of maximum current.

NB. In all these experiment with microwaves none of the readings are particularly accurate so it is very important that the students check all readings. If they have not been checked, then this should be discussed in the evaluation as an improvement that can be made to the procedure.

Investigation 10A – Electrons on Sticky Tape

Syllabus relevance: 10.1 Skills

Find the mass of the tape. The component of the coulombic force of repulsion will be $mg \sin\theta$ as measured from the centre of mass of the tape. So $mg \sin\theta = kq^2 / r^2$. The charge is shared by each piece of tape. So the charge on each piece of tape can be calculated.

Investigation 10B – Determination of 'G'

Syllabus relevance: 10.2 Skills

Solving problems involving the speed required for an object to go into orbit around a planet and for an object to escape the gravitational field of a planet

This data based question provides a set of data for determination of the Universal gravitational constant.

Firstly, the period of oscillation of the torsion balance is determined. The graph obtained is a sinusoidal wave of several complete periods (a rough shaped one). From the obtained period of oscillation, the torsion constant of the wire μ can be calculated.

Secondly, when the M / d^2 versus Δ graph for the three large masses is drawn, the points should lie on a straight line with a slope of $2\pi^2b / DT^2G$. Thus, G can be determined.

Investigation 11A – Lenz’s Law

Syllabus relevance: 11.1 Skills

Describing the production of an induced emf by a changing magnetic flux and within a uniform magnetic field.

Explaining Lenz’s law through the conservation of energy

The difficulty for the students in this planning exercise is choosing the appropriate apparatus. If they get this right then perform, they have designed a method for the control of variables and for collecting raw data.

The coil X should be a square solenoid and coil Y should consist of a several copper turns wrapped around the solenoid. A 6V battery will suffice as the power supply. They will need a rheostat and switch. Since the induced current is small, they will also need an “edspot” to detect the current in coil Y. If they do not mention an edspot in their design then they should at least mention that a sensitive ammeter with a centre zero scale is required.

The control and collection of data involves the switching the current on in X, switching the current off in X, increasing and decreasing the current in X. For each of these procedures the direction of the current in Y must be recorded.

Investigation 11B – Charging and Discharging a Capacitor

Syllabus relevance: 11.3 Skills and Aim 6

Investigating combinations of capacitors in series or parallel circuits

Determining the energy stored in a charged capacitor

Describing the nature of the exponential discharge of a capacitor

IEC have a very good electronics and photonics kit (catalogue #1765-011) that can be purchased from <www.haines.com.au> A complete set of experiments comes with the kit. When the voltage across the capacitor is equal to the smooth 9volt power supply, the capacitor will stop charging. The graph obtained from the discharging process will show exponential decay. It can be shown by finding the gradients at 50%, 25% and 12.5% for the fall in voltage per second, the values obtained are constant.

Investigation 12A – The Photoelectric Effect

Syllabus relevance: 11.3 Skills and Aim 6

Discussing the photoelectric effect experiment and explaining which features of the experiment cannot be explained by the classical wave theory of light

A red, green and yellow LED that emit when the voltage across them is about 1.5 V are suitable for this experiment. However, the “strike” potential is not critical. If the light frequency is not given by the manufacturer then you can ‘cheat’ by working out the frequency by doing the experiment and using a value for Planck’s constant bearing in mind that the experiment gives a value of h that is about 20% of the accepted value!

To make an appropriate shield, mount the LED on a cylindrical cork and then wrap matt black paper around the cork, overlapping the end of the cork on which the LED is mounted.

A good apparatus for this investigation can be purchased from <www.haines.com.au>

Investigation 12B – Half-Life, Energy and Range of an α Particle

Syllabus relevance: 12.2 Skill

Solving problems involving the radioactive decay law for arbitrary time intervals

Students can obtain $\log T$ and $\log R$ values, and plot a graph to find m and c . They can then find $E^{3/2}$ values to plot R against $E^{3/2}$ in order to find ω .

Investigation 14D – Pressure and the Properties of a Liquid

Syllabus relevance: 14.1 Skills

Solving problems involving pressure, density and Pascal's principle


In **Part 1**, students should observe that pressure increases with depth and that pressure is transmitted throughout the liquid. Some may explain using $P = \rho gh$. Water can be syphoned from a higher to a lower point. Students should realise that pressure difference between the hose end that is in the water and the end that is sucked.

In **Part 2**, a 2m length of U-tube will help with the connections. No water should squirt out the end of the manometer if the students use a small volume of water to support the gas. The gas pressure will equal the atmospheric pressure on the day minus ρgh .

In **Part 3**, the planning component is important. Use large graduated measuring cylinders. Two good liquids are water and glycerol (glycerine). It is unlikely that the students will observe laminar flow but it would be a good extended essay. However, some design to observe terminal speed of a ball bearing dropped in the liquids would be expected.

For **Part 4**, a design that allows for the steady flow of water (a constant head device) would be a must. Don't expect good results for the coefficient of viscosity as the radius measurement of the capillary tube is difficult. The radius has a power of four r^4 in the equation.

The apparatus could look like this:

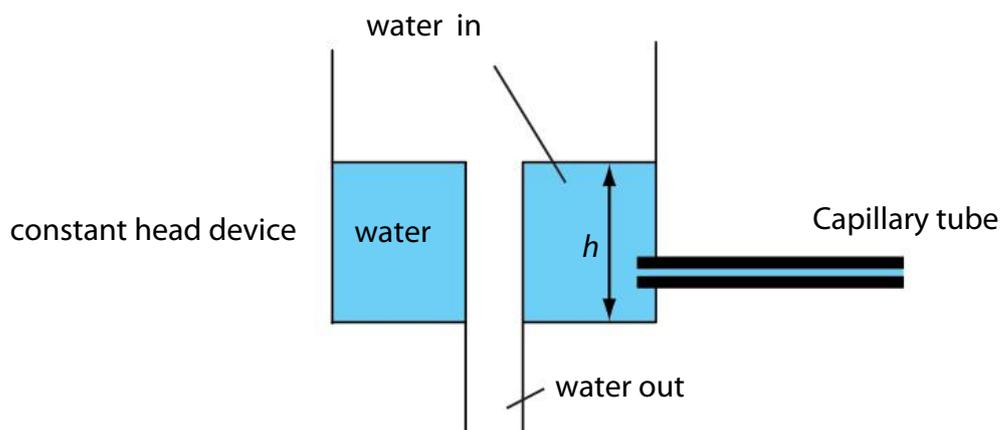

Investigation 15C – A Visit To A Local Hospital

Particular Outcomes will vary depending on circumstances.

The author has visited hospitals in Sydney, Bandar Seri Begawan and Chiang Mai for this excursion and has found the hospitals to be very accommodating. They were willing to demonstrate the operation of the machines. On every occasion, one of the students was given an ultrasound. The images of tumours that are obtained by CAT and MRI are amazing. Just contact the Public Relations department to obtain an appointment. The author understands that access to similar facilities exists in most countries.

